

DIN Rail Mount 17.5 mm MWS Part number 84873020



Product replaced by the new MWS 84 873 029

t nu		

Туре	Function	Nominal voltage (V)	Output
84873020 MWS	Phase sequence and failure	$3 \times 208 \rightarrow 3 \times 480 \text{ V AC}$	1 single pole changeover relay

Specifications

Supply

Сирргу	
Supply voltage Un	3 x 208 →3 x 480 V AC *
Operating range	183 →528 V AC
Inputs and measuring circuit	
Measurement ranges	183 →528 V AC
General characteristics	
Weight	80 g

Comments

Accessories


Description	Code
Removable sealable cover for 17.5 mm casing	84800000

Principles



Overview

3-phase network control relays monitor the sequence of phases L1, L2, L3 and failure of one or more phases. LEDs are used for signalling.

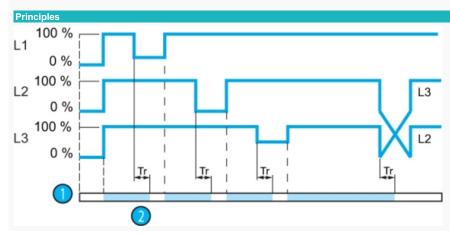

27/04/2015 www.crouzet.com

Operating principle

MWS-MWS2 : Phase controller

The relay monitors its own supply voltage.

The relay controls:

- correct sequencing of the three phases,
- total failure of one of the three phases.

When the phase sequence and voltages are correct (> 183 VAC), the output relay (s) are closed and the yellow LED is lit.

In the event of a phase sequence or total phase failure fault (detected when one of the voltages drops below 100 V), the relay opens instantly and its LED is extinguished.


When the unit is powered up with a measured fault, the relay stays open.

Nº	Legend
	MWS : Relay R MWS2 : Relays R1/R2
2	Response time on appearance of a fault (Tr)

Dimensions (mm)

АА РНОТО

Dimensions (mm)

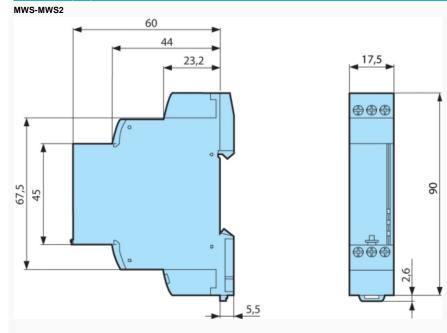


mm

Connections

MWS

27/04/2015 www.crouzet.com

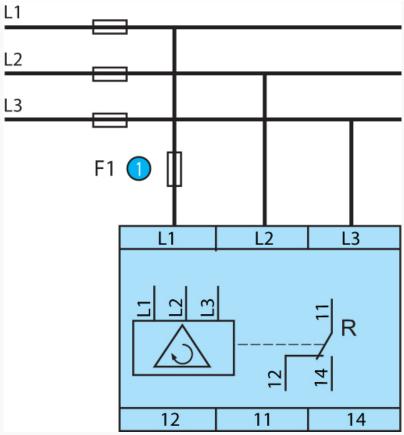

Nº	Legend
0	100 mA fast-blow fuse

Product adaptations



Customisable colours and labels