


5 WAY STEREO SPEAKER SELECTOR

This professional quality selector box is designed to help distribute quality sound throughout your complete Home Theater System. There is built-in protection for your amplifier. The switch can control up to five (5) stereo pairs of speakers in any combination and maintains a constant impedance load to the amplifier.

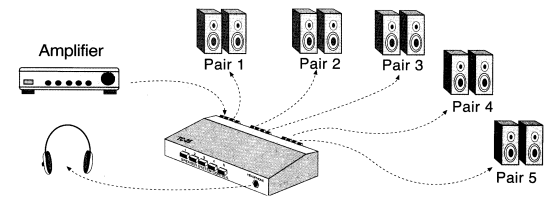

No. 44-505



Specifications:

- Power: 50 Watts RMS per Channel
- Max Power: 75 Watts per Channel
- Load Protection: Non Inductive 50 Watts
- Outputs: 5 Stereo Speaker Pairs
+ 1 1/4" Headphone Jack
- Size: 8" W x 4" D x 2" H
- Case: Black Metal

REMOTE CONTROL AUDIO & VIDEO SELECTOR 3 INPUTS/1 OUTPUT

LKG 44-531 allows you to connect up to 3 inputs (Toslink-Optical, S-Video and RCA audio/video) to one television or Home Theatre System. It can be used with DVD players, video games, satellite receivers, VCR's, Laser Disc Players, VCD's, Camcorders, CD's, Multimedia Speakers, MDS and other digital A/V equipment. Small and easy to operate, the 3 button remote control allows you to select one of three inputs from anywhere in your room.

Specifications:

- Inputs: Audio (3) Sets of RCA Jacks (L&R)
(3) Toslink Optical Jacks
- Video (3) S-VHS Jacks
(3) Composite Video Jacks (RCA)
- Output: Audio (1) Set of RCA Jacks (L&R)
(1) Toslink Optical Jack
- Video (1) S-VHS Jack
(1) Composite Video Jack (RCA)
- Dimensions: Selector 9.37"W x 4.25"D x 2"H
Remote Control 1.75"W x 3.30"L x .25"H
- Weight: 2lbs. 10oz.
- Power Supply: 9VDC @ 500mA



No. 44-531



MP3 FM-BROADCASTER FOR HOME & AUTO

Simply plug the MW700 into the earphone jack on your IPOD or any MP3 player, CD player (etc.) and broadcast pure, beautiful music to your Home stereo! Or, take your MP3 music collection with you and play through your Car stereo FM receiver or poolside boom box. It works like a miniature FM broadcasting station.

Listen to your:
IPOD
MP3 PLAYER
CD & MD PLAYERS
PDA's LAPTOPS etc.



Listen ON your:
HOME STEREO SYSTEM
CAR FM RADIO
BOOM BOX
POOL-SIDE FM RECEIVER

FEATURES

There are four user-selectable frequencies to choose from; find an unused channel on your FM receiver. Simple connection: plugs into your player using a 3.5mm stereo plug (just like the one on headphones) Requires two AA batteries

No. MW700