

TÜV Rheinland

**FUJI**  
ELECTRIC



# MANUAL MOTOR STARTERS MAGNETIC CONTACTORS



**DUO** SERIES

# Advanced Motor Protection and Control – Fuji DUO series

Fuji's new motor control system for the international market.

The DUO series adds a new family of compact, high-performance combination starters to manual motor starters BM3 series, magnetic contactors SC-M and SC-E series and thermal overload relays TK-E series to form a complete line-up of motor control products.

Responding to today's market needs, Fuji DUO series was designed to provide various distinctive features.

## ULTIMATE COST SAVING SOLUTION

- The number of components like Circuit Breakers can be reduced. (See page 4 to 7 for detail.)
- Combination starters combined with manual motor starters and contactors, provides 52% reduction for mounting space and 90% reduction for wiring work to make a control panel.

## RESPONSE TO THE INTERNATIONAL MARKET

- Short-circuit protective coordination between protective devices and the equipment to be protected.
- Conformance to UL including Type E, Type F, CSA, IEC and other international standards.

## SAFETY AND ECOLOGICAL CONSIDERATION

- Application of international standards in safety features such as terminals with finger protection.
- Use of recycled materials to help conserve the environment and save resources.

## FUJI meets emerging needs with a new form of motor protection.

### DUO SERIES

#### Manual motor starters (MMS)

##### BM3 series




Manual Motor Starters that provide optimal protection by integrating the functions of a molded case circuit breaker and thermal overload relay into a highly compact unit.

Rated current: 0.16 to 32A, 10 to 63A  
Short circuit current rating : 22, 50kA 480VAC  
Width: 45mm, 55mm

#### Contactors and thermal overload relays

##### SC-M series

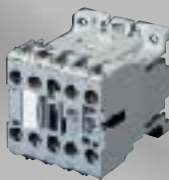

Compact magnetic contactors and small capacity motor control for 3 to 5HP, 480VAC.

Rated capacity: AC-3 3 to 5HP, 480VAC  
Width: 45mm

##### SC-E series



##### TK-E series



Magnetic contactors and thermal overload relays featuring terminals with finger protection for 5 to 100HP.

Rated capacity: AC-3 5 to 100HP  
Width: 43,54,67mm (5 to 50HP)  
88,100,115mm (60 to 100HP)

#### Combination starters

Provide the ability to configure combination starters for compact, reliable motor protection by combining a manual motor starter and a magnetic contactor.




# Manual motor starters BM3 series

Conforming to international standards and combining compactness with high breaking performance, this versatile series features leading-edge motor protection.

Molded case circuit breaker and thermal overload relay functions integrated into a highly compact unit.

<p><b>Circuit breaker functions</b></p> <ul style="list-style-type: none"> <li>• Short-circuit protection</li> <li>• Overcurrent protection</li> <li>• Line protection</li> </ul>	+	<p><b>Thermal overload relay functions</b></p> <ul style="list-style-type: none"> <li>• Overload protection</li> <li>• Phase-loss protection</li> <li>• Rated current adjustment</li> <li>• Ambient temperature compensation</li> </ul>
---	---	---

	<b>Compactness</b>	Mounting space: MCCB + Thermal overload relay: 100% MMS: <b>43%</b> (57% reduction)
	<b>Reduction in wiring work</b>	MCCB + Contactor + Thermal overload relay: 100% MMS + Contactor: <b>50%</b> (50% reduction)
	<b>Standards</b>	• IEC 60947-1, 60947-2, 60947-4-1, UL 508, CSA C22.2 No.14
	<b>Approved</b>	• cUL (File No. E163944, E211710), TÜV (R205062B)
	<b>Ecological design</b>	• Recyclable thermoplastic resin used in plastic parts • Indication of materials used • Cadmium-free contacts

# Magnetic contactors SC-M and SC-E series

A full line-up consisting of the mini-contactor SC-M series for 3 to 5HP, 480VAC use and the SC-E series for 5 to 100HP 480VAC use.


- Finger protection standard
- Lug terminal

<p>SC-M series</p>  <p>45mm</p> <p>SC-M01, M02</p>	<p>SC-E series</p>  <p>43mm</p> <p>SC-E02 to E05</p>	 <p>54mm</p> <p>SC-E1 to E2S</p>	 <p>67mm</p> <p>SC-E3, E4</p>
---	---	--	--


# Combination of manual motor starters and magnetic contactors

A line-up that aims to set a new world standard for compactness, high performance, and utility in combination starters.

Space-saving, reliable motor protection achieved by combining a manual motor starter and magnetic contactor.

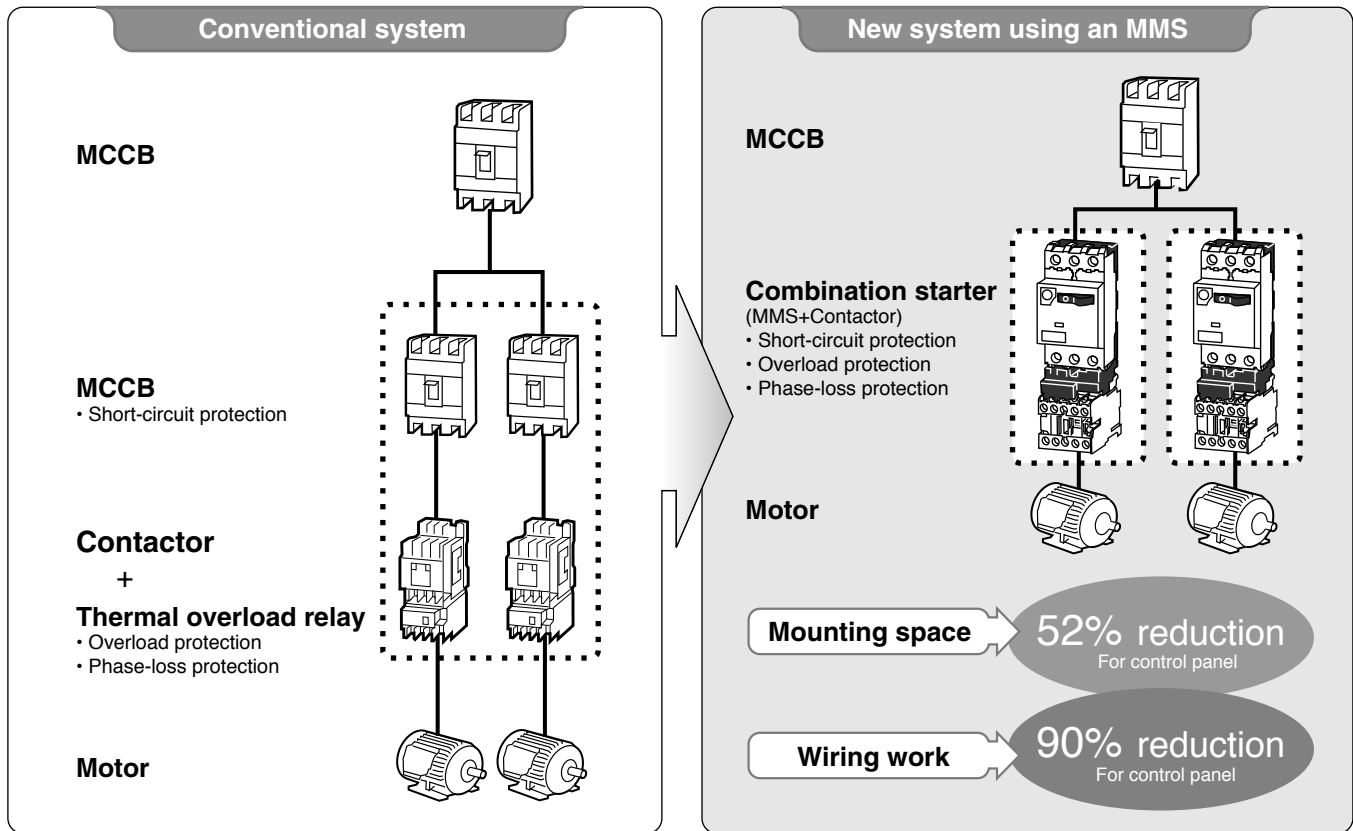

Combination starters can be easily configured with a manual motor starter, magnetic contactor and other parts.

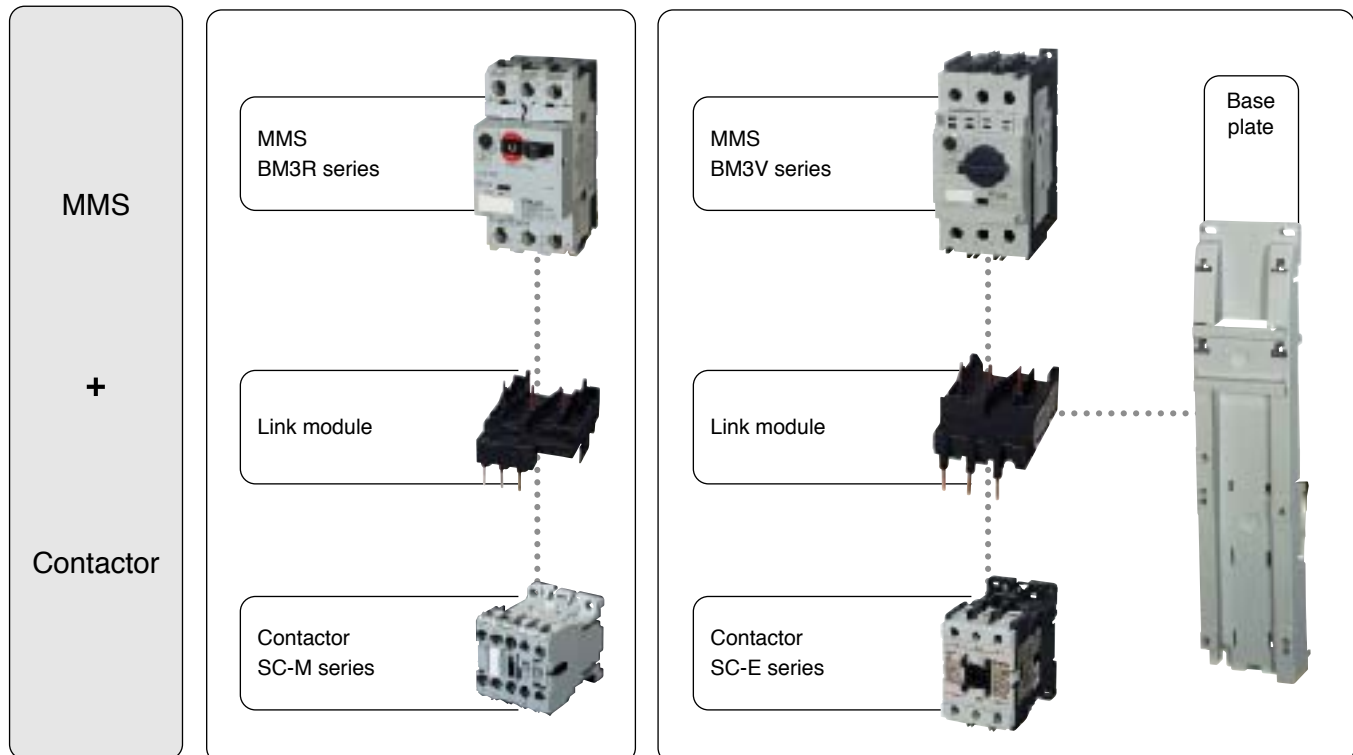

# Fuji proposes ultimate cost saving solution with DUO series

Fuji Manual Motor Starter (MMS) intends to apply for manual motor starting application. As UL listed manual motor controller per UL508, they provide overload protection but are required to be installed with short circuit protection devices (Fuses or Circuit Breakers) on the upstream. However, according to National Electrical Code (NEC), you can save the cost of short circuit protection devices and can make a smaller panel using DUO series. The following are case studies for the cost saving use of Fuji DUO series.

## Case study 1 : Group Motor Installation


Per NEC430-52 and -53, the combination with a specific rated Fuse or Circuit Breaker allows several motors in a circuit composition.

Fuji MMS are cUL listed per group installation regulations of NEC.

Two or more motors can be connected to one branch circuit when the MMS is used with a specific current rated branch circuit protection device (see remarks below).

The advantages of Group Installation are as follows.

- **The number of components like Circuit Breakers can be reduced**
- **The wire size can be reduced by 1/3 - 1/10 under certain conditions**
- **The area inside the control panel can be minimized**

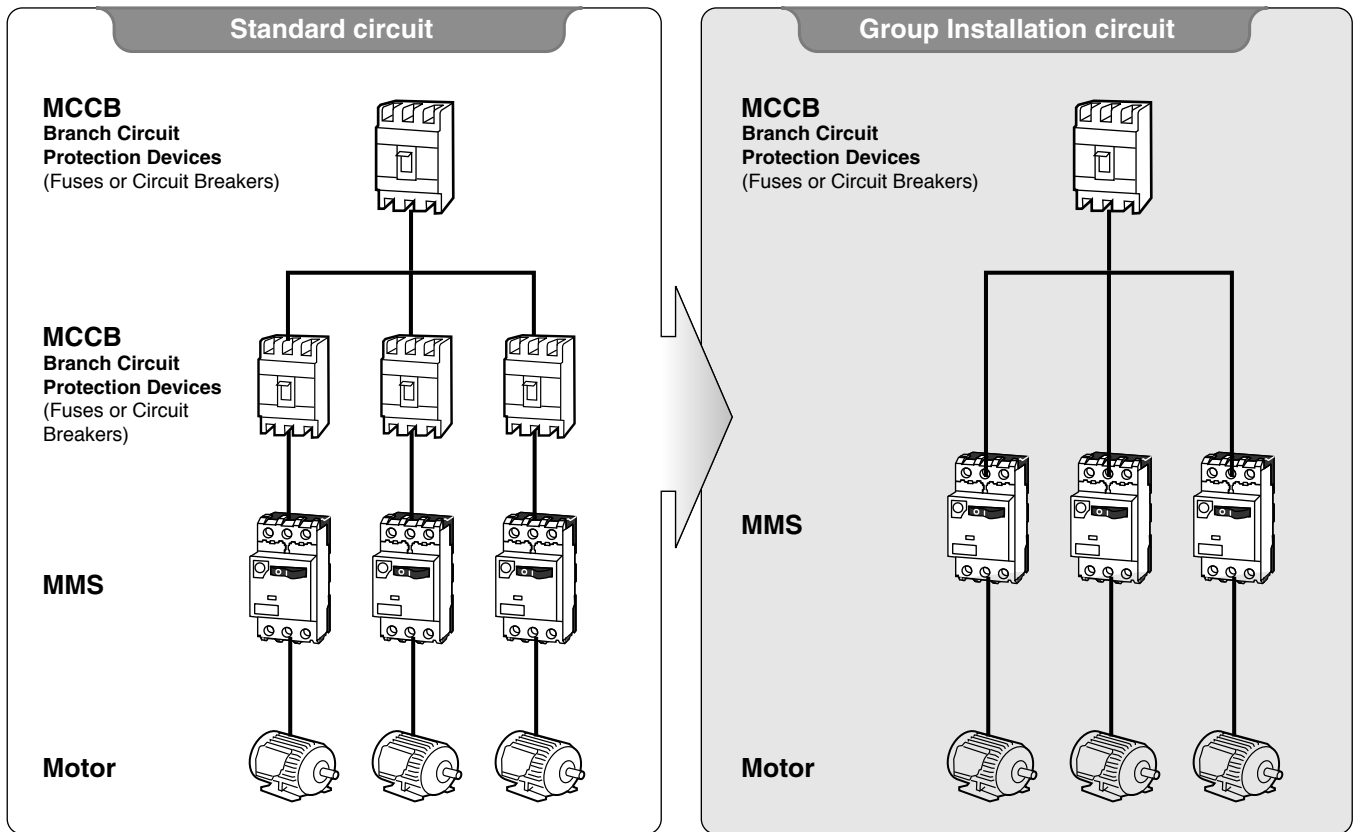

Remarks :

Per NEC regulations, to connect several motors on one branch circuit protection device, note the following conditions (A) or (B) or (C) and condition (D) listed NEC article 430.53 must be complied.

- (A) : Not over 1 horsepower
- (B) : If smallest rated motor protected
- (C) : Other group installation
- (D) : Single motor taps.

For complete details, please refer to NEC book.

## Case study 2 : Self-Protected Combination Motor Controller / TYPE E and TYPE F


Fuji MMS are cUL listed as a Self-Protected Combination Controller such as Type E and Type F.  
 To apply MMS as Self-Protected Combination Controller, MMS must be attached to short circuit alarm contact block (**BZ0TKUAB**).  
 32A frame type, BM3R series must also be attached to the line side terminal cover (**BZ0TCRE**) because the Self-Protected Combination Controller has the clearance and creepage distance requirements as UL489 regulation.  
 (63A frame type, BM3V series complies with their regulation without terminal cover.)

- (1) Combination motor controller, **Type E**, when only MMS is used.  
 (Manual Self-Protected Combination Motor Controller according to UL508)
- (2) Combination motor controller, **Type F**, when MMS is used with Fuji SC-E, SC-M contactor.  
 (Manual Self-Protected Combination Motor Controller + Magnetic contactor according to UL508)

The advantage of a Self-Protected Combination Motor Controller is that it can replace a **UL489 Circuit Breaker**.  
**This means that in a motor branch circuit, the UL489 Circuit Breaker upstream can be eliminated.**  
 MMS has a trip function like a Circuit Breaker for the purpose of protection against short-circuit.  
 Therefore, the number of components can be reduced and will result in saving more space than the ordinary Group Installation.



\* The self-protected combination motor controller can be used as branch circuit protection in *Motor Circuit only*.  
 They cannot be applied to any other loads such as resistance load.

### Example of Type E application

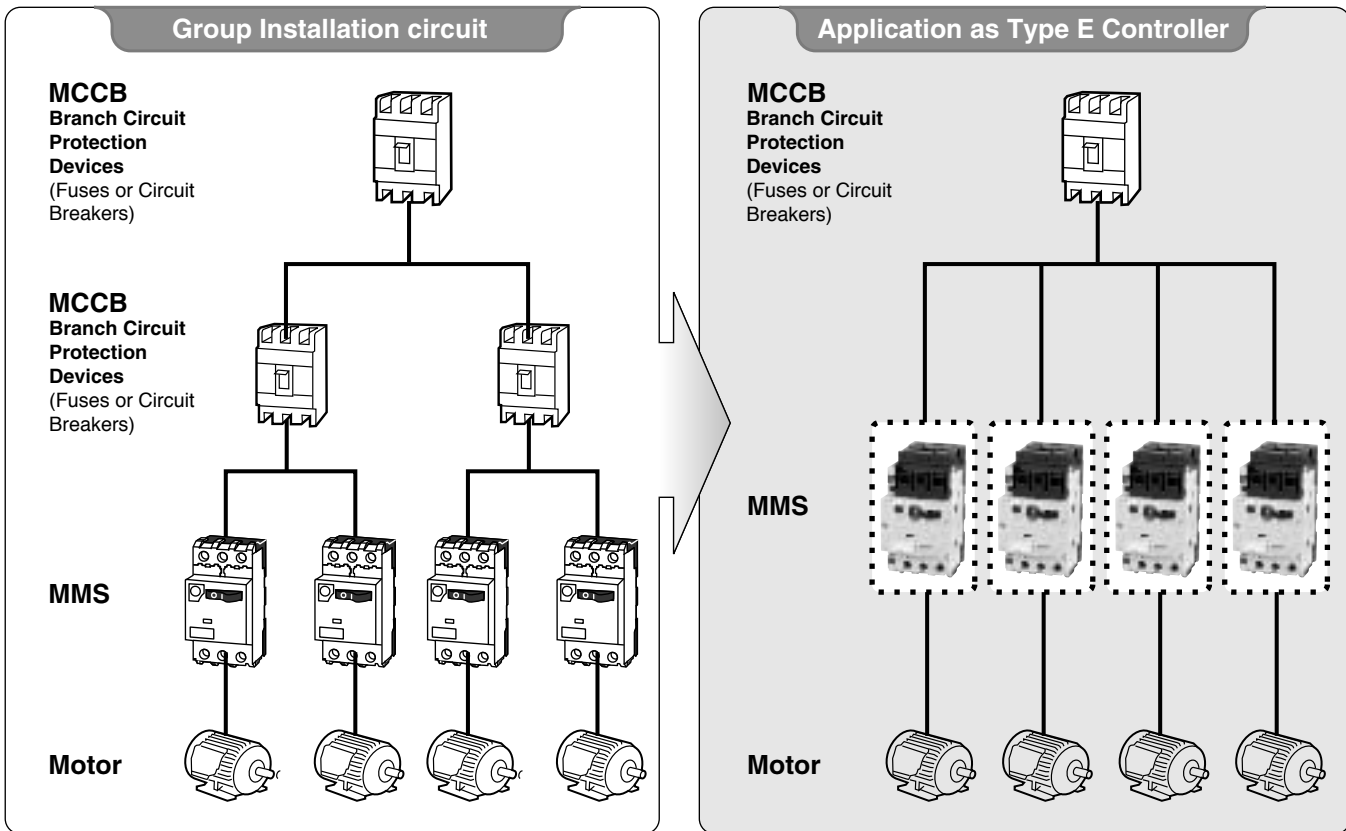

Requirements for Type E construction  
 - Terminal cover (BZ0TCRE) except for BM3V series.  
 - Short-circuit alarm contact block (BZ0TKUAB) for all MMS.

**Example of Type F application**

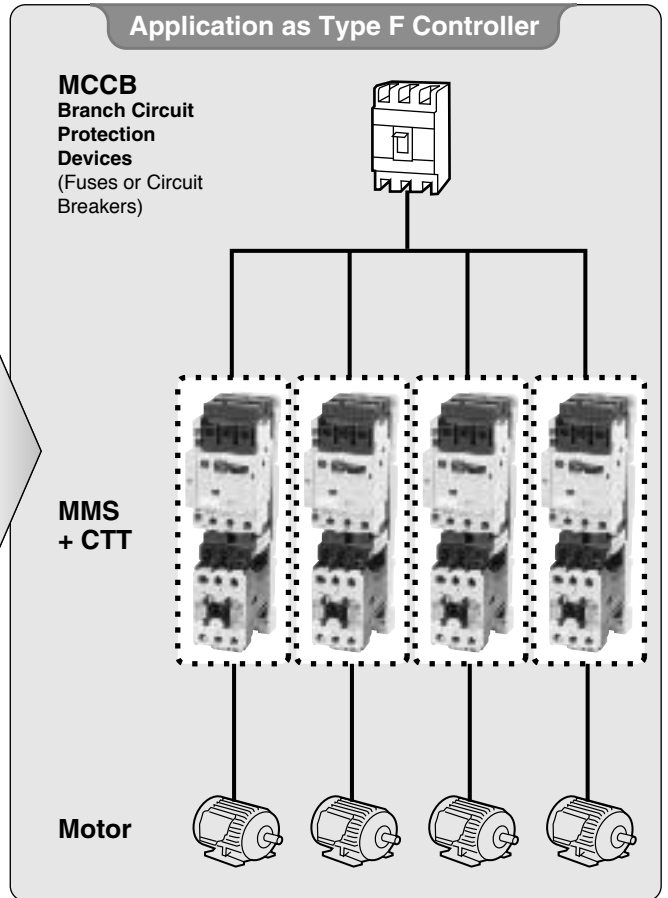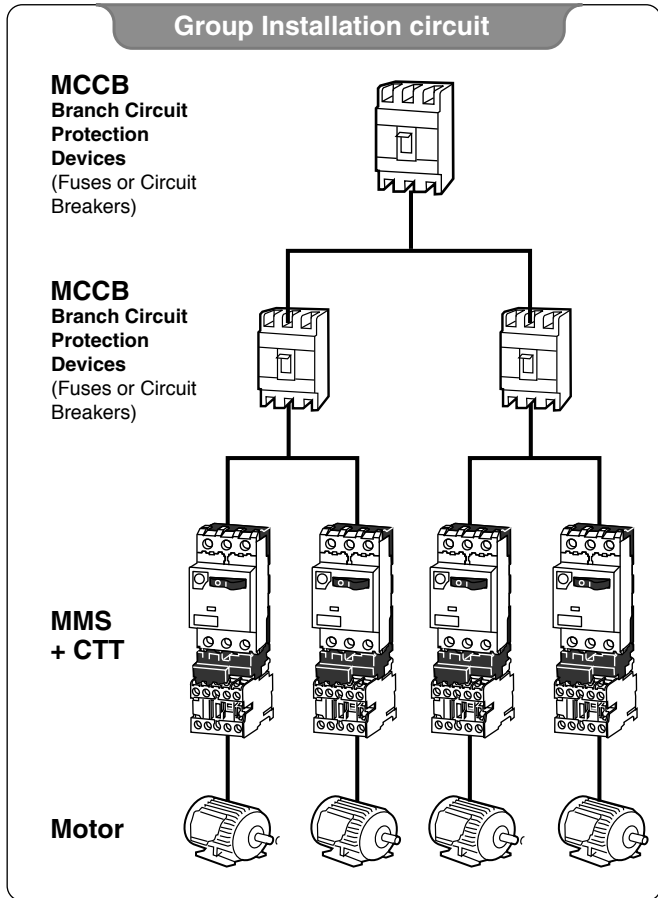

**Requirements for Type F construction**

- Must be used with contactor for motor control function.
- Terminal cover (BZ0TCRE) except for BM3V series.
- Short-circuit alarm contact block (BZ0TKUAB) for all MMS.


### Case study 3 : Motor Disconnecting Means

Per NEC 430.102, a disconnecting means must be applied to each controller.

Fuji MMS are also cUL listed as "**Suitable as Motor disconnect**" and can be applied as a Motor disconnect.

The advantage of using MMS for disconnect means :

- An extra component will not be needed because the MMS has a dual function, which will lead to smaller space requirement and less components.

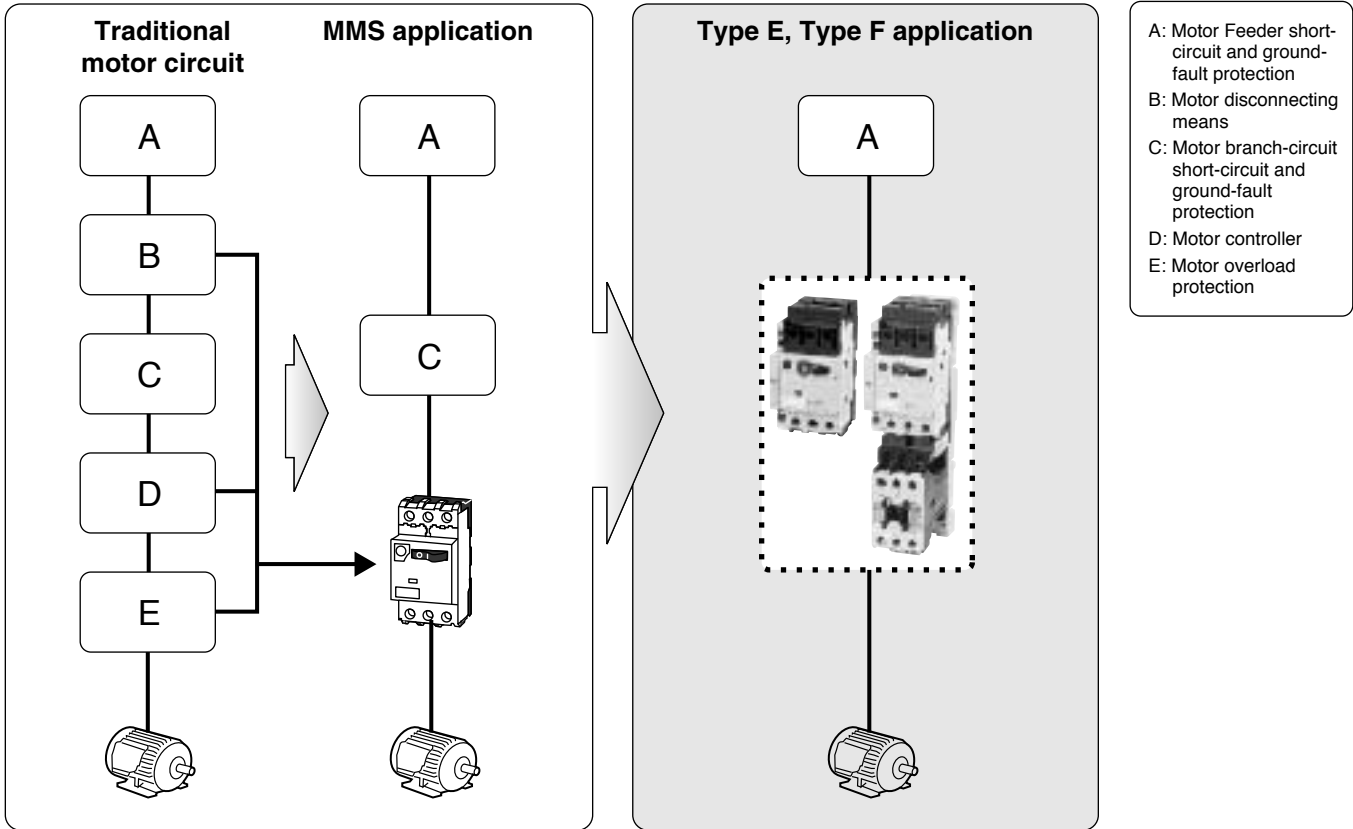




# CONTENTS

	Page
<b>Manual Motor Starters</b>	
Quick reference guide .....	9
Type E ratings .....	13
Ordering information and Characteristics .....	14
Optional accessories .....	15
Dimensions .....	21
Instructions .....	25
Busbar systems .....	26
Enclosures .....	29
<b>Contactors SC-M and SC-E series</b>	
General information .....	31
Quick reference guide .....	32
Ordering information and Characteristics .....	35
Optional accessories .....	37
Dimensions .....	40
Instructions .....	48
<b>Thermal overload relays TK-E series</b>	
Quick reference guide and Ordering information .....	49
Characteristics .....	50
Optional accessories .....	51
Dimensions .....	52
Instructions .....	54
<b>Combination Starters</b>	
Quick reference guide .....	55
Optional accessories .....	58
Dimensions .....	60
<b>List price</b>	
For BM3 Series Manual Motor Starters .....	72
For BM3 Series Manual Motor Starters accessories .....	73
For SC-M and SC-E series Contactors and TK-E series Overload Relay and accessories .....	75
For Combination Starters accessories .....	77
<b>Appendix</b>	
Appendix 1 : Construction of combination motor controllers .....	78
Appendix 2 : Short circuit coordination comparison .....	78
<b>Terms and conditions of sale</b> .....	81

# Manual Motor Starters

## Quick reference guide

### ■ 32A Frame types and ratings

Adjustable thermal-magnetic trip type	<b>Standard breaking capacity</b> <b>BM3RSB-□</b>									
										
	KK01-317									
Number of poles	3									
Handle type	Rocker									
Rated current $I_e$ (A)	0.16 to 32									
Rated operational voltage $U_e$ (V)	200 to 690									
Rated frequency (Hz)	50/60									
Rated insulation voltage $U_i$ (V)	690									
Rated impulse withstand voltage $U_{imp}$ (kV)	6									
Utilization category	IEC 60947-2 Circuit breaker		Cat. A							
	IEC 60947-4-1 Motor starter		AC-3							
Trip class IEC 60947-4-1	10									
Instantaneous trip characteristic	$13 \times I_e \text{ max.}$									
Power loss (total of 3-pole)	7W: $I_n=0.16$ to 25A 8.5W: $I_n=32$ A									
Mechanical durability (operations)	100,000: $I_n=0.16$ to 25A 70,000: $I_n=32$ A									
Electrical durability (operations)	100,000: $I_n=0.16$ to 25A 70,000: $I_n=32$ A									
Max. operations per hour (motor start-up)	25									
Phase-loss protection	Provided									
Trip indicator	Provided									
Test trip function	Provided									
Adjustable current range	UL/CSA 3phase HP rating (HP) *2					Instantaneous trip current (A)	UL/CSA Short circuit current rating (kA) *3			Maximum listed branch circuit protection *3
Code *1	$I_e$ : Min.–Max. (A)	200-208VAC	220-240VAC	440-480VAC	550-600VAC		240VAC	480VAC	600VAC	Fuse or MCCB (A)
<b>P16</b>	0.1–0.16	In accordance with Motor full load current				2.1	100	50	10	500
<b>P25</b>	0.16–0.25					3.3	100	50	10	500
<b>P40</b>	0.25–0.4					5.2	100	50	10	500
<b>P63</b>	0.4–0.63					8.2	100	50	10	500
<b>001</b>	0.63–1					1/2	13	100	50	10
<b>1P6</b>	1–1.6		3/4	3/4	20.8	100	50	10	500	
<b>2P5</b>	1.6–2.5	1/2	1/2	1	1-1/2	32.5	100	50	10	500
<b>004</b>	2.5–4	3/4	3/4	2	3	52	100	50	10	500
<b>6P3</b>	4–6.3	1	1-1/2	3	5	81.9	100	50	10	500
<b>010</b>	6.3–10	2	3	5	7-1/2	130	100	22	10	500
<b>013</b>	9–13	3	3	7-1/2	10	169	100	22	10	500
<b>016</b>	11–16	3	5	10	10	208	100	22	10	500
<b>020</b>	14–20	5	5	10	15	260	50	22	10	500
<b>025</b>	19–25	7-1/2	7-1/2	15	20	325	50	22	10	500
<b>032</b>	24–32	10	10	20	30	416	50	22	10	500
Dimensions (mm) W x H x D	45 x 90 x 66									
Mass (g)	350									
Optional accessory	Auxiliary contact block	<input type="radio"/>								
	Alarm contact block	<input type="radio"/>								
	Auxiliary and alarm contact block	<input type="radio"/>								
	Short-circuit alarm contact block	<input type="radio"/>								
	Shunt trip device	<input type="radio"/>								
	Undervoltage trip device	<input type="radio"/>								
	External operating handle	–								
Standard	IEC 60947-1, 60947-2, 60947-4-1, UL 508, CSA C22.2 No.14									


Notes: \*1 Replace the □ mark in the part number by current range codes.

Available    – Not available

\*2 The BM3RSB is cUL listed as HP rated motor controllers.

\*3 The BM3RSB is cUL listed for group Installation as per NEC430-53(C).

### 32A Frame types and ratings

Adjustable thermal-magnetic trip type		<b>High breaking capacity</b> <b>BM3RHB-□</b>				 AF01-42				
Number of poles		3								
Handle type		Rotary								
Rated current I <sub>e</sub> (A)		0.16 to 32								
Rated operational voltage U <sub>e</sub> (V)		200 to 690								
Rated frequency (Hz)		50/60								
Rated insulation voltage U <sub>i</sub> (V)		690								
Rated impulse withstand voltage U <sub>imp</sub> (kV)		6								
Utilization category IEC 60947-2 Circuit breaker		Cat. A								
Utilization category IEC 60947-4-1 Motor starter		AC-3								
Trip class IEC 60947-4-1		10								
Instantaneous trip characteristic		13 × I <sub>e</sub> max.								
Power loss (total of 3-pole)		7W: I <sub>n</sub> =0.16 to 25A 8.5W: I <sub>n</sub> =32A								
Mechanical durability (operations)		100,000: I <sub>n</sub> =0.16 to 25A 70,000: I <sub>n</sub> =32A								
Electrical durability (operations)		100,000: I <sub>n</sub> =0.16 to 25A 70,000: I <sub>n</sub> =32A								
Max. operations per hour (motor start-up)		25								
Phase-loss protection		Provided								
Trip indicator		Provided								
Test trip function		Provided								
Adjustable current range		UL/CSA 3phase HP rating (HP) *2				Instantaneous trip current (A)	UL/CSA Short circuit current rating (kA) *3			Maximum listed branch circuit protection *3 Fuse or MCCB (A)
Code *1	I <sub>e</sub> : Min.–Max. (A)	200-208VAC	220-240VAC	440-480VAC	550-600VAC		240VAC	480VAC	600VAC	
<b>P16</b>	0.1–0.16	In accordance with Motor full load current				2.1	100	50	10	500
<b>P25</b>	0.16–0.25					3.3	100	50	10	500
<b>P40</b>	0.25–0.4					5.2	100	50	10	500
<b>P63</b>	0.4–0.63					8.2	100	50	10	500
<b>001</b>	0.63–1					1/2	13	100	50	10
<b>1P6</b>	1–1.6		3/4	3/4	20.8	100	50	10	500	
<b>2P5</b>	1.6–2.5	1/2	1/2	1	1-1/2	32.5	100	50	10	500
<b>004</b>	2.5–4	3/4	3/4	2	3	52	100	50	10	500
<b>6P3</b>	4–6.3	1	1-1/2	3	5	81.9	100	50	10	500
<b>010</b>	6.3–10	2	3	5	7-1/2	130	100	50	10	500
<b>013</b>	9–13	3	3	7-1/2	10	169	100	50	10	500
<b>016</b>	11–16	3	5	10	10	208	100	50	10	500
<b>020</b>	14–20	5	5	10	15	260	100	50	10	500
<b>025</b>	19–25	7-1/2	7-1/2	15	20	325	100	50	10	500
<b>032</b>	24–32	10	10	20	30	416	100	50	10	500
Dimensions (mm) W X H X D		45 X 90 X 79								
Mass (g)		370								
Optional accessory	Auxiliary contact block	<input type="radio"/>								
	Alarm contact block	<input type="radio"/>								
	Auxiliary and alarm contact block	<input type="radio"/>								
	Short-circuit alarm contact block	<input type="radio"/>								
	Shunt trip device	<input type="radio"/>								
	Undervoltage trip device	<input type="radio"/>								
	External operating handle	<input type="radio"/>								
Standard		IEC 60947-1, 60947-2, 60947-4-1, UL 508, CSA C22.2 No.14								

Notes: \*1 Replace the □ mark in the part number by current range codes.

Available    – Not available


\*2 The BM3RHB is cUL listed as HP rated motor controllers.

\*3 The BM3RHB is cUL listed for group Installation as per NEC430-53(C).

# Manual Motor Starters

## Quick reference guide

### ■ 63A Frame types and ratings

Adjustable thermal-magnetic trip type	Standard breaking capacity <b>BM3VSB-□</b>		 AF01-47								
Number of poles	3										
Handle type	Rotary										
Rated current $I_e$ (A)	10 to 63										
Rated operational voltage $U_e$ (V)	200 to 690										
Rated frequency (Hz)	50/60										
Rated insulation voltage $U_i$ (V)	1000										
Rated impulse withstand voltage $U_{imp}$ (kV)	8										
Utilization category	IEC 60947-2 Circuit breaker	Cat. A									
	IEC 60947-4-1 Motor starter	AC-3									
Trip class IEC 60947-4-1	10										
Instantaneous trip characteristic	13 x $I_e$ max.										
Power loss (total of 3-pole)	11W: $I_n=10$ to 32A 15W: $I_n=40$ to 50A 17W: $I_n=63A$										
Mechanical durability (operations)	50,000										
Electrical durability (operations)	25,000										
Max. operations per hour (motor start-up)	25										
Phase-loss protection	Provided										
Trip indicator	Provided										
Test trip function	Provided										
Adjustable current range	UL/CSA 3phase HP rating (HP) *2		Instantaneous trip current (A)	UL/CSA Short circuit current rating (kA) *3	Maximum listed branch circuit protection *3						
Code *1	$I_e$ : Min.–Max. (A)	200-208VAC	220-240VAC	440-480VAC	550-600VAC			240VAC	480VAC	600VAC	Fuse or MCCB (A)
<b>010</b>	6.3–10	2	3	5	7-1/2	130	100	22	10	600	
<b>013</b>	9–13	3	3	7-1/2	10	169	100	22	10	600	
<b>016</b>	11–16	3	5	10	10	208	100	22	10	600	
<b>020</b>	14–20	5	5	10	15	260	100	22	10	600	
<b>025</b>	19-25	7-1/2	7-1/2	15	20	325	100	22	10	600	
<b>032</b>	24-32	10	10	20	30	416	100	22	10	600	
<b>040</b>	28-40	10	10	30	30	520	100	22	10	600	
<b>050</b>	35-50	15	15	30	40	650	100	22	10	600	
<b>063</b>	45-63	20	20	40	60	819	100	22	10	600	
Dimensions (mm) W X H X D	55 X 110 X 96										
Mass (g)	780										
Optional accessory	Auxiliary contact block	<input type="radio"/>									
	Alarm contact block	<input type="radio"/>									
	Auxiliary and alarm contact block	<input type="radio"/>									
	Short-circuit alarm contact block	<input type="radio"/>									
	Shunt trip device	<input type="radio"/>									
	Undervoltage trip device	<input type="radio"/>									
	External operating handle	<input type="radio"/>									
Standard	IEC 60947-1, 60947-2, 60947-4-1, UL 508, CSA C22.2 No.14										

Notes: \*1 Replace the □ mark in the part number by current range codes.


Available

Not available

\*2 The BM3VSB is cUL listed as HP rated motor controllers.

\*3 The BM3VSB is cUL listed for group Installation as per NEC430-53(C).

### 63A Frame types and ratings

Adjustable thermal-magnetic trip type	<b>High breaking capacity</b> <b>BM3VHB-□</b>									
										
Number of poles	3									
Handle type	Rotary									
Rated current I <sub>e</sub> (A)	10 to 63									
Rated operational voltage U <sub>e</sub> (V)	200 to 690									
Rated frequency (Hz)	50/60									
Rated insulation voltage U <sub>i</sub> (V)	1000									
Rated impulse withstand voltage U <sub>imp</sub> (kV)	8									
Utilization category	IEC 60947-2 Circuit breaker IEC 60947-4-1 Motor starter									
Trip class IEC 60947-4-1	10									
Instantaneous trip characteristic	13 x I <sub>e</sub> max.									
Power loss (total of 3-pole)	11W: I <sub>n</sub> =10 to 32A 15W: I <sub>n</sub> =40 to 50A 17W: I <sub>n</sub> =63A									
Mechanical durability (operations)	50,000									
Electrical durability (operations)	25,000									
Max. operations per hour (motor start-up)	25									
Phase-loss protection	Provided									
Trip indicator	Provided									
Test trip function	Provided									
Adjustable current range	UL/CSA 3phase HP rating (HP) *2				Instantaneous trip current (A)	UL/CSA Short circuit current rating (kA) *3			Maximum listed branch circuit protection *3	
Code *1	I <sub>e</sub> : Min.–Max. (A)	200-208VAC	220-240VAC	440-480VAC		550-600VAC	240VAC	480VAC	600VAC	Fuse or MCCB (A)
<b>010</b>	6.3–10	2	3	5	7-1/2	130	100	50	10	600
<b>013</b>	9–13	3	3	7-1/2	10	169	100	50	10	600
<b>016</b>	11–16	3	5	10	10	208	100	50	10	600
<b>020</b>	14–20	5	5	10	15	260	100	50	10	600
<b>025</b>	19-25	7-1/2	7-1/2	15	20	325	100	50	10	600
<b>032</b>	24-32	10	10	20	30	416	100	50	10	600
<b>040</b>	28-40	10	10	30	30	520	100	50	10	600
<b>050</b>	35-50	15	15	30	40	650	100	50	10	600
<b>063</b>	45-63	20	20	40	60	819	100	50	10	600
Dimensions (mm) W X H X D	55 X 110 X 96									
Mass (g)	780									
Optional accessory	Auxiliary contact block	<input type="radio"/>								
	Alarm contact block	<input type="radio"/>								
	Auxiliary and alarm contact block	<input type="radio"/>								
	Short-circuit alarm contact block	<input type="radio"/>								
	Shunt trip device	<input type="radio"/>								
	Undervoltage trip device	<input type="radio"/>								
	External operating handle	<input type="radio"/>								
Standard	IEC 60947-1, 60947-2, 60947-4-1, UL 508, CSA C22.2 No.14									

Notes: \*1 Replace the □ mark in the part number by current range codes.

\*2 The BM3VHB is cUL listed as HP rated motor controllers.

\*3 The BM3VHB is cUL listed for group Installation as per NEC430-53(C).

Available     Not available

# Manual Motor Starters

## Type E ratings

### • BM3RSB (Type E ratings)

Manual motor starters		3 phase motor		Short circuit rating(kA)	
Code	I <sub>e</sub> ; Min-Max. (A)	Rated capacity (HP) 220-240V AC	Rated capacity (HP) 440-480V AC	up to 240V AC	up to 480/277V AC
P16	0.1-0.16	In accordance with Motor full load current		100	50
P25	0.16-0.25			100	50
P40	0.25-0.4			100	50
P63	0.4-0.63			100	50
001	0.63-1.0			100	50
1P6	1-1.6			3/4	100
2P5	1.6-2.5	1/2	1	100	50
004	2.5-4	3/4	2	100	50
6P3	4-6.3	1-1/2	3	100	50
010	6.3-10	3	5	100	22
013	9-13	3	7-1/2	100	22
016	11-16	5	10	100	22
020	14-20	5	10	100	22
025	19-25	7-1/2	15	50	22
032	24-32a	10	20	50	22

To make an application for use with Type E controller, you need to prepare BZ0TCRE and BZ0TKUAB accessories for BM3RSB separately.

### • BM3RHB (Type E ratings)

Manual motor starters		3 phase motor		Short circuit rating(kA)	
Code	I <sub>e</sub> ; Min-Max. (A)	Rated capacity (HP) 220-240V AC	Rated capacity (HP) 440-480V AC	up to 240V AC	up to 480/277V AC
P16	0.1-0.16	In accordance with Motor full load current		100	50
P25	0.16-0.25			100	50
P40	0.25-0.4			100	50
P63	0.4-0.63			100	50
001	0.63-1.0			100	50
1P6	1-1.6			3/4	100
2P5	1.6-2.5	1/2	1	100	50
004	2.5-4	3/4	2	100	50
6P3	4-6.3	1-1/2	3	100	50
010	6.3-10	3	5	100	50
013	9-13	3	7-1/2	100	50
016	11-16	5	10	100	50
020	14-20	5	10	100	50
025	19-25	7-1/2	15	100	50
032	24-32	10	20	100	50

To make an application for use with Type E controller, you need to prepare BZ0TCRE and BZ0TKUAB accessories for BM3RHB separately.

### • BM3VSB (Type E ratings)

Manual motor starters		3 phase motor		Short circuit rating(kA)	
Code	I <sub>e</sub> ; Min-Max. (A)	Rated capacity (HP) 220-240V AC	Rated capacity (HP) 440-480V AC	up to 240V AC	up to 480/277V AC
010	6.3-10	3	5	100	22
013	9-13	3	7-1/2	100	22
016	11-16	5	10	100	22
020	14-20	5	10	100	22
025	19-25	7-1/2	15	100	22
032	24-32	10	20	100	22
040	28-40	10	30	100	22
050	35-50	15	30	100	22
063	45-63	20	40	100	22

To make an application for use with Type E controller, you need to prepare BZ0TKUAB accessories for BM3VSB separately.

### • BM3VHB (Type E ratings)

Manual motor starters		3 phase motor		Short circuit rating(kA)	
Code	I <sub>e</sub> ; Min-Max. (A)	Rated capacity (HP) 220-240V AC	Rated capacity (HP) 440-480V AC	up to 240V AC	up to 480/277V AC
010	6.3-10	3	5	100	50
013	9-13	3	7-1/2	100	50
016	11-16	5	10	100	50
020	14-20	5	10	100	50
025	19-25	7-1/2	15	100	50
032	24-32	10	20	100	50
040	28-40	10	30	100	50
050	35-50	15	30	100	50
063	45-63	20	40	100	50

To make an application for use with Type E controller, you need to prepare BZ0TKUAB accessories for BM3VHB separately.

# Manual Motor Starters

## Ordering information and Characteristics

### Ordering information

Specify the following:

1. Part number
2. Accessories if required

**BM3 V H B - 063**

**Product category**

**Frame size**

R: 32A Frame 45mm wide

V: 63A Frame 55mm wide

**Rated current code** (see page 9 to 12)

**Operating characteristic**

B: Adjustable thermal-magnetic trip


**Breaking capacity**

S: Standard breaking capacity


H: High breaking capacity

### Characteristic curves

#### • BM3RSB, RHB

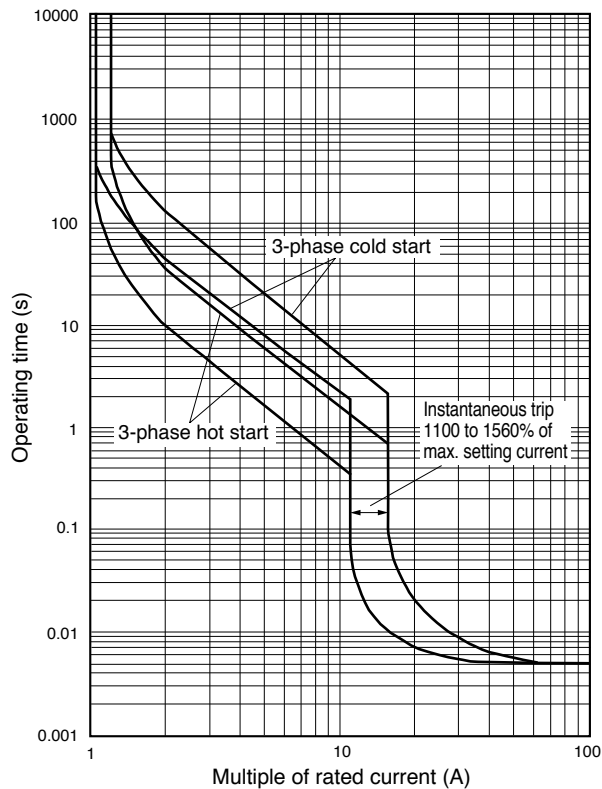

#### • BM3VSB, VHB

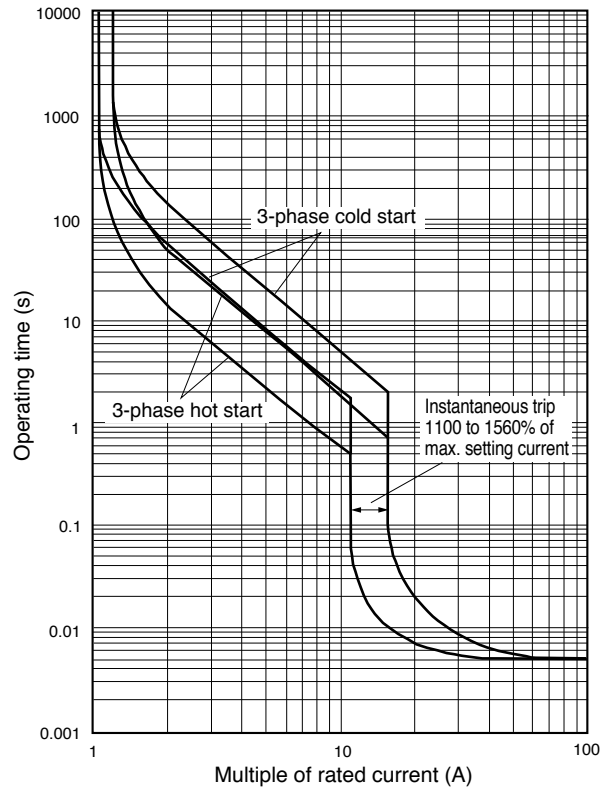


# Manual Motor Starters

## Optional accessories



### ■ Features

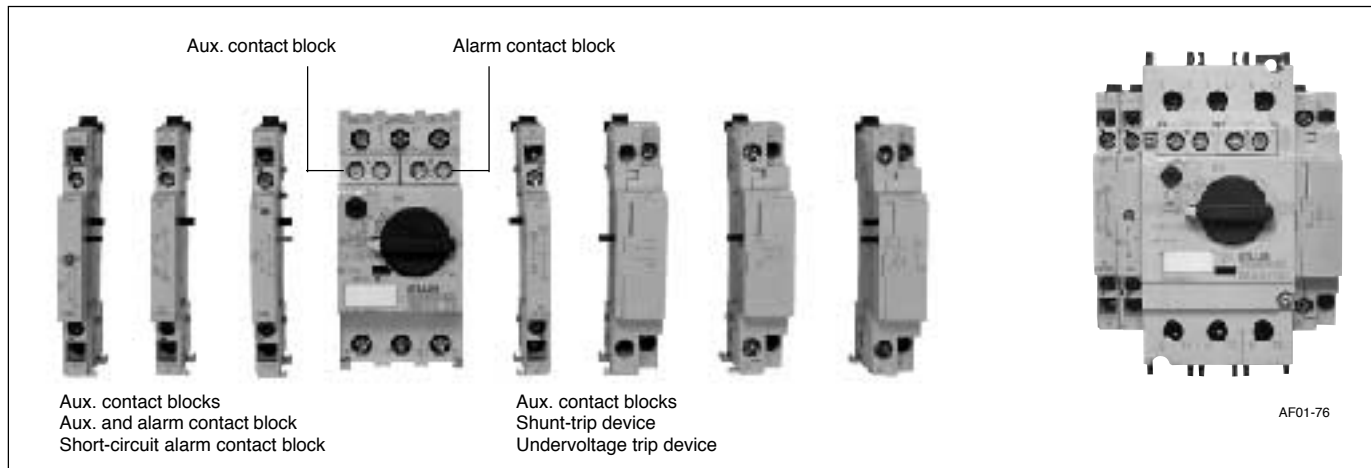- All accessories can be used with BM3R (45mm wide) and BM3V (55mm wide) frames.
- Accessories are easily mounted.
- Internal auxiliary contact blocks and alarm contact blocks can be mounted on front side.
- External auxiliary contact blocks can be mounted on either the right or left side.
- Shunt trip and undervoltage trip devices are available in a wide range of operating voltages.
- Standard and emergency external handles are available.
- IP20 terminal cover prevents accidental contact to electrically charged parts.




### ■ Part number and ratings

#### • Auxiliary contact blocks (W)

Description	Starter type	Mounting	Contact arrangement	Part number	Mass (g)
 AF01-60L   AF01-59, 01-58  These blocks are linked to the ON/OFF operation of the MMS. Up to two contact blocks can be mounted to the right/left front, and up to two contact blocks can be mounted to the right/left sides.	BM3R BM3V	Front	1NO 1NC	<b>BZ0WIA</b> <b>BZ0WIB</b>	9
		Left side	2NO 1NO+1NC 2NC	<b>BZ0WUAAL</b> <b>BZ0WUABL</b> <b>BZ0WUBBL</b>	45
		Right side	2NO 1NO+1NC 2NC	<b>BZ0WUAAR</b> <b>BZ0WUABR</b> <b>BZ0WUBBR</b>	45

#### • Alarm contact blocks (K)


Description	Starter type	Mounting	Contact arrangement	Part number	Mass (g)
 AF01-60R  This block operates when the MMS trips due to overload, phase-loss, or short-circuit. It is not linked to the ON/OFF operation of the MMS. Note: Operation can be checked with the test trip function.	BM3R BM3V	Front (Right side only)	1NO 1NC	<b>BZ0KIA</b> <b>BZ0KIB</b>	9




# Manual Motor Starters

## Optional accessories


### • Auxiliary and alarm contact blocks (WK)

Description	Starter type	Mounting	Contact arrangement	Part number	Mass (g)
 <p>• This contact block combines auxiliary contact and alarm contact that operate in the event of an overload, phase loss, or short-circuit. Alarm contact is not linked to the ON/OFF operation of the MMS.</p> <p>• An alarm is displayed in the contact block's indicator when the alarm contact operates.</p> <p>Note: Operation can be checked with the test trip function.</p>	BM3R BM3V	Left	1NO (Aux.)+ 1NO (Alarm)	<b>BZ0WKUAA</b>	45
			1NC (Aux.)+ 1NO (Alarm)	<b>BZ0WKUBA</b>	
			1NO (Aux.)+ 1NC (Alarm)	<b>BZ0WKUAB</b>	
			1NC (Aux.)+ 1NC (Alarm)	<b>BZ0WKUBB</b>	

### • Short-circuit alarm contact block (KI)


Description	Starter type	Mounting	Contact arrangement	Part number	Mass (g)
 <p>• The contacts operate only when the MMS has tripped due to a short-circuit.</p> <p>• When these contacts operate, the blue reset button extends out, and a trip indication is displayed.</p> <p>• The power to the MMS can be turned ON after pressing the reset button.</p> <p>Note: Operation can be checked with the test trip function. Be sure to press the reset button before mounting to the MMS.</p>	BM3R BM3V	Left	1NO+1NC	<b>BZ0TKUAB</b>	45

### • Shunt trip devices (F)

Description	Starter type	Mounting	Coil voltage	Part number	Mass (g)
 <p>This device is used to remotely trip the MMS.</p> <p>Notes:</p> <ul style="list-style-type: none"> <li>• This device cannot be used together with an undervoltage trip device.</li> <li>• When the MMS has been tripped with the shunt trip device, press the reset button before turning ON the power.</li> </ul>	BM3R BM3V	Right	24VAC 50/60Hz 48VAC 60Hz 48VAC 50Hz/60VAC 60Hz	<b>BZ0FAZU</b> <b>BZ0FBZU</b> <b>BZ0FCZU</b>	115
			100VAC 50Hz/100–110VAC 60Hz 110–127VAC 50Hz/120VAC 60Hz 200VAC 50Hz/200–220VAC 60Hz 220–230VAC 50Hz/240–260VAC 60Hz 240VAC 50Hz/277VAC 60Hz	<b>BZ0F1ZU</b> <b>BZ0FDZU</b> <b>BZ0FEZU</b> <b>BZ0FFZU</b> <b>BZ0FGZU</b>	
			380–400VAC 50Hz/400–440VAC 60Hz 415–440VAC 50Hz/460–480VAC 60Hz 500VAC 50Hz/600VAC 60Hz 24–60V DC * 110-240V DC *	<b>BZ0FHZU</b> <b>BZ0F4ZU</b> <b>BZ0FJZU</b> <b>BZ0FKZUD</b> <b>BZ0FLZUD</b>	

Note: \* The time rating of coil is 5s.


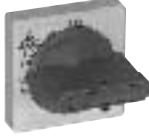
### • Undervoltage trip devices (R)

Description	Starter type	Mounting	Coil voltage	Part number	Mass (g)
 <p><b>R types</b> This device automatically trips the MMS when the control circuit voltage drops below the specified value.</p> <p>Notes:</p> <ul style="list-style-type: none"> <li>• This device cannot be used together with a shunt trip device.</li> <li>• When the MMS has been tripped with the undervoltage trip device, press the reset button before turning ON the power.</li> </ul>	BM3R BM3V	Right	24VAC 50Hz 24VAC 60Hz 48VAC 50Hz 48VAC 60Hz	<b>BZ0RAZ1U</b> <b>BZ0RAZ2U</b> <b>BZ0RBZ1U</b> <b>BZ0RBZU</b>	115
			100VAC 50Hz/100–110VAC 60Hz 110–127VAC 50Hz/120VAC 60Hz 200VAC 50Hz/200–220VAC 60Hz 220–230VAC 50Hz/240–260VAC 60Hz 240VAC 50Hz/277VAC 60Hz	<b>BZ0R1ZU</b> <b>BZ0RDZU</b> <b>BZ0REZU</b> <b>BZ0RFZU</b> <b>BZ0RGZU</b>	
			380–400VAC 50Hz/400–440VAC 60Hz 415–440VAC 50Hz/460–480VAC 60Hz 500VAC 50Hz/600VAC 60Hz	<b>BZ0RHZU</b> <b>BZ0R4ZU</b> <b>BZ0RJZU</b>	


# Manual Motor Starters

## Optional accessories




### • External operating handles

Description	Starter type	Handle type	Part number	Mass (g)
 <p>KK02-305</p>  <p>KK02-306</p> <ul style="list-style-type: none"> <li>• Used to operate an MMS installed inside a panel, from the outside of the panel.</li> <li>• Equipped with an interlock mechanism that prevents someone from mistakenly opening the panel door when the MMS is in the ON state.</li> <li>• The shaft can be cut to match the distance between the MMS and the panel door.</li> <li>• Door interlock function</li> <li>• OFF lock function</li> <li>• Can be locked OFF with up to three padlocks. Note: Padlocks not included.</li> <li>• Release screw allows the door to be opened with the handle in the ON position.</li> <li>• IP54 enclosure</li> </ul>	BM3RH	Standard (black)	<b>BZ0VBBL</b>	160
		Emergency (red/yellow)	<b>BZ0VYRL</b>	160
	BM3V	Standard (black)	<b>BZ0VBBM</b>	160
		Emergency (red/yellow)	<b>BZ0VYRM</b>	160

### • Line side terminal cover

Description	Starter type	Part number	Mass (g)
 <p>Used for making Type E or Type F condition</p>	BM3R	<b>BZ0TCRE</b>	30

### • Others

Description	Starter type	Part number	Mass (g)
<p><b>Push-in lug</b></p>  <p>Used for screw mounting. 10 pcs/pack</p>	BM3R	<b>BZ0SET</b>	2.0
<p><b>Terminal cover for IP20</b></p>  <p>Prevents accidental contact to charged parts. 6 pcs/pack</p>	BM3V	<b>BZ0TCV</b>	0.6
<p><b>Dummy cover</b></p>  <p>KK02-39</p> <ul style="list-style-type: none"> <li>• Used to cover the open space if an internally mounted accessory should become unnecessary.</li> <li>• Mounts to either the left-front or right-front position.</li> <li>• 10 pcs/pack</li> </ul>	BM3R BM3V	<b>BZ0CFG</b>	1.4

### ■ Ratings of accessories

Accessory type		Auxiliary contact block/front	Auxiliary contact block/side	Alarm contact block	Aux. and alarm contact block	Short-circuit alarm contact block
Part number		<b>BZ0WI</b>	<b>BZ0WU</b>	<b>BZ0KI</b>	<b>BZ0WКУ</b>	<b>BZ0TKUAB</b>
Standard		IEC 60947-5-1, UL 508				
Rated operational current (A)	48V AC AC-15	5	6	5	6	6
	125V AC	3	4	3	4	4
	230V AC	1.5	4	1.5	4	4
	400V AC	–	2.2	–	2.2	2.2
	500V AC	–	1.5	–	1.5	1.5
	690V AC	–	0.6	–	0.6	0.6
	48V DC DC-13	1.38	5	1.38	5	5
	110V DC	0.55	1.3	0.55	1.3	1.3
	220V DC	0.27	0.5	0.27	0.5	0.5
Contact rating code UL 508		B300 Q300	A600 P300	B300 Q300	A600 P300	A600 P300
Min. voltage and current		17V 5mA				


Accessory type		Shunt trip device	Undervoltage device
Part number		<b>BZ0F</b>	<b>BZ0R</b>
Standard		IEC 60947-1, UL 508	
Rated insulation voltage (V AC)	IEC 60947 UL 508	690 600	
No. of ON-OFF operations		5000	
Operating time (ms)		20	
Power consumption	Inrush (VA/W)	21/12	
	Sealed (VA/W)	8/1.2	
Voltage range	Tripping voltage (V)	0.7 to 1.1Ue	0.35 to 0.7Ue
	Closing voltage (V)	–	0.85 to 1.1Ue
Time rating of coil (s)		AC: Continuous DC: 5	AC: Continuous

Note: Ue: Rated Voltage

# Manual Motor Starters

## Optional accessories

### Available accessory configuration

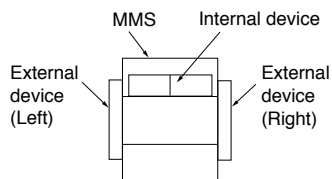

#### Internal devices


- Auxiliary contact block (W)
- Alarm contact block (K)

#### External devices

- Auxiliary contact (W2)
- Auxiliary and alarm contact block (WK)
- Short-circuit alarm contact block (KI)
- Shunt trip device (F)
- Undervoltage trip device (R)

Adj. thermal-magnetic trip type MMS		BM3RSB, BM3RHB						BM3VSB, BM3VHB					
Internal accessory													
External accessory	W2 (Left)												
	W2 (Right)												
	WK (Left)												
	KI (Left)												
	F (Right)												
	R (Right)												
	W2 (Left)+F												
	W2 (Left)+R												
	WK+F												
	WK+R												
	KI+F												
	KI+R												
	W2 (Left)+W2 (Left)												
W2 (Left)+W2 (Right)													

### Available accessory configuration (continued)

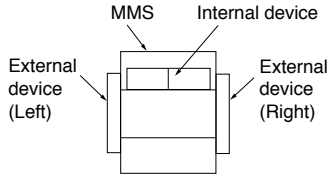

#### Internal devices

Auxiliary contact block (W)     Alarm contact block (K)

#### External devices

Auxiliary contact (W2)     Auxiliary and alarm contact block (WK)     Short-circuit alarm contact block (KI)  
 Shunt trip device (F)     Undervoltage trip device (R)


Adj. thermal-magnetic trip type MMS		BM3RSB, BM3RHB						BM3VSB, BM3VHB					
Internal accessory													
External accessory	W2 (Right)+ W2 (Right)												
	W2 (Left)+ WK												
	W2 (Right)+ WK												
	W2 (Left)+ KI												
	W2 (Right)+ KI												
	KI+WK												
	W2 (Left)+ W2 (Left)+F												
	W2 (Left)+ W2 (Left)+R												
	W2 (Left)+ WK+F												
	W2 (Left)+ WK+R												
	W2 (Left)+ KI+F												
	W2 (Left)+ KI+R												
	KI+WK+F												
	KI+WK+R												

# Manual Motor Starters


## Dimensions

### ■ Dimensions, mm


#### • Rocker handle types BM3RSB

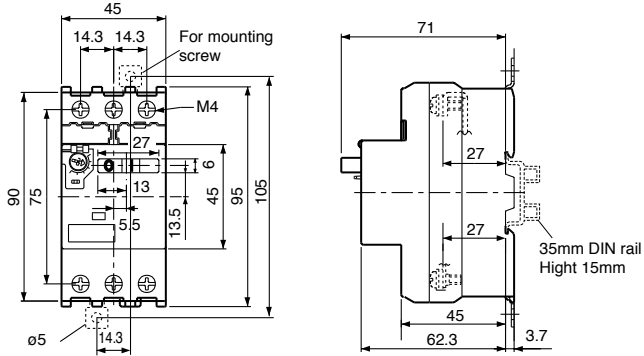

#### • Rotary handle types BM3RHB

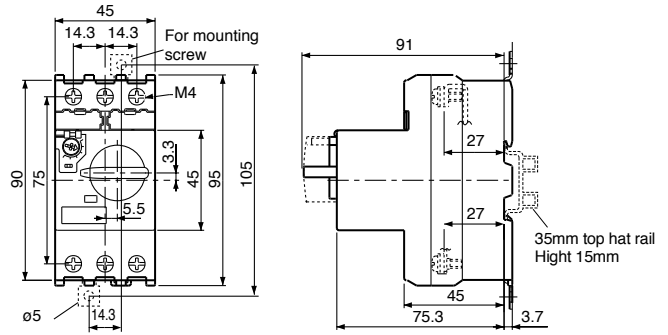


#### • Rotary handle types BM3VSB, BM3VHB

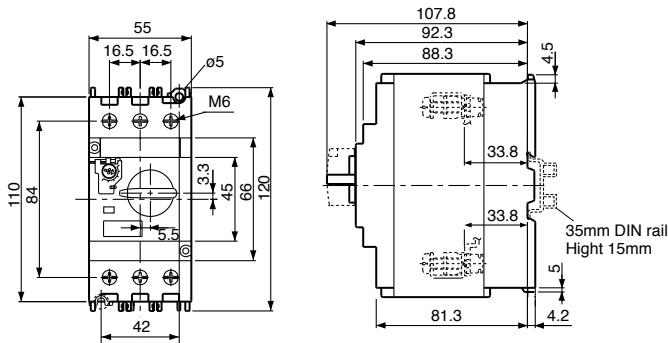


### Accessories


#### • Auxiliary contact blocks, front mounting BZ0WI

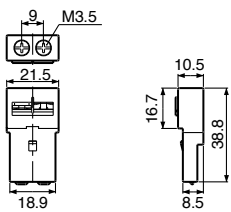


#### • Auxiliary contact blocks, side mounting BZ0WU

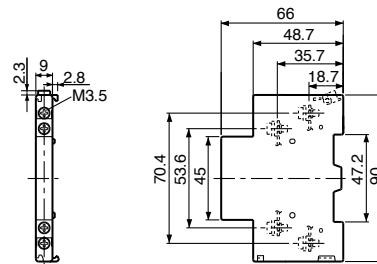

#### • Alarm contact blocks, front mounting BZ0KI

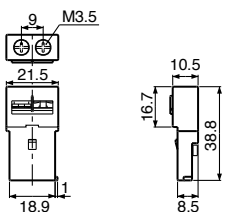

#### • Auxiliary and alarm contact blocks BZ0WКУ

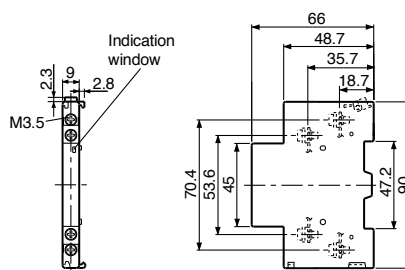


# Manual Motor Starters Dimensions


## ■ Dimensions, mm

### Accessories


- Short-circuit alarm contact block  
BZ0TKUAB

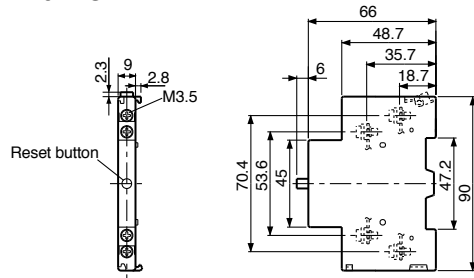

- Shunt trip devices BZ0F  
Undervoltage trip devices BZ0R

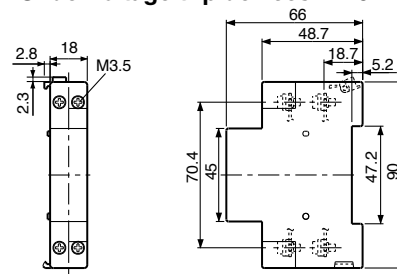


- BZ0TCRE

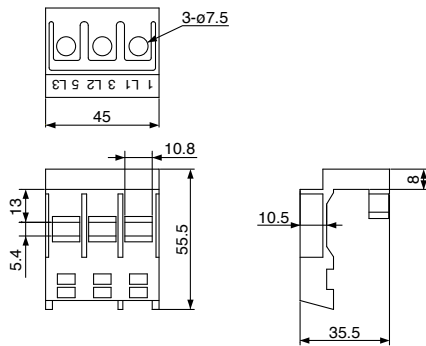


### MMS with accessories


- BM3RSB + BZ0

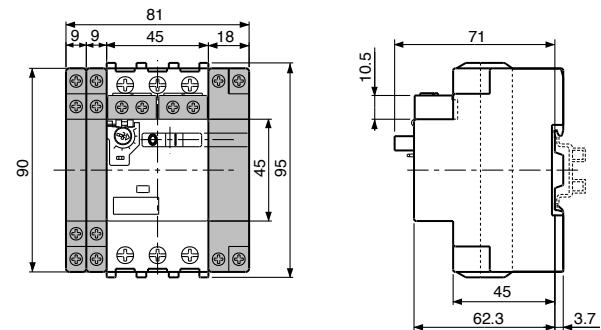

- BM3RHB + BZ0

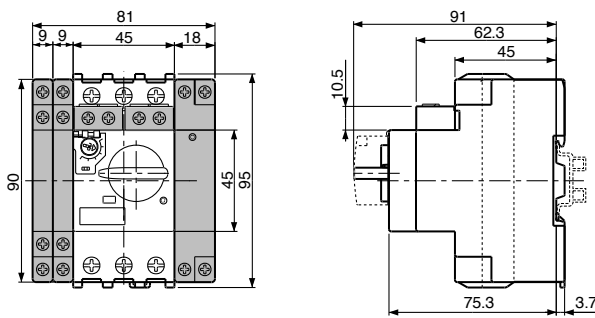


- BM3V□B + BZ0

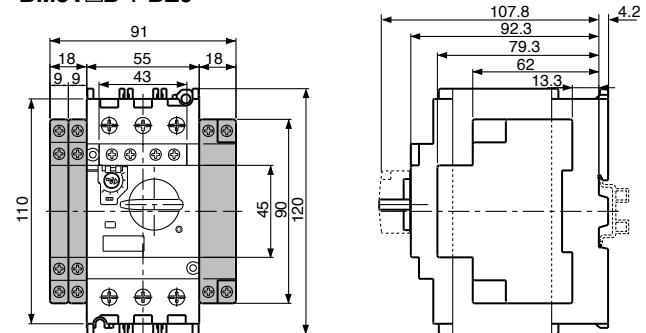


### Type E construction

- BM3RSB

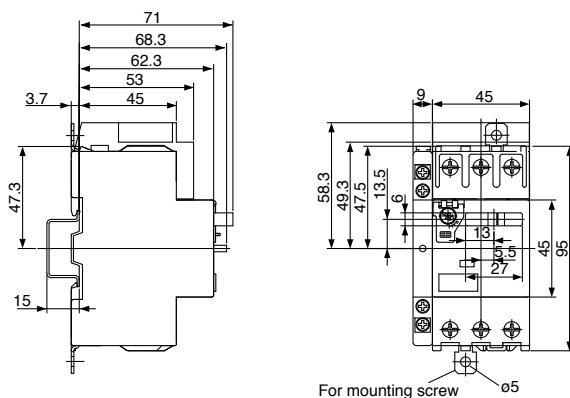

- BM3RHB

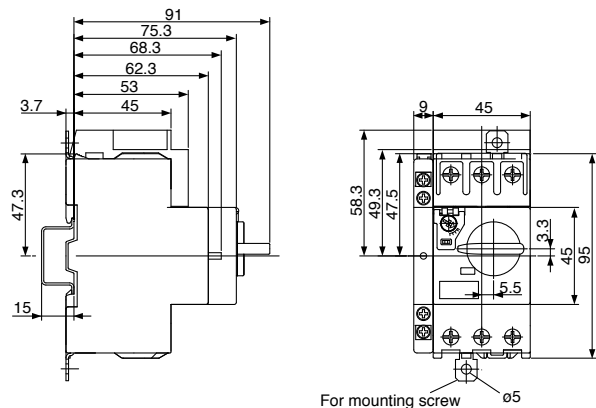

MMS	Line side terminal cover	Short-circuit alarm contact block	Mass (g)
BM3RSB	BZ0TCRE	BZ0TKUAB	425

MMS	Line side terminal cover	Short-circuit alarm contact block	Mass (g)
BM3RHB	BZ0TCRE	BZ0TKUAB	445


# Manual Motor Starters

## Dimensions

### ■ Dimensions, mm


#### Type E construction

- BM3VSB, BM3VHB


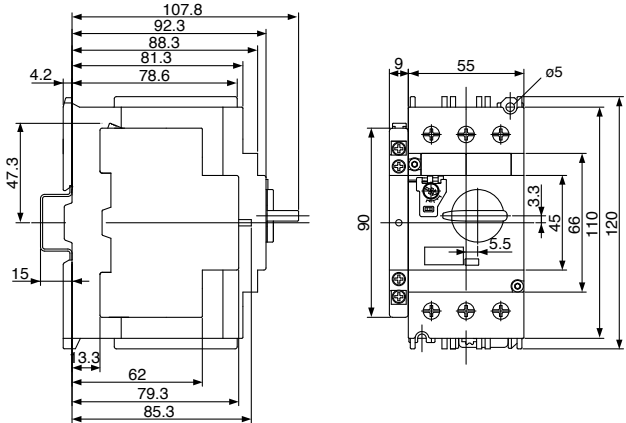


MMS	Line side terminal cover	Short-circuit alarm contact block	Mass (g)
BM3VSB, VHB	-	BZ0TKUAB	825

### External operation handle BZ0V

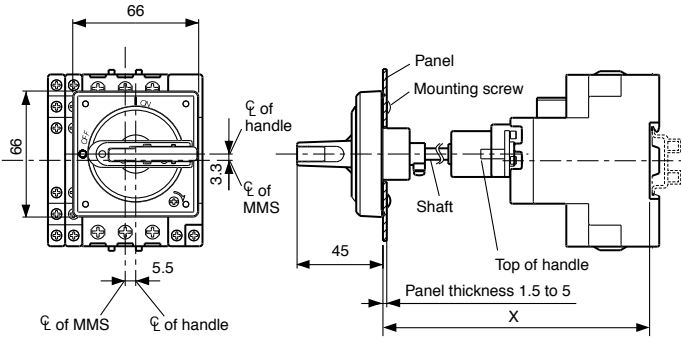

#### Panel drilling

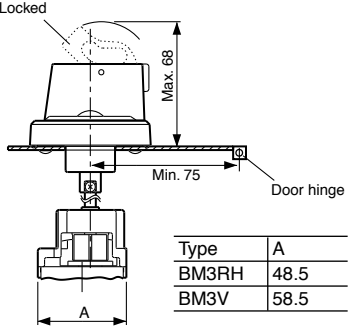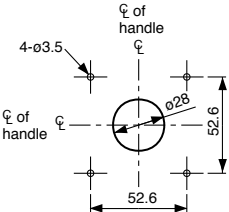


Type	X min.	X max.
BZ0VBBL, BZ0VYRL	139 ±2	289 ±2
BZ0VBBM, BZ0VYRM	156 ±2	306 ±2

Type	A
BM3RH	48.5
BM3V	58.5



■ **Wiring diagrams**


• **MMS**

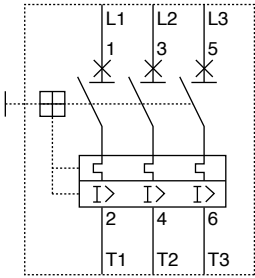


• **Auxiliary contact blocks**

**Front mounting**

BZ0WIA

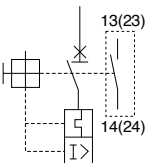


BZ0WIB

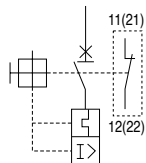


• **Alarm contact blocks**

**Front mounting**

BZ0KIA

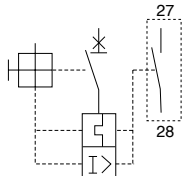


BZ0KIB

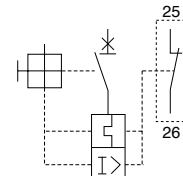


**Side mounting**


BZ0WUAAL

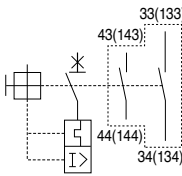

BZ0WUABL

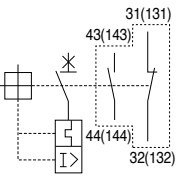


BZ0WUBBL

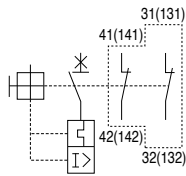


• **Auxiliary and alarm contact blocks**


BZ0WKUAA

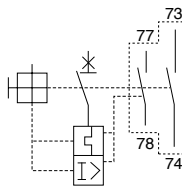


BZ0WKUBA

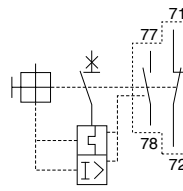


BZ0WUAAR

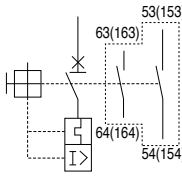


BZ0WUABR

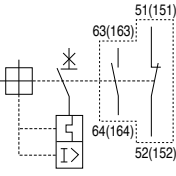


BZ0WUBBR

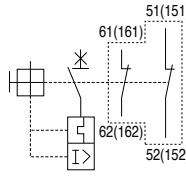

BZ0WKUAB

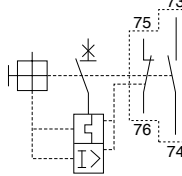


BZ0WKUBB

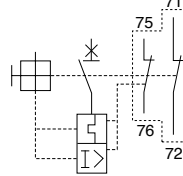


• **Short-circuit alarm contact blocks**

BZ0TKUAB

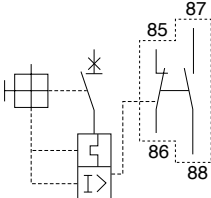


• **Shunt trip devices**

BZ0F

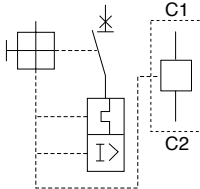

• **Undervoltage trip devices**

BZ0R

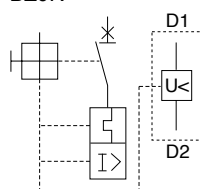

# Manual Motor Starters

## Instructions

### Standard operating conditions

Ambient temperature	Operating: -5 to +55°C Storage: -40 to +65°C	No sudden temperature changes resulting in condensation or icing.
Humidity	45 to 85%RH	
Altitude	2000m or lower	
Atmosphere	No excessive dust, smoke, corrosive gases, flammable gases, steam or salt.	
Vibration	10 to 55Hz 15m/s <sup>2</sup>	No abnormal shock or vibration
Shock	50m/s <sup>2</sup>	

### Mountings


#### Rail mounting

The MMS can be mounted to a 35mm DIN rail. Secure the rail with screws at mounting pitch of less than 400mm for the BM3R type and less than 300mm for the BM3V type.

Applicable rail:

Use a 15mm-high TH35-15 (FUJI model TH35-15AL) rail conforming to EN-50022 and IEC715.

The standard rail mounting direction is horizontal. When using the MMS on a vertically mounted rail, use FUJI end clamp kits.

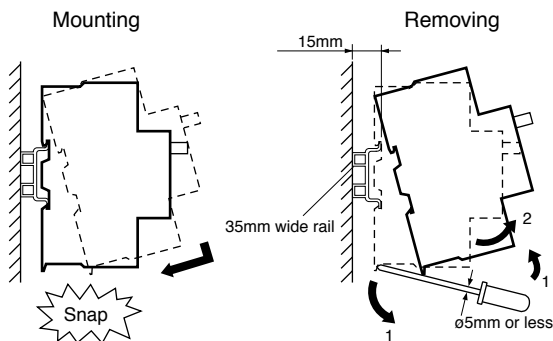


#### Screw mounting


The separately sold push-in lug (BZ0SET) is required for screw mounting the BM3R frame. The BM3V frame can be screw mounted directly to the panel.

BM3RSB  
BM3RHB

BM3VSB  
BM3VHB

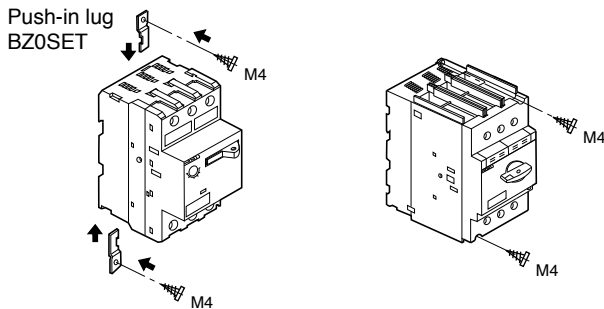


Mounting angle

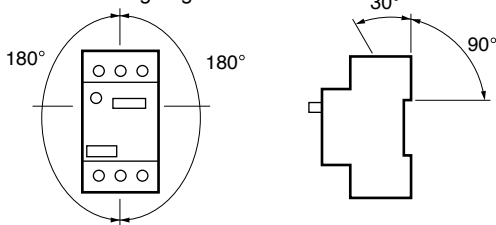

### Arc space

The arc space required when mounting is shown in the table below.

Type	Rated operational voltage U <sub>e</sub> (V)	Min. distance to grounded metal (mm)	
		A, B	C, D
BM3RS	Up to 460	15	20
	500	15	30
	Up to 690	40	40
BM3RH	Up to 500	15	30
	Up to 690	40	50
BM3V	Up to 500	15	40
	Up to 690	40	50

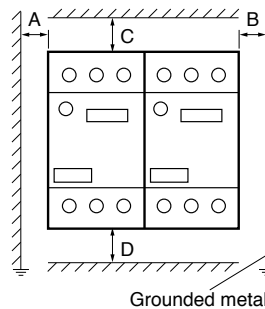

When frames are mounted side-by-side, operating conditions such as a high ambient temperature or using the maximum setting for continuous current may cause slight changes in operating characteristics due to temperature rises. Under such conditions, it is recommended that the frames be separated by at least 5mm.

### Wirings

While pressing the wire with a screwdriver, tighten the screw to the specified tightening torque.

Type	BM3R	BM3V	BZ0 Accessories
Solid wire (mm)	ø1.6 to 2.6	ø1.6 to 2.6	ø1 to 1.6
Stranded wire (mm <sup>2</sup> )	Single-wire	1 to 10	0.5 to 2.5
	2-wire	1 to 6	0.5 to 2.5
AWG	Single-wire	18 to 8	18 to 14
	2-wire	18 to 10	18 to 14
Sheath stripping length (mm)	Approx. 10	Approx. 13	Approx. 10
Terminal screw	Pan head screw (PZ2)	Pan head screw (PZ2)	Pan head screw (PZ2)
	M4	M6	M3.5
Tightening torque (N·m)	2	4	0.8

Note: There is no need for a crimp terminal or any other terminal on the end of the connection wire.

# Manual Motor Starters


## Busbar system

### ■ Features

- The busbar system reduces wiring time and saves floorspace.
- The busbar makes it easy to power from 2 to 5 manual motor starters – with no wiring needed.
- The 3-phase feed-in terminals are used to connect the wire for the power supply circuit.
- The busbar cover guards against accidental contact with non-connected busbar terminals (charged parts).

<Note>

If using BZ0TCRE terminal cover with BM3R series MMS, the busbar system can not be used.

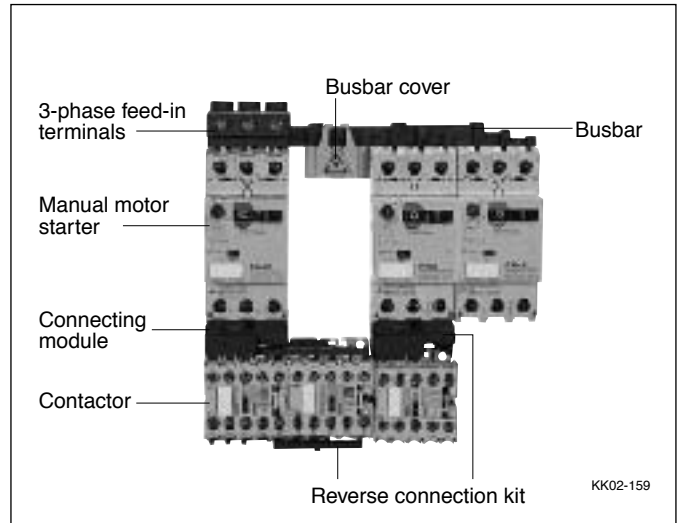

### ■ Part number and ratings

Description	Used with	Specification	Part number	Mass (g)		
 KK02-164	BM3R	Continuous current: 64A max. Pin connection	2-BM3R, modular space: 45mm	<b>BZ0BR02A</b>	30	
			3-BM3R, modular space: 45mm	<b>BZ0BR03A</b>	50	
			4-BM3R, modular space: 45mm	<b>BZ0BR04A</b>	70	
			5-BM3R, modular space: 45mm	<b>BZ0BR05A</b>	90	
	BM3R+1-external accessory, 9mm wide	Continuous current: 64A max. Pin connection	2-BM3R, modular space: 54mm	<b>BZ0BR12A</b>	30	
			3-BM3R, modular space: 54mm	<b>BZ0BR13A</b>	55	
			4-BM3R, modular space: 54mm	<b>BZ0BR14A</b>	80	
			5-BM3R, modular space: 54mm	<b>BZ0BR15A</b>	105	
	BM3R+2-external accessory, 9mm wide or BM3R+1-external accessory, 18mm wide	Continuous current: 64A max. Fork connection	2-BM3R, modular space: 63mm	<b>BZ0BR22A</b>	45	
			4-BM3R, modular space: 63mm	<b>BZ0BR24A</b>	100	
	 KK02-164	BM3V	Continuous current: 126A max. Pin connection	2-BM3V, modular space: 55mm	<b>BZ0BV02A</b>	140
				3-BM3V, modular space: 55mm	<b>BZ0BV03A</b>	240
4-BM3V, modular space: 55mm				<b>BZ0BV04A</b>	340	
BM3V+1-external accessory, 9mm wide		Continuous current: 126A max. Pin connection	2-BM3V, modular space: 64mm	<b>BZ0BV12A</b>	150	
			3-BM3V, modular space: 64mm	<b>BZ0BV13A</b>	270	
4-BM3V, modular space: 64mm		<b>BZ0BV14A</b>	380			
BM3V+2-external accessory, 9mm wide or BM3V+1-external accessory, 18mm wide	Continuous current: 126A max. Pin connection	2-BM3V, modular space: 73mm	<b>BZ0BV22A</b>	165		
		4-BM3V, modular space: 73mm	<b>BZ0BV24A</b>	425		
 AF01-70R	BM3R	Continuous current: 64A max. Applicable cable size: 25mm <sup>2</sup> max.	<b>BZ0BFRA</b>	40		
	BM3V	Continuous current: 126A max. Applicable cable size: 50mm <sup>2</sup> max.	<b>BZ0BFVA</b>	170		
 AF01-70L	BZ0BR	For pin connection For fork connection	<b>BZ0BCRA</b>	10		
	BZ0BV	For pin connection	<b>BZ0BCVA</b>	5		


# Manual Motor Starters

## Busbar system

### ■ Dimensions, mm

#### • For BM3R


#### BZ0BR0 Without external accessory

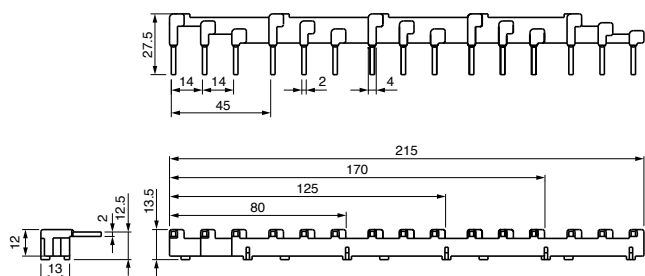

BZ0BR02A: 80mm  
 BZ0BR03A: 125mm  
 BZ0BR04A: 170mm  
 BZ0BR05A: 215mm


#### • For BM3V

#### BZ0BV0 Without external accessory

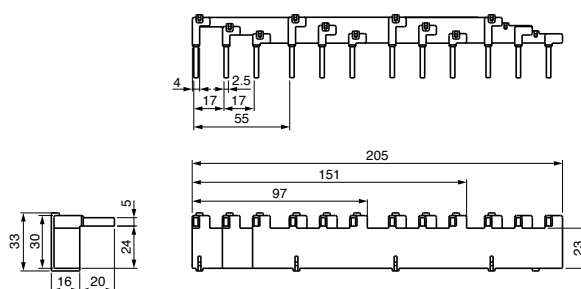


BZ0BV02A: 97mm  
 BZ0BV03A: 151mm  
 BZ0BV04A: 205mm

#### BZ0BR1 With 1-external accessory

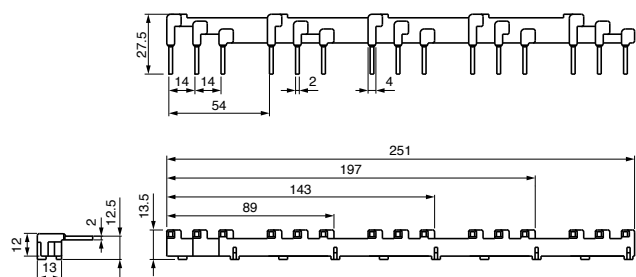


BZ0BR12A: 89mm  
 BZ0BR13A: 143mm  
 BZ0BR14A: 197mm  
 BZ0BR15A: 251mm

#### BZ0BV1 With 1-external accessory, 9mm wide

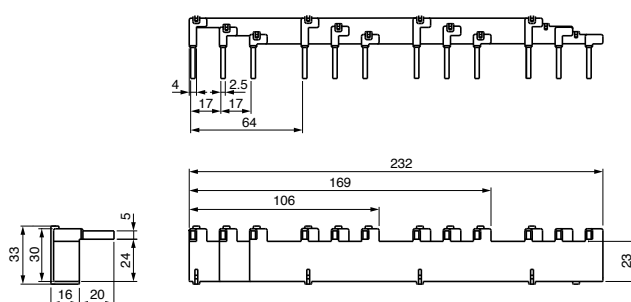


BZ0BV12A: 106mm  
 BZ0BV13A: 169mm  
 BZ0BV14A: 232mm

#### BZ0BR2 With 2-external accessory, 9mm wide With 1-external accessory, 18mm wide

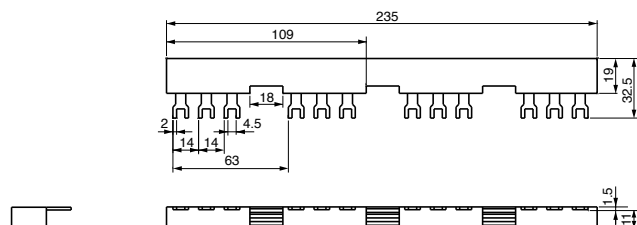


BZ0BR22A: 109mm  
 BZ0BR24A: 235mm

#### BZ0BV2 With 2-external accessory, 9mm wide With 1-external accessory, 18mm wide

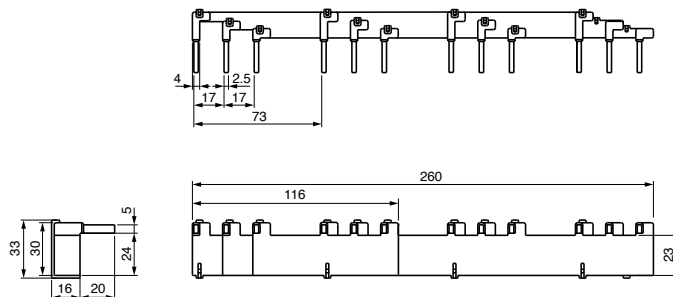


BZ0BV22A: 116mm  
 BZ0BV24A: 260mm

■ Dimensions, mm  
 • 3-phase feed-in terminals  
**BZ0BFRA**

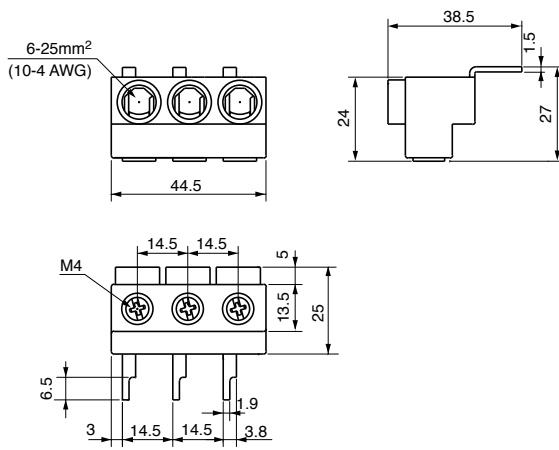

**BZ0BFVA**

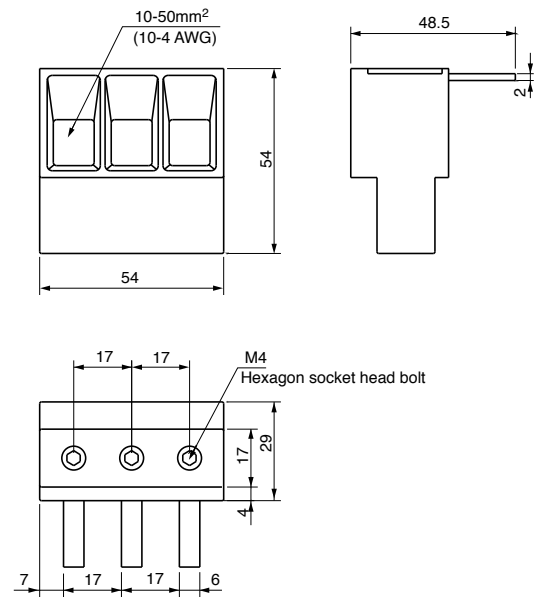

# Manual Motor Starters Enclosures


## ■ Features

- Accommodates a variety of manual motor starters (BM3RSB-P16 to 025). Put the manual motor starter inside an enclosure for use in harsh environments. Surface mounting and flush mounting types available.
- IP41 and IP55 enclosure protection degree available.
- Manual motor starters (BM3RSB-P16 to 025) equipped with internal accessories and the following external accessories can be used inside an enclosure.  
 Left side: One auxiliary contact block (W) or one auxiliary and alarm contact block (WK)  
 Right side: One shunt trip device (F) or one undervoltage trip device (R)
- A wide variety of enclosure accessories are available. Padlocking device, emergency mushroom head pushbutton, conversion kit, and indicator lamps.

## ■ Part number and ratings

### Enclosures for BM3RSB-P16 to 025

Mounting	Specification	Part number	Mass (g)
Surface	IP41	<b>BZ0CSLA</b>	320
	IP55 (with conversion kit)	<b>BZ0CSLB</b>	340
Flush	IP41	<b>BZ0CFLA</b>	240
	IP55 (with conversion kit)	<b>BZ0CFLB</b>	260

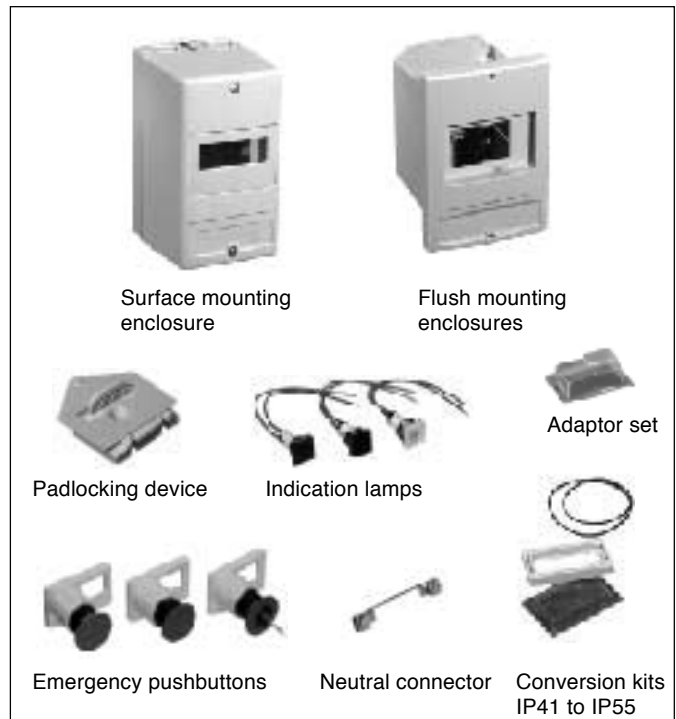

## Accessories for enclosures


Description	Specification	Part number	Mass (g)
Padlocking device	OFF locking possible using up to three padlocks with a 5 to 8mm shackle diameter.	<b>BZ0CKA</b>	90
Emergency pushbutton	Momentary Push-lock turn reset Key operated	<b>BZ0CPM</b>	55
		<b>BZ0CPL</b>	55
		<b>BZ0CPK</b>	90
Conversion kit	Converts IP41 to IP55	<b>BZ0CCA</b>	25
Adaptor set	For BM3RS + undervoltage trip device with auxiliary contact.	<b>BZ0CUA</b>	20
Neutral connector	Used inside the enclosure for neutral and ground connection.	<b>BZ0CNA</b>	10
Indication lamp	Green, 100–120V AC	<b>BZ0CLGA</b>	15
	Green, 200–240V AC	<b>BZ0CLGB</b>	15
	Green, 380–440V AC	<b>BZ0CLGC</b>	15
	Green, 480–500V AC	<b>BZ0CLGD</b>	15
	Green, 500–600V AC	<b>BZ0CLGE</b>	15
	Red, 100–120V AC	<b>BZ0CLRA</b>	15
	Red, 200–240V AC	<b>BZ0CLRB</b>	15
	Red, 380–440V AC	<b>BZ0CLRC</b>	15
	Red, 480–500V AC	<b>BZ0CLRD</b>	15
	Red, 500–600V AC	<b>BZ0CLRE</b>	15
	White, 100–120V AC	<b>BZ0CLCA</b>	15
	White, 200–240V AC	<b>BZ0CLCB</b>	15
	White, 380–440V AC	<b>BZ0CLCC</b>	15
	White, 480–500V AC	<b>BZ0CLCD</b>	15
	White, 500–600V AC	<b>BZ0CLCE</b>	15

Notes: • The padlocking device cannot be used together with the emergency pushbutton or undervoltage trip device with auxiliary contact.  
 • The emergency pushbutton cannot be used together with the undervoltage trip device with auxiliary contact.


# Manual Motor Starters Dimensions

## ■ Dimensions, mm


- Surface mounting
- For without accessory

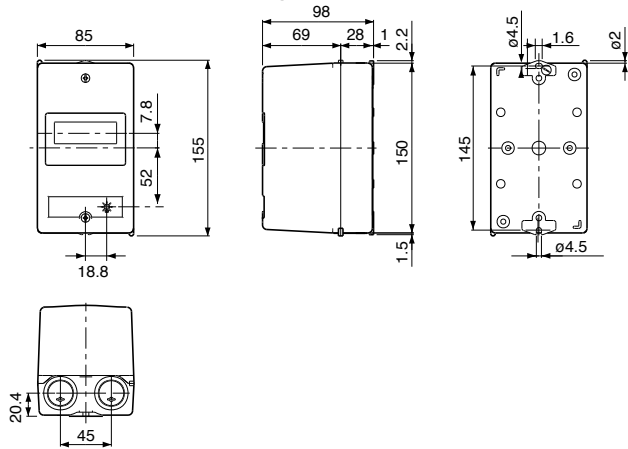


- Flush mounting
- For without accessory

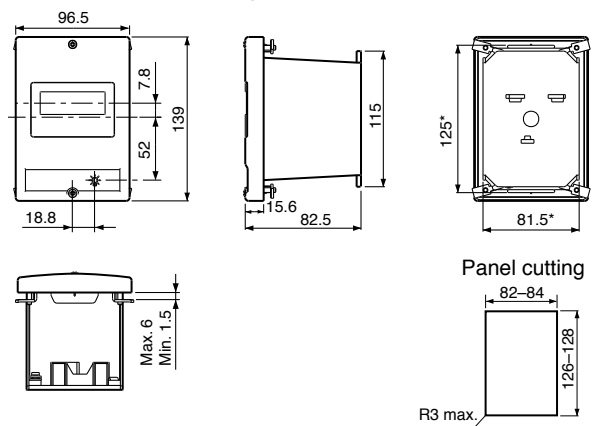


## For with padlocking device

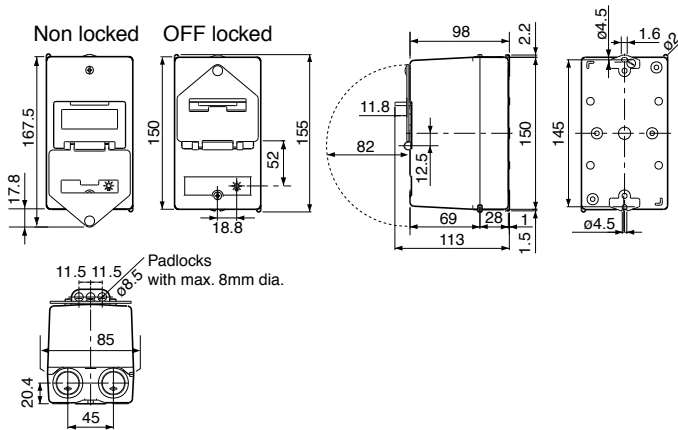


## For with padlocking device

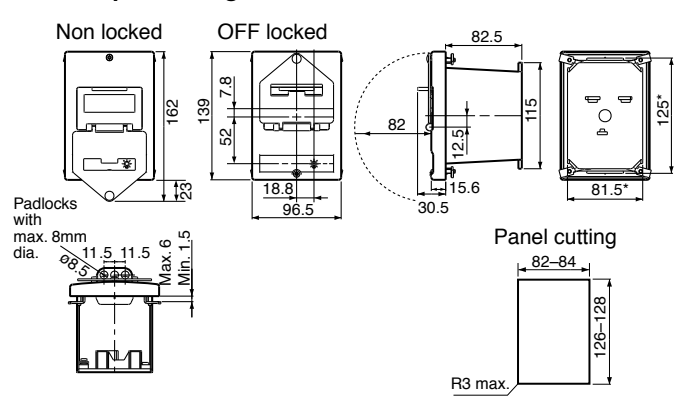

## For with emergency pushbutton

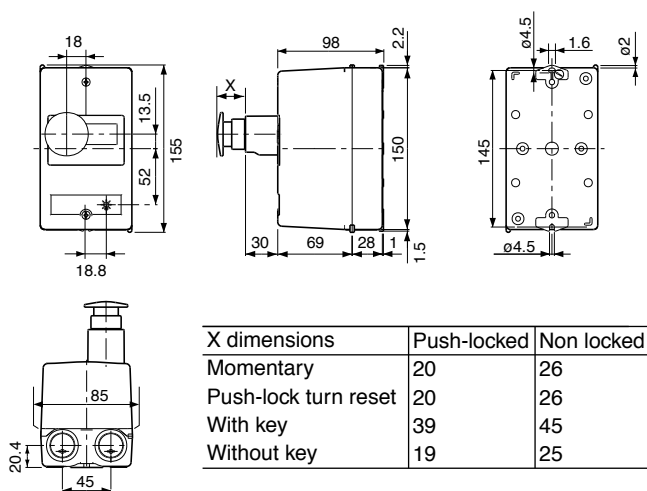

## For with emergency pushbutton

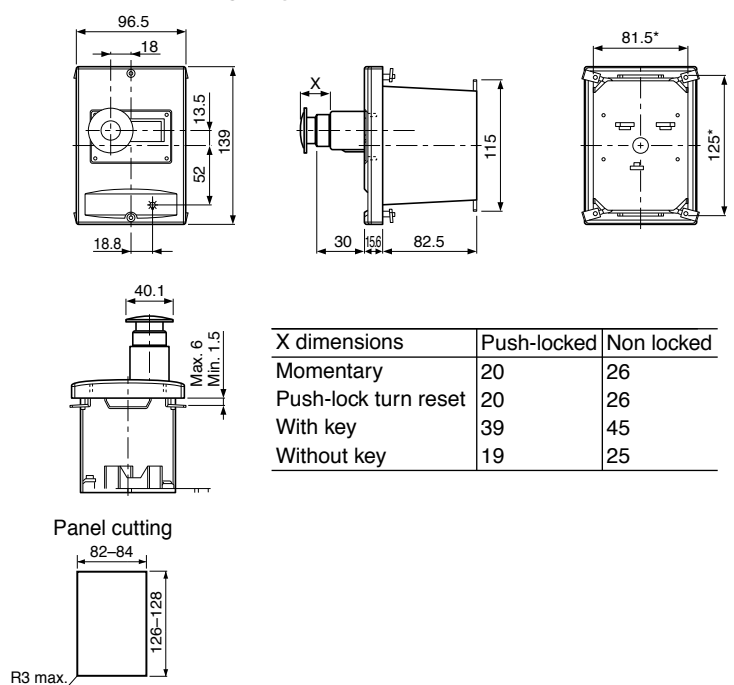


# Contactors SC-M and SC-E series

## General information

### 3 to 100HP at 480V AC

The SC-M and SC-E series further enhance the high reliability of the SC series with full conformance to International standards.

In addition to the five basic concepts of the existing SC series magnetic contactors and motor starters — international standardization, compactness, safety, utility, and ecology — the SC-M and SC-E series take the line-up to the next step in utility with a new finger protection terminal and box lug terminal construction.

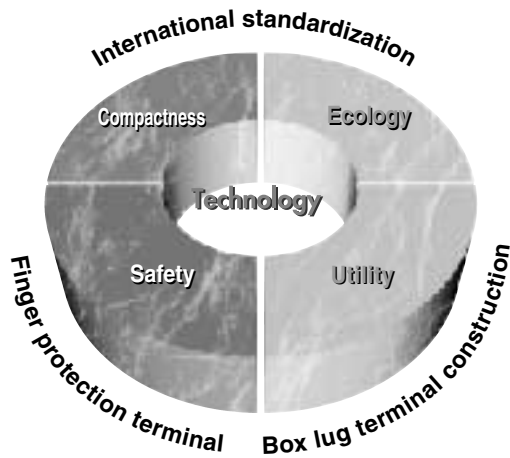

#### International standardization

IEC 60947-4-1, EN 60947-4-1, VDE 0660  
 UL 508, CSA C 22.2, JIS C 8201-4-1  
 [Approved cUL (File No. E42419, E44592),  
 TÜV (R2018010, R2150072, R50013402)]

#### Compactness

- SC-M01, M02: 45mm wide
- SC-E02 to E05: 43mm wide, SC-E1 to E2S: 54mm wide
- SC-E3, E4: 67mm wide, SC-E5: 88mm wide
- SC-E6: 100mm wide, SC-E7: 115mm wide
- Reducing mounting area

#### Safety

- Terminals with finger-touch protection (DIN 57106/  
 VDE 0106 Teil100)


#### Utility

- Box lug terminal construction
- Long electrical life
- Reduction of wiring work

#### Ecology


- Reducing power consumption
- Recycled thermoplastic resin used for plastic parts.
- The names of materials are indicated on all major parts to facilitate their recycling.

#### SC-M series

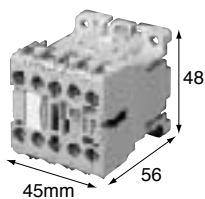


SC-M01, M02


#### SC-E series

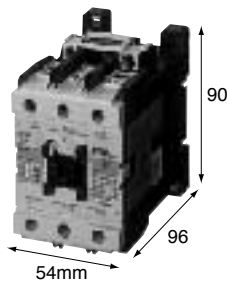

SC-E1 to E2S

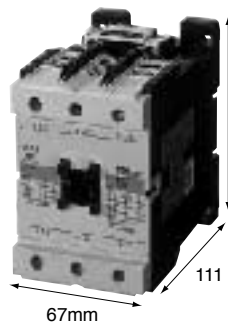

SC-E3, E4

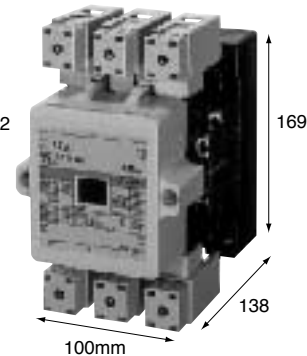












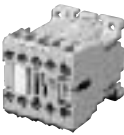


SC-E6 with SUPER magnet



















# Contactors SC-M and SC-E series

## Quick reference guide

Contactor	AC operating	SC-M01	SC-M02	SC-E02	SC-E03	SC-E04	SC-E05	SC-E1
	DC operating	SC-M01/G	SC-M02/G	SC-E02/G	SC-E03/G	SC-E04/G	SC-E05/G	SC-E1/G
								
		KK02-292	KK02-292	AF01-12	AF01-11	AF01-10	KK01-105	AF01-8
Rating of 3-phase motor (HP)								
200V		1-1/2	3	2	3	5	5	7 1/2
220-240V		1-1/2	3	2	3	5	7 1/2	10
400-480V		3	5	5	7 1/2	10	15	25
550-600V		3	5	5	7 1/2	10	15	25
Rated operational current (A)								
200V		6.9	11	7.8	11	17.5	17.5	25.3
220-240V		6	9.6	6.8	9.6	15.2	22	28
400-480V		4.8	7.6	7.6	11	14	21	34
550-600V		3.9	6.1	6.1	9	11	17	27
Rated thermal current AC-1 (A)		20	20	20	20	25	32	50
Auxiliary contact		1NO, 1NC	1NO, 1NC	–	–	–	–	–
Dimensions AC operated		45×48×56		43×80×81				54×90×96
W×H×D (mm) DC operated		45×48×68		43×80×108				54×90×121.5
Standard		IEC 60947-1, EN 60947-4-1, VDE 0660, UL 508, CSA C22.2						
<b>Thermal overload relay</b>				<b>TK-E02</b>	<b>TK-E02</b>	<b>TK-E02</b>	<b>TK-E02</b>	<b>TK-E2</b>
								
				KK01-86	KK01-86	KK01-86	KK01-86	KK01-88
Ampere setting range (A)				0.1–0.15	0.1–0.15	0.1–0.15	0.1–0.15	4–6
				0.13–0.2	0.13–0.2	0.13–0.2	0.13–0.2	5–8
				0.15–0.24	0.15–0.24	0.15–0.24	0.15–0.24	6–9
				0.2–0.3	0.2–0.3	0.2–0.3	0.2–0.3	7–11
				0.24–0.36	0.24–0.36	0.24–0.36	0.24–0.36	9–13
				0.3–0.45	0.3–0.45	0.3–0.45	0.3–0.45	12–18
				0.36–0.54	0.36–0.54	0.36–0.54	0.36–0.54	18–26
				0.48–0.72	0.48–0.72	0.48–0.72	0.48–0.72	24–36
				0.64–0.96	0.64–0.96	0.64–0.96	0.64–0.96	
				0.8–1.2	0.8–1.2	0.8–1.2	0.8–1.2	
				0.95–1.45	0.95–1.45	0.95–1.45	0.95–1.45	
				1.4–2.2	1.4–2.2	1.4–2.2	1.4–2.2	
				1.7–2.6	1.7–2.6	1.7–2.6	1.7–2.6	
				2.2–3.4	2.2–3.4	2.2–3.4	2.2–3.4	
				2.8–4.2	2.8–4.2	2.8–4.2	2.8–4.2	
				4–6	4–6	4–6	4–6	
				5–8	5–8	5–8	5–8	
				6–9	6–9	6–9	6–9	
				7–11	7–11	7–11	7–11	
					9–13	9–13	9–13	
						12–18	12–18	
							16–22	
							20–25	
Dimensions W×H×D (mm)				53×60.5×80.5				54×78.5×97
Standard		IEC 60947-1, EN 60947-4-1, VDE 0660, UL 508, CSA C22.2						

# Contactors SC-M and SC-E series

## Quick reference guide

Contactors	AC operating	SC-E2	SC-E2S	SC-E3	SC-E4	SC-E5	SC-E6	SC-E7	
	DC operating	SC-E2/G	SC-E2S/G	SC-E3/G	SC-E4/G				
									
		AF01-7	AF01-6	AF01-5	AF01-4	AF01-3	AF01-2	AF01-1	
Rating of 3-phase motor (HP)									
200V		10	15	20	25	30	40	50	
220-240V		15	20	25	30	30	40	50	
400-480V		30	30	50	50	60	75	100	
550-600V		30	30	50	50	75	100	125	
Rated operational current (A)									
200V		32.2	48.3	63.1	78.2	92	119.6	149.5	
220-240V		42	54	68	80	80	104	130	
400-480V		40	40	65	65	77	96	124	
550-600V		32	32	52	52	77	99	125	
Rated thermal current AC-1 (A)		60	65	100	105	150	150	200	
Auxiliary contact		–	–	–	–	2NO+2NC	2NO+2NC	2NO+2NC	
Dimensions W×H×D (mm)	AC operated	54×90×96			67×112×111		88×155×132	100×169×138	115×175×140
	DC operated	54×90×121.5			67×112×130				
Standard		IEC 60947-1, EN 60947-4-1, VDE 0660, UL 508, CSA C22.2							
<b>Thermal overload relay</b>		<b>TK-E2</b>	<b>TK-E2</b>	<b>TK-E3</b>	<b>TK-E3</b>	<b>TK-E5</b>	<b>TK-E6</b>	<b>TK-E6</b>	
									
		KK01-88	KK01-88	KK01-87	KK01-87	KK01-85	KK01-84	KK01-84	
Ampere setting range (A)									
		4–6	4–6	7–11	7–11	18–26	45–65	45–65	
		5–8	5–8	9–13	9–13	24–36	53–80	53–80	
		6–9	6–9	12–18	12–18	28–40	65–95	65–95	
		7–11	7–11	18–26	18–26	34–50	85–125	85–125	
		9–13	9–13	24–36	24–36	45–65		110–160	
		12–18	12–18	28–40	28–40	65–95			
		18–26	18–26	34–50	34–50	85–105			
		24–36	24–36	45–65	45–65				
		32–42	32–42	48–68	48–68				
			40–50		64–80				
			44–54						
Dimensions W×H×D (mm)		54×78.5×97			68×89.5×107.5		76.5×105×106	100×122×123	
Standard		IEC 60947-1, EN 60947-4-1, VDE 0660, UL 508, CSA C22.2							

# Contactors SC-M and SC-E series

## Quick reference guide

### Available coil

#### AC coil, SC-M01 to SC-M02 and SC-E02 to SC-E4

Code	Coil operating voltage and frequency
24VAC	24V AC 50Hz / 24–26V AC 60Hz
48VAC	48V AC 50Hz / 48–52V AC 60Hz
100VAC	100V AC 50Hz / 100–110V AC 60Hz
110VAC	100–110V AC 50Hz / 110–120V AC 60Hz
120VAC	110–120V AC 50Hz / 120–130V AC 60Hz
200VAC	200V AC 50Hz / 200–220V AC 60Hz
220VAC	200–220V AC 50Hz / 220–240V AC 60Hz
400VAC	380–400V AC 50Hz / 400–440V AC 60Hz
440VAC	415–440V AC 50Hz / 440–480V AC 60Hz
500VAC	480–500V AC 50Hz / 500–550V AC 60Hz

#### DC coil, SC-M01/G to SC-M02/G and SC-E02/G to SC-E4/G

Code	Coil operating voltage
12VDC	12V DC
24VDC	24V DC
48VDC	48V DC
100VDC	100V DC
110VDC	110V DC
200VDC	200V DC

#### Super Magnet Coil, SC-E5 to SC-E7

Code	Coil operating voltage and frequency
24V	24–25V AC 50/60Hz, 24V DC
48V	48–50V AC 50/60Hz, 48V DC
100V	100–127V AC 50/60Hz, 100–120V DC
200V	200–250V AC 50/60Hz, 200–240V DC
400V	380–450V AC 50/60Hz
500V	460–575V AC 50/60Hz

### Coil characteristics

#### AC operation

Frame size	Power consumption (VA)		Power loss (W)		Pick-up voltage (V) *1	Drop-out voltage (V) *1	Operating time (ms)	
	Inrush 50/60 Hz	Sealed 50/60 Hz	50Hz	60Hz			Coil ON → Contact ON	Coil OFF → Contact OFF
M01, M02	32/36	6/6	1.5	1.6	0.8–1.1 X US	0.35–0.55 X US	7–12	6–13
E02 to E05	90/95	9/9	2.7	2.8	0.85–1.1 X US	0.2–0.75 X US	9–20	5–16
E1 to E2S	120/135	12.7/12.4	3.6	3.8	0.85–1.1 X US	0.2–0.75 X US	10–17	6–13
E3, E4	180/190	13.3/13.4	4.5	5	0.85–1.1 X US	0.2–0.75 X US	10–18	8–18
E5	80/95	4/4.6	3.2	3.6	0.85–1.1 X US	0.2–0.75 X US	39–45	27–33
E6, E7	190/230	4.9/5.8	3.4	3.7	0.8–1.1 X US	0.1–0.65 X US	31–37	30–36

Note: \*1 US: Rated coil voltage

#### DC operation

Frame size	Power consumption (VA)		Time constant (ms)	Pick-up voltage (V) *1	Drop-out voltage (V) *1	Operating time (ms)	
	Inrush	Sealed				Coil ON → Contact ON	Coil OFF → Contact OFF
M01/G, M02/G	3	3	35	0.8–1.1 X US	0.2–0.4 X US	24–27	5–8
E02/G to E05/G	7	7	50	0.85–1.1 X US	0.1–0.75 X US	45–49	10–26
E1/G to E2S/G	9	9	60	0.85–1.1 X US	0.1–0.75 X US	40–50	8–17
E3/G, E4/G	12	12	70	0.85–1.1 X US	0.1–0.75 X US	60–70	14–21
E5	20	2.8	1	0.85–1.1 X US	0.1–0.75 X US	35–41	26–32
E6, E7	225	3.2	1	0.8–1.1 X US	0.1–0.65 X US	28–34	27–33

Note: \*1 US: Rated coil voltage

### Auxiliary contact ratings for UL and CSA

Frame size	Rated insulation voltage (V)	Rated thermal current (A)	Making and breaking current (A)					
			AC (rating code A600)			DC (rating code Q300)		
			Voltage	Making	Breaking	Voltage	Making	Breaking
M01, M02 M01/G, M02/G	600	16	120V	60	6	125V	0.55	0.55
			240V	30	3	250V	0.27	0.27
			480V	15	1.5	301-600V	0.1	0.1
			600V	12	1.2			
E02 to E4, E02/G to E4/G	–	–	–	–	–	–	–	–
E5 to E7	600	10	120V	60	6	125V	0.55	0.55
			240V	30	3	250V	0.27	0.27
			480V	15	1.5			
			600V	12	1.2			

# Contactors SC-M and SC-E series

## Ordering information and Characteristics

### Ordering information

Specify the following :

1. Part number
2. Operating coil voltage code
3. Auxiliary contact arrangement (SC-M series only)

**SC-M 01 /G - 24VAC - 1NO**

Product category

Frame size

AC coil operating: None  
DC coil operating: /G

Aux. contact arrangement  
1NO or 1NC required

Operating coil voltage code  
(see page 34)

**SC-E 02 /G - 24VAC**

Product category


Frame size

Operating coil voltage code  
(see page 34)


AC coil operating: None  
DC coil operating: /G

### Electrical durability

#### AC-1 duty / 380 to 440 V AC / SC-M

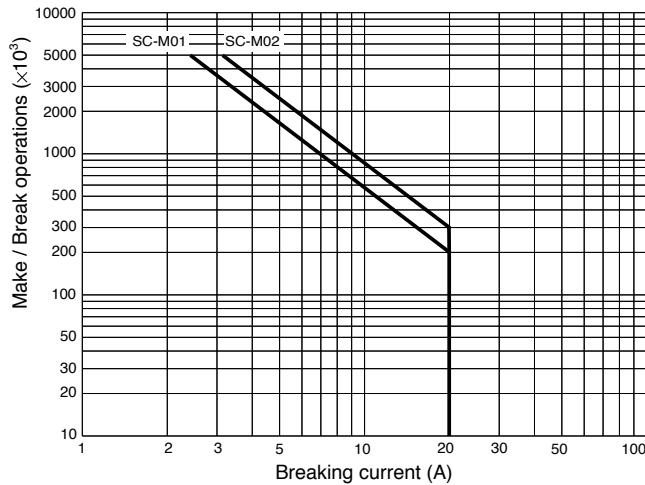

#### AC-3 duty / 380 to 440 V AC / SC-M

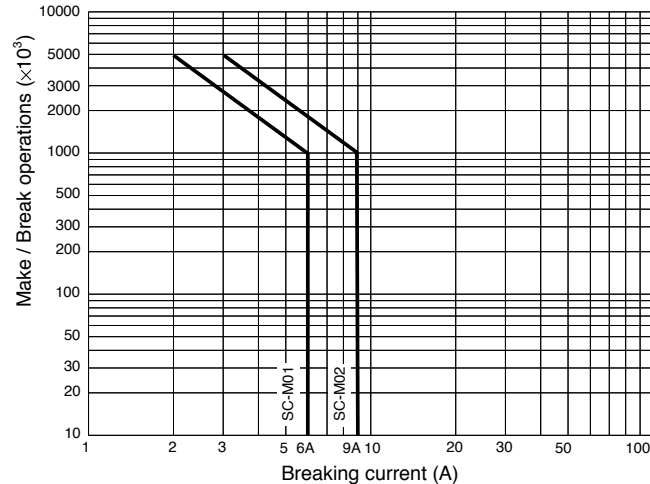


# Contactors SC-M and SC-E series


## Ordering information and Characteristics

### Electrical durability


#### AC-1 duty / SC-E02 to SC-E7

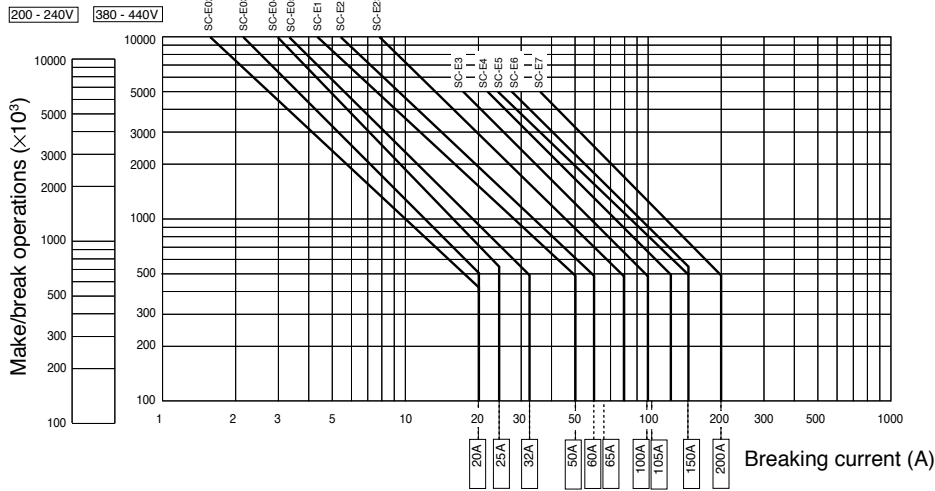

#### AC-3 duty / SC-E02 to SC-E05

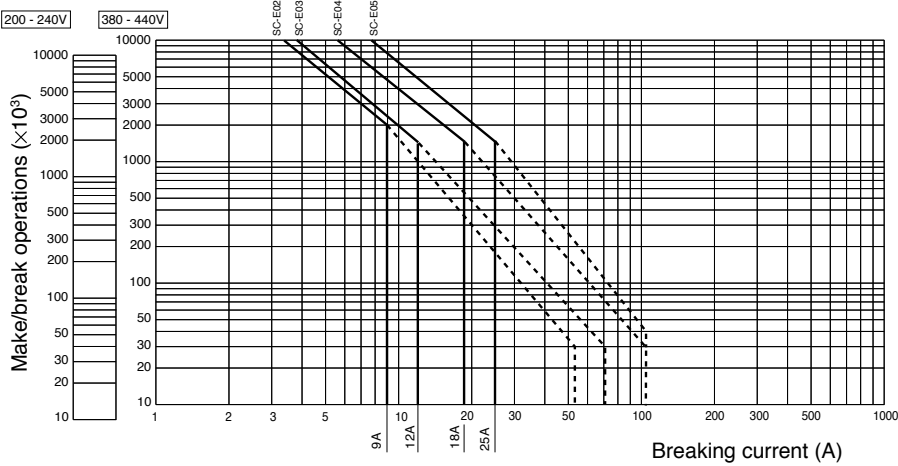

#### AC-3 duty / SC-E1 to SC-E7

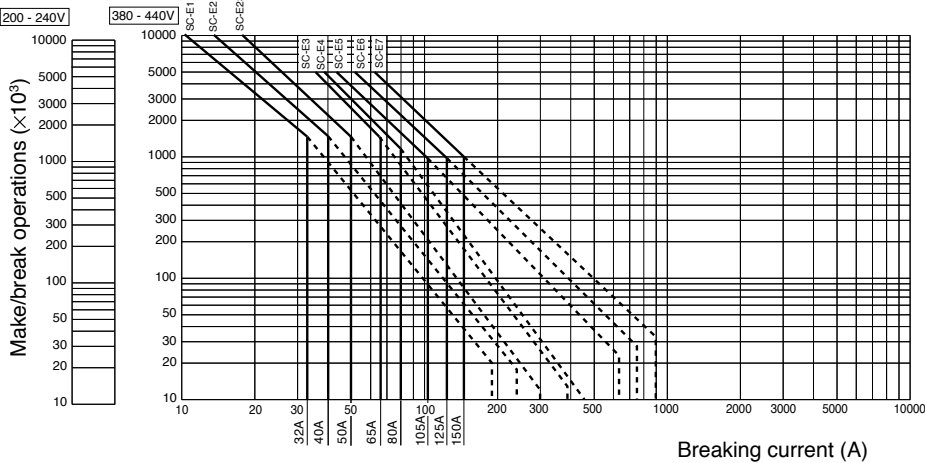


# Contactors SC-M and SC-E series

## Optional accessories

### • Auxiliary contact blocks with terminal covers

Applicable contactor	Mounting	No. of contacts	Contact arrangement	Part number		
SC-M01, M02 SC-M01/G, M02/G	Front mounting	4	4NO	<b>SZ-MA40</b>		
			3NO+1NC	<b>SZ-MA31</b>		
			2NO+2NC	<b>SZ-MA22</b>		
			1NO+3NC	<b>SZ-MA13</b>		
			4NC	<b>SZ-MA04</b>		
		2	2NO	<b>SZ-MA20</b>		
			1NO+1NC	<b>SZ-MA11</b>		
			2NC	<b>SZ-MA02</b>		
			Side mounting	1	1NO	<b>SZ-MAS10</b>
				1NC	<b>SZ-MAS01</b>	
SC-E02 to E4 SC-E02/G to E4/G	Front mounting	4	4NO	<b>SZ-A40/T</b>		
			3NO+1NC	<b>SZ-A31/T</b>		
			2NO+2NC	<b>SZ-A22/T</b>		
			2	2NO	<b>SZ-A20/T</b>	
				1NO+1NC	<b>SZ-A11/T</b>	
		2NC		<b>SZ-A02/T</b>		
		Side mounting	2	1NO+1NC	<b>SZ-AS1/T</b>	
			2	1NO+1NC	<b>SZ-AS2/T</b>	

Front mounting

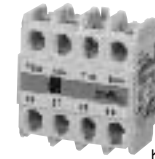

KK02-081


**SZ-A22/T**



AF88-080

**SZ-A11/T**

Side mounting

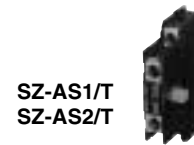

**SZ-AS1/T**  
**SZ-AS2/T**

KK01-090

### Contact ratings

• Based on UL and CSA

Rated thermal current (A)	Making and breaking current (A)					
	AC (rating code A600)			DC (rating code Q300)		
	Volts	Making	Breaking	Volts	Making	Breaking
10	120V	60	6	125V	0.55	0.55
	240V	30	3	250V	0.27	0.27
	480V	15	1.5			
	600V	12	1.2			

### • Main circuit surge suppression units

Applicable contactor	Mounting	Rated voltage and frequency	CR constant	Applicable 3-phase motor	Part number
SC-M01, M02, M01/G, M02/G	–	–	–	–	–
SC-E02 to E05 SC-E02/G to E05/G	Front mounting	250V AC	C=0.22 μF	200–240V AC	<b>SZ-ZM1E</b>
	Side mounting	50/60Hz	R=100 Ω	1-1/2–5HP	<b>SZ-ZM2E</b>
SC-E1 to E4 SC-E1/G to E4/G	Front mounting	250V AC	C=0.33 μF	200–240V AC	<b>SZ-ZM3E</b>
	Side mounting	50/60Hz	R=47 Ω	1-1/2–30HP	<b>SZ-ZM4E</b>

### • Coil surge suppression units

Applicable contactor	Operating coil voltage	Device	Operation indicator	Part number		
SC-M01, M02	–	12–60VAC	–	<b>SZ-MZ1</b>		
		72–250VAC	–	<b>SZ-MZ2</b>		
– SC-M01/G, M02/G	6–250V DC	Diode	–	<b>SZ-MZ3</b>		
			SC-E02 to E05 SC-E02/G to E05/G	Varistor	24–48V AC/DC	<b>SZ-Z1</b>
					100–250V AC/DC	<b>SZ-Z2</b>
–	380–440V AC/DC	–	<b>SZ-Z3</b>			
SC-E02 to E05 SC-E02/G to E05/G	24–48V AC/DC	Varistor	Red LED	<b>SZ-Z6</b>		
			Red LED	<b>SZ-Z7</b>		
SC-E1 to E4 SC-E1/G to E4/G	24–48V AC/DC	CR	–	<b>SZ-Z31</b>		
			100–250V AC/DC	<b>SZ-Z32</b>		
			380–440V AC/DC	<b>SZ-Z33</b>		
SC-E02 to E05 SC-E02/G to E05/G	24–48V AC/DC	CR	–	<b>SZ-Z4</b>		
			100–250V AC/DC	<b>SZ-Z5</b>		
SC-E02 to E05 SC-E02/G to E05/G	24–48V AC/DC	CR	Red LED	<b>SZ-Z8</b>		
			Red LED	<b>SZ-Z9</b>		
SC-E1 to E4 SC-E1/G to E4/G	24–48V AC/DC	CR	–	<b>SZ-Z34</b>		
			100–250V AC/DC	<b>SZ-Z35</b>		
			–	<b>SZ-Z36</b>		
– SC-E1/G to E4/G	24–48V AC/DC	CR	–	<b>SZ-Z37</b>		
			100–250V AC/DC	<b>SZ-Z37</b>		

Main circuit surge suppression units



KK02-077

Front mounting  
**SZ-ZM1E**



KK02-079

Side mounting  
**SZ-ZM4E**

Coil surge suppression unit



CR  
**SZ-Z4**

AF88-766


# Contactors SC-M and SC-E series

## Optional accessories

### • Power Connection kit for reversing for SC-M and SC-E contactor

Description	Applicable contactor	Part number	Mass (g)
Line side and load side wire kits	SC-M01, M02, M01/G, M02/G	<b>SZ-MRWC</b>	4.2
Line side wire kit	SC-E02 to E05	<b>SZ-ERW1/A</b>	19
Load side wire kit	SC-E02/G to E05/G	<b>SZ-ERW1/B</b>	17
Load side wire kit for the contactor to be connected with overload relay.		<b>SZ-ERW1/D</b>	13
Line side wire kit	SC-E1 to E2S,	<b>SZ-ERW2/A</b>	48
Load side wire kit	SC-E1/G to E2S/G,	<b>SZ-ERW2/B</b>	42
Load side wire kit for the contactor to be connected with overload relay.		<b>SZ-ERW2/D</b>	31
Line side wire kit	SC-E3,E4	<b>SZ-ERW3/A</b>	162
Load side wire kit	SC-E3/G,E4/G	<b>SZ-ERW3/B</b>	138
Load side wire kit for the contactor to be connected with overload relay.		<b>SZ-ERW3/D</b>	110

Power Connection kit for reversing for SC-M and SC-E contactor

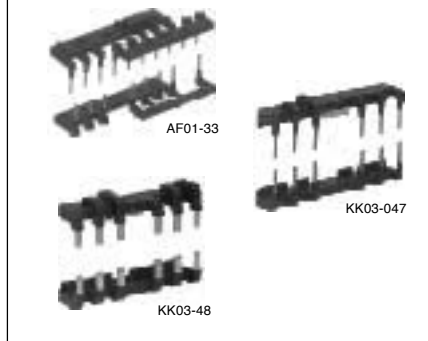

### • Mechanical interlock unit

Description	Applicable contactor	Part number	Mass (g)
	SC-M01, M02, M01/G, M02/G	<b>SZ-MRM</b>	3
	SC-E02 to E4	<b>SZ-RM</b>	27
	SC-E02/G to E4/G		



### • Preparing to make a reversing contactors and motor starters.

#### <For SC-M contactor>

1. SC-M\_ x 2
2. SZ-MRWC x 1
3. SZ-MRM x 1


#### <For SC-E contactor>

1. SC-E\_ x 2
2. SZ-ERW\_/A x 1
3. SZ-ERW\_/B x 1
4. SZ-RM x 1
5. SZ-\_A/T x 2


#### <For SC-E motor starters>

1. SC-E\_ x 2
2. TK-E\_ X1
3. SZ-ERW\_/A x 1
4. SZ-ERW\_/D x 1
5. SZ-RM x 1
6. SZ-\_A/T x 2

Example of connecting, SC-M reversing contactor

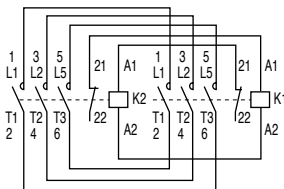

Example of connecting, SC-E reversing motor starter

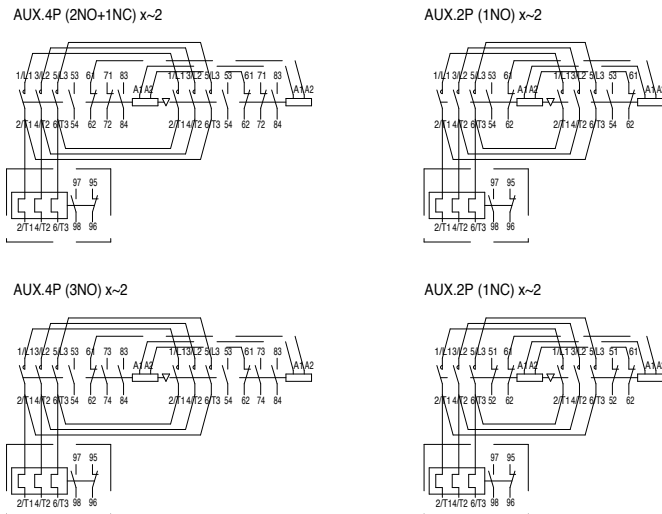

# Contactors SC-M and SC-E series

## Optional accessories

### ■ Replacement coils

Replacement coil for SC-M series is not available

Replacement coil for SC-E series, AC coil is available, DC coil is not available

Contactors part number	AC coil part number	Super magnet coil part number
SC-E02 to E05	<b>4NC0H-#MC</b>	<b>N/A</b>

Replace the # symbol with the desired code, shown in the chart below.

Code letter #	AC coil 60Hz	AC coil 50Hz
E	24-26V	24V
F	48-52V	48V
A	100-110V	100V
1	110-120V	100-110V
G	120-130V	110-120V
B	200-220V	200V
2	220-240V	200-220V
C	400-440V	380-400V
4	440-480V	415-440V
5	550-600	500-550V

Contactors part number	AC coil part number (Chart 1)	Super magnet coil part number (Chart 2)
SC-E1, E2 and E2S	<b>SZ-GM/N1-#</b>	<b>N/A</b>
SC-E3 and E4	<b>SZ-GM/N2S-#</b>	<b>N/A</b>
SC-E5	<b>N/A</b>	<b>SZ-GS/N5-#</b>
SC-E6 and E7	<b>N/A</b>	<b>SZ-GS/N6-#</b>

Replace the # symbol with the desired code, shown in the charts below.

Chart 1 : AC coil

Code letter #	AC coil 60Hz	AC coil 50Hz
24	24-26V	24V
48	48-52V	48V
100	100-110V	100V
110	110-120V	100-110V
120	120-130V	110-120V
200	200-220V	200V
220	220-240V	200-220V
400	400-440V	380-400V
440	440-480V	415-440V
500	550-600	500-550V

Chart 2 : Super magnet coil


Code letter #	AC coil 50/60Hz	DC
24	24-25V	24V
48	48-50V	48V
100	100-127V	100-120V
200	200-250V	200-240V
400	380-450V	N/A
500	460-575V	N/A



# Contactors SC-M and SC-E series Dimensions

## ■ Dimensions, mm

### • Non-reversing AC operated SC-M01, SC-M02

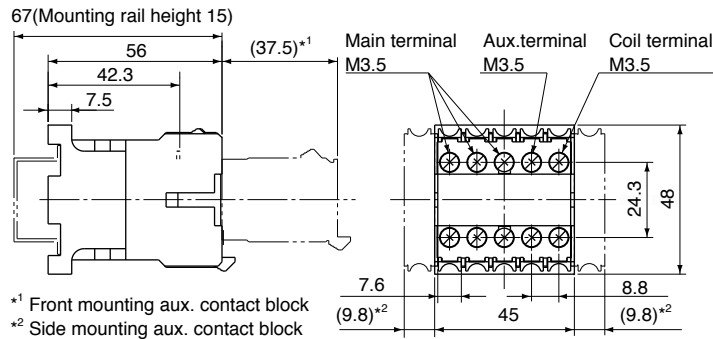


\*1 Front mounting aux. contact block  
\*2 Side mounting aux. contact block


Mass: 0.17kg

Use the two mounting holes on a diagonal line ① or ② to mount a contactor.

## ■ Wiring diagrams

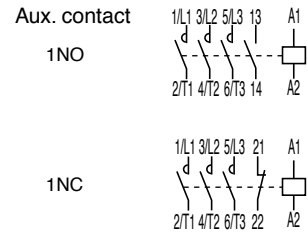


### • Non-reversing DC operated SC-M01/G, SC-M02/G

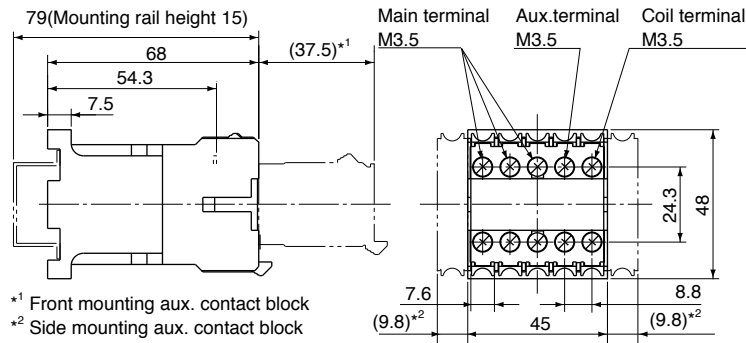


\*1 Front mounting aux. contact block  
\*2 Side mounting aux. contact block

Mass: 0.23kg


Use the two mounting holes on a diagonal line ① or ② to mount a contactor.

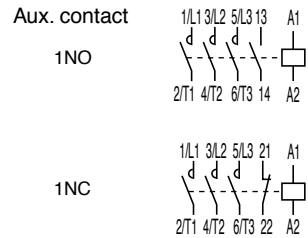


### • Auxiliary contact blocks Front mounting SZ-MA40, MA31, MA22, MA13, MA04

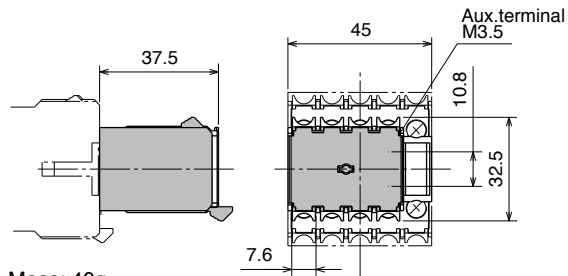


Mass: 40g

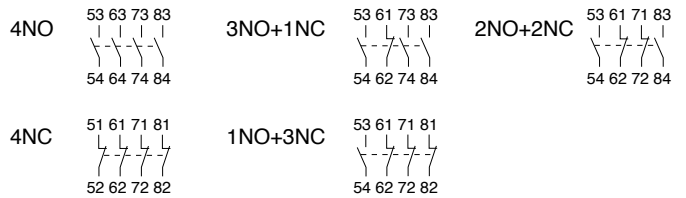

### SZ-MA20, MA11, MA02

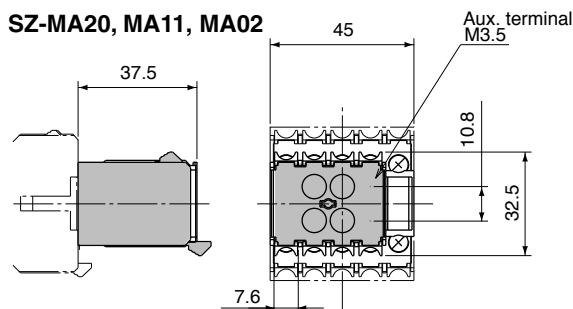

Mass: 30g

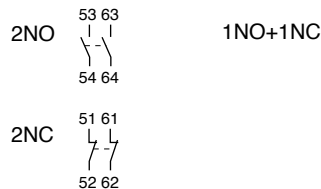


# Contactors SC-M and SC-E series


## Dimensions

### ■ Dimensions, mm


- Aux. contact blocks (Side mounting)

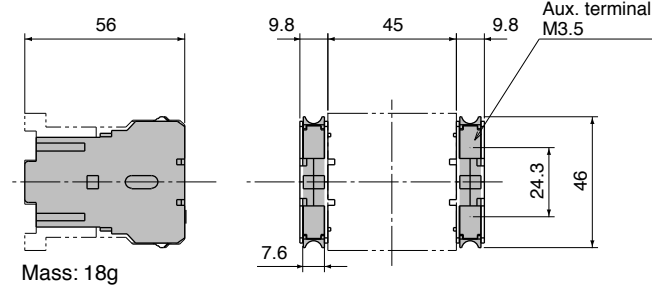

- Coil surge suppression unit

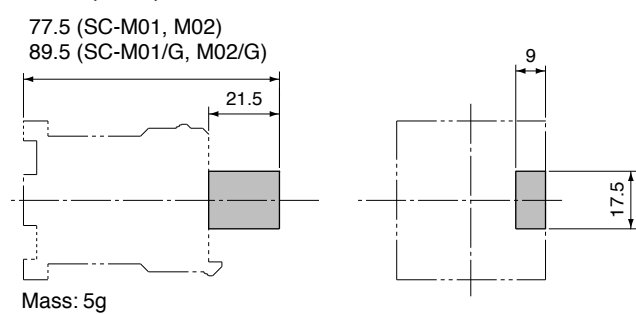


- Power Connection kit for reversing for SC-M

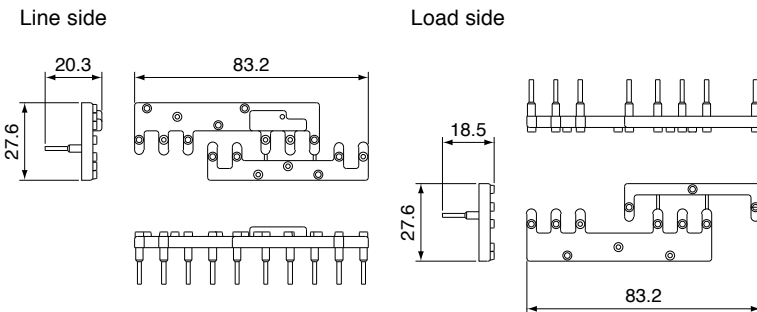


### ■ Wiring diagrams


- Aux. contact
- Mounted on the right side




- Mounted on the left side



- Internal circuit

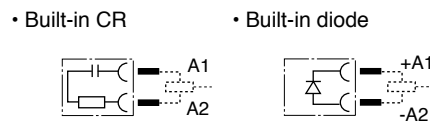

- Mechanical interlock unit

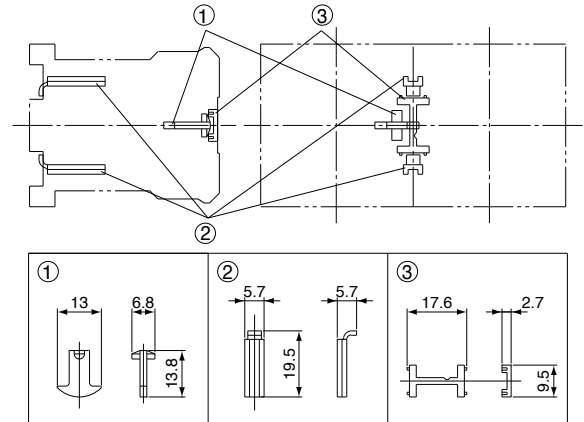

### ■ Standard operating conditions

Ambient temperature	Operating: -5 to 55°C No sudden temperature changes resulting in condensation or icing (The average temperature over a 24-hour period must not exceed 35°C) Storage: -40 to 65°C
Humidity	45 to 85%RH
Altitude	2000m or lower
Atmosphere	No excessive dust, smoke, corrosive gases, flammable gases, steam, or salt.
Vibration	10 to 55Hz 15m/s <sup>2</sup>
Shock	50m/s <sup>2</sup>
Mounting	Screw mounting, 35mm-wide top hat rail (DIN)
Mounting angle	
Standard	IEC 60947-4-1, EN 60947-4-1, VDE 0660 JIS C 8201-4-1, JEM 1038 UL 508, CSA C22.2

### ■ Wiring


Terminal screw	M3.5
Connectable wire size	1.25 to 2mm <sup>2</sup> (ø1.2 to 2mm)
Applicable round crimp terminal	7.5mm (R2-3.5)
Tightening torque	0.8 to 1.0N·m

# Contactors SC-M and SC-E series


## Dimensions

### ■ Dimensions, mm


- Non-reversing AC operated
- SC-E02, E03, E04, E05

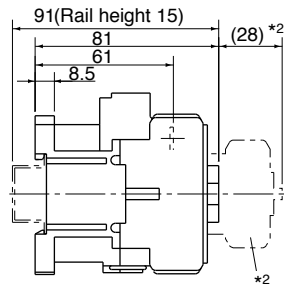

Mass: 0.33kg

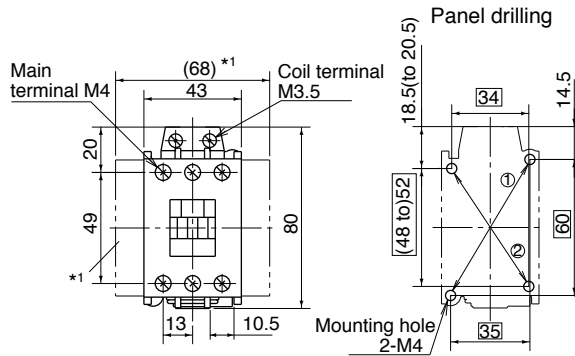


### ■ Wiring diagrams

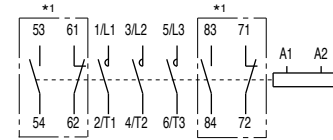



\*1 In case of aux. contact 2NO+2NC

Use the two mounting holes on a diagonal line  
 ① or ② to mount contactor  
 ①: 35 × 60 ②: 35 × (48 to 52)

### SC-E1, E2, E2S

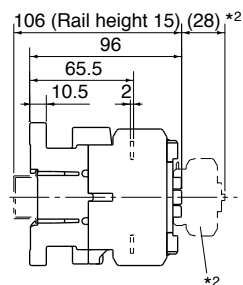


Mass : 0.58kg

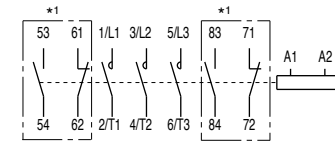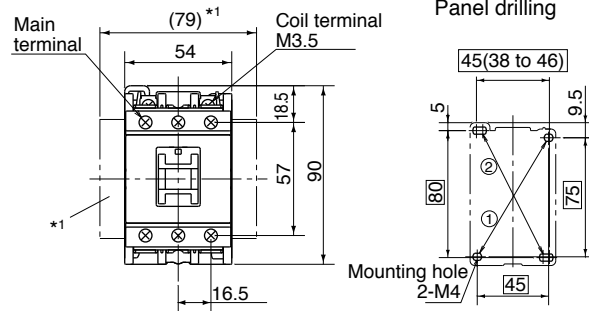



\*1 In case of aux. contact 2NO+2NC

Use the two mounting holes on a diagonal line  
 ① or ② to mount contactor  
 ①: 45 × 75 ②: 45 (38 to 46) × 80

### SC-E3, E4

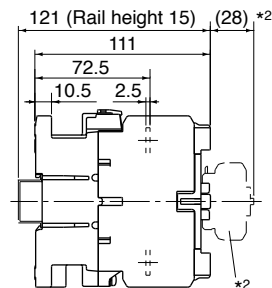


Mass: 1.1kg

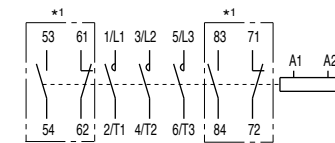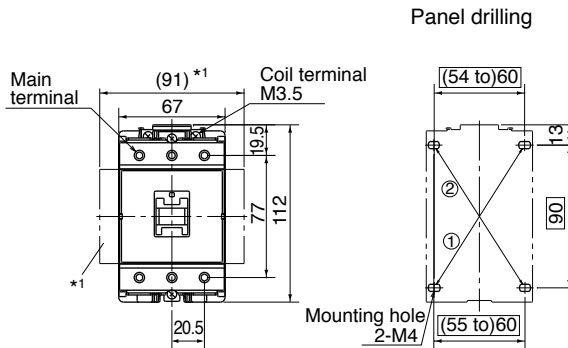



\*1 In case of aux. contact 2NO+2NC

Use the two mounting holes on a diagonal line  
 ① or ② to mount contactor  
 ①: (55 to) 60 × 90 ②: (54 to) 60 × 90

### SC-E5

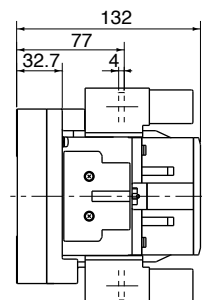

Mass: 2.0kg

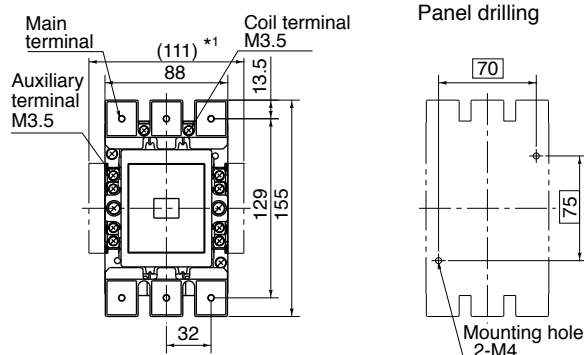

\*1 In case of aux. contact 4NO+4NC

\*1 Side mounting aux. contact block  
 \*2 Front mounting aux. contact block


# Contactors SC-M and SC-E series

## Dimensions

### ■ Dimensions, mm


#### • Non-reversing AC operated

##### SC-E6

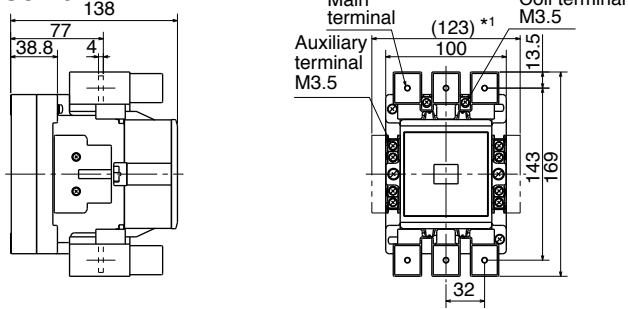

Mass: 2.6kg


##### SC-E7

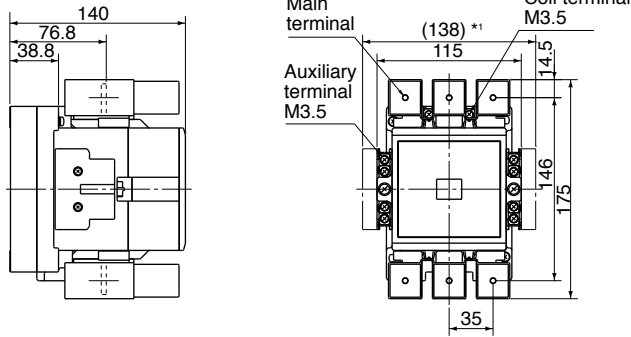

Mass: 2.9kg


#### • Non-reversing DC operated

##### SC-E02/G, E03/G, E04/G, E05/G

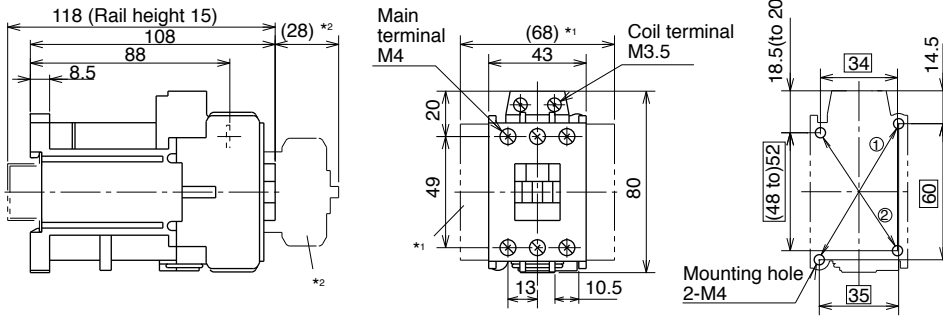

Mass: 0.59kg


##### SC-E1/G, E2/G, E2S/G

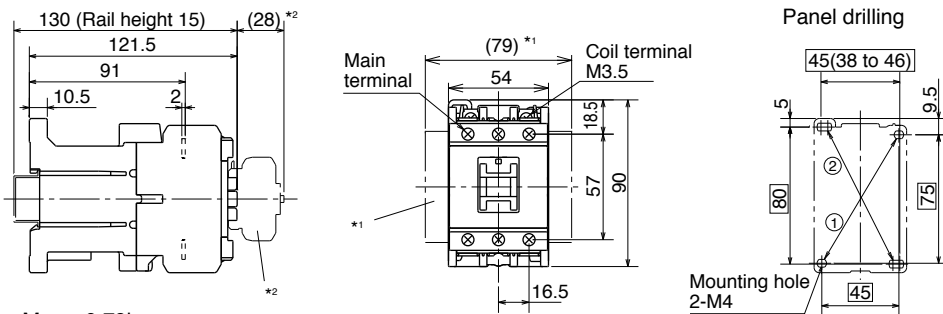


Mass: 0.79kg

\*1 Side mounting aux. contact block  
\*2 Front mounting aux. contact block


### ■ Wiring diagrams



\*1 In case of aux. contact 4NO+4NC




\*1 In case of aux. contact 4NO+4NC

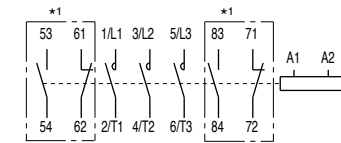

\*1 In case of aux. contact 2NO+2NC

Use the two mounting holes on a diagonal line  
① or ② to mount contactor  
①: 35 × 60 ②: 35 × (48 to 52)

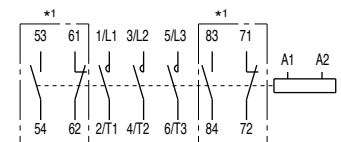


\*1 In case of aux. contact 2NO+2NC

Use the two mounting holes on a diagonal line  
① or ② to mount contactor  
①: 45 × 75 ②: 45 (38 to 46) × 80

# Contactors SC-M and SC-E series Dimensions


## ■ Dimensions, mm

- Non-reversing DC operated  
SC-E3/G, E4/G


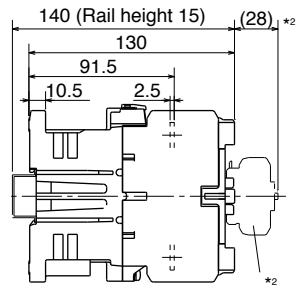


Mass: 1.4kg

- \*1 Side mounting aux. contact block
- \*2 Front mounting aux. contact block

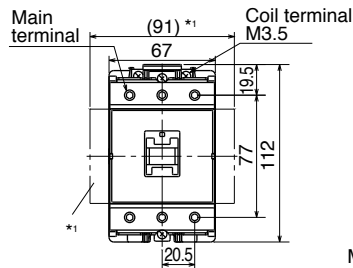

## Panel drilling

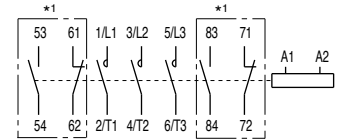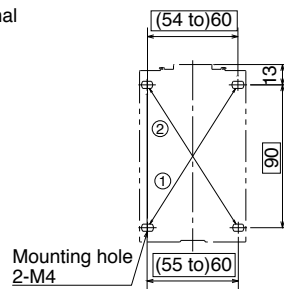

\*1 In case of aux. contact 2NO+2NC


Use the two mounting holes on a diagonal line

① or ② to mount contactor


①: (55 to) 60 × 90 ②: (54 to) 60 × 90

- Auxiliary contact blocks Front mounting  
SZ-A40/T, A31/T, A22/T, A20/T, A11/T, A02/T for SC-E02 to E4

## Contactor with aux. contact block

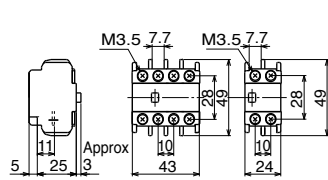


SZ-A40/T, A31/T, A22/T Mass: 36g  
SZ-A20/T, A11/T, A02/T Mass: 20g

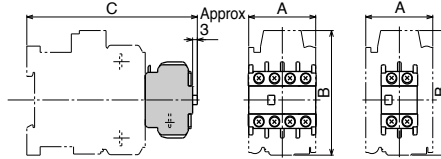


Type	A	B	C
SC-E02, E03, E04, E05	43	80	109
SC-E1, E2, E2S	54	90	124
SC-E3, E4	67	112	139

## ■ Wiring diagrams

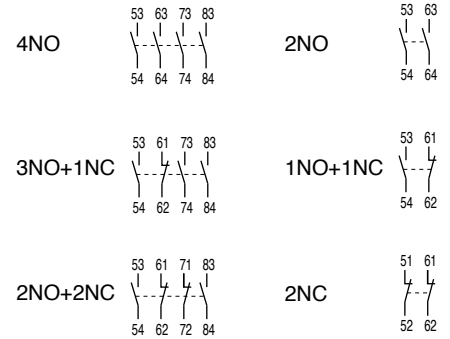


- Auxiliary contact blocks Side mounting  
SZ-AS1/T, for SC-E02 to E4

## Contactor with aux. contact block

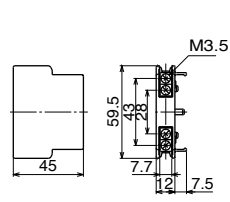

Mass: 28g

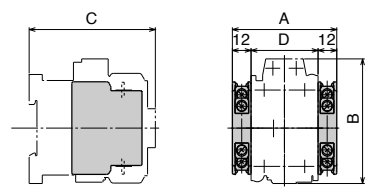

Type	A	B	C	D
SC-E02, E03, E04, E05	67	80	81	43
SC-E1, E2, E2S	78	90	96	54
SC-E3, E4	91	112	111	67

1NO+1NC Mounted on right side




Mounted on left side




- SZ-AS2/T, for SC-E5 to E7

## Contactor with aux. contact block

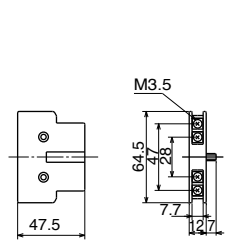

Mass: 40g

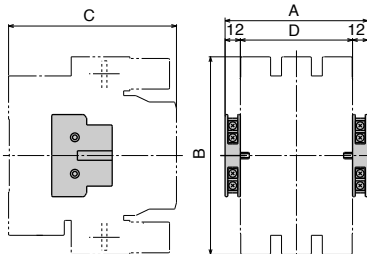

Type	A	B	C	D
SC-E5	112	155	132	88
SC-E6	124	169	138	100
SC-E7	139	175	140	115

1NO+1NC Mounted on right side



Mounted on left side




# Contactors SC-M and SC-E series

## Dimensions


### ■ Dimensions, mm

#### • Main circuit surge suppression units

##### SZ-ZM1E

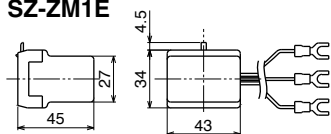


Contactors with surge suppression unit

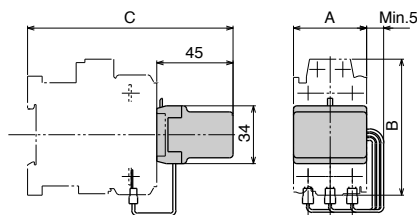


Type	A	B	C
SC-E02+SZ-ZM1E	43	80	121
SC-E03			
SC-E04			
SC-E05			
SC-E1+SZ-ZM3E	54	90	136
SC-E2			
SC-E2S			
SC-E3+SZ-ZM3E	67	112	151
SC-E4			

##### SZ-ZM3E

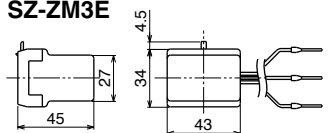


Mass: 60g

##### SZ-ZM2E




Contactors with surge suppression unit

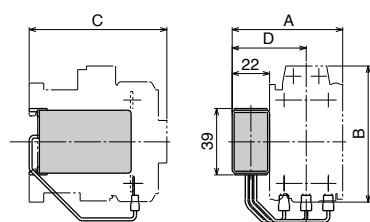


Type	A	B	C	D
SC-E02+SZ-ZM2E	65	80	81	43.5
SC-E03				
SC-E04				
SC-E05				
SC-E1				
SC-E2+SZ-ZM2E	76	90	96	49
SC-E2S				
SC-E3+SZ-ZM2E	89	112	111	55.5
SC-E4				

##### SZ-ZM4E




Mass: 60g

### Connection diagram

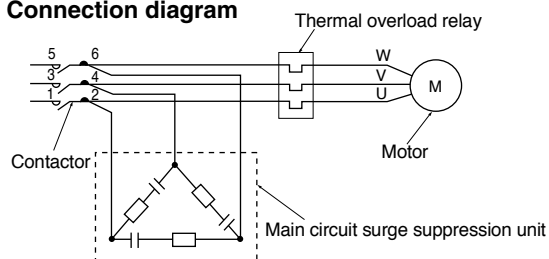


#### • Coil surge suppression units

##### SZ-Z1, Z2, Z3, Z4, Z5

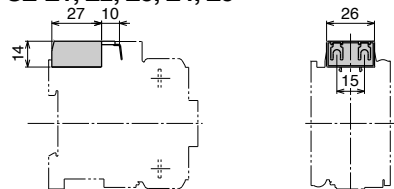


Mass: 14g

##### SZ-Z6, Z7, Z8, Z9

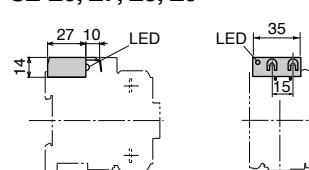


Mass: 16g

##### SZ-Z31, Z32, Z33, Z34, Z35, Z36, Z37

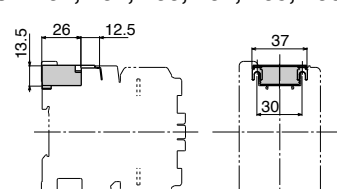


Mass: 15g


SC-E02 to E05 + SZ-Z1 to Z3  
(Built-in varistor)



SC-E02 to E05 + SZ-Z6, Z7  
(Built-in varistor with operating indicator)




SC-E1 to E4 + SZ-Z31 to Z33  
(Built-in varistor)




SC-E02 to E05 + SZ-Z4, Z5  
(Built-in CR)



SC-E02 to E05 + SZ-Z8, Z9  
(Built-in CR with operating indicator)



SC-E1 to E4 + SZ-Z34, Z35  
(Built-in CR)  
SC-E1/G to E4/G + SZ-Z36, Z37  
(Built-in CR)




# Contactors SC-M and SC-E series Dimensions


## ■ Dimensions, mm

- Power connection kit for reversing for SC-E


### SZ-ERW1/A

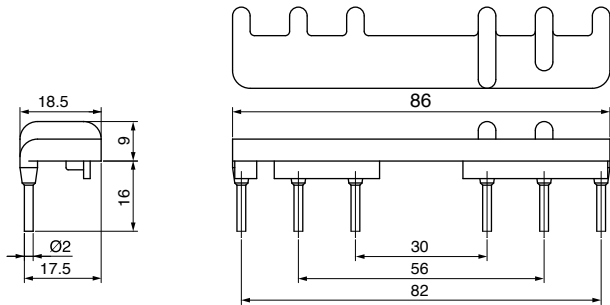


### SZ-ERW1/B

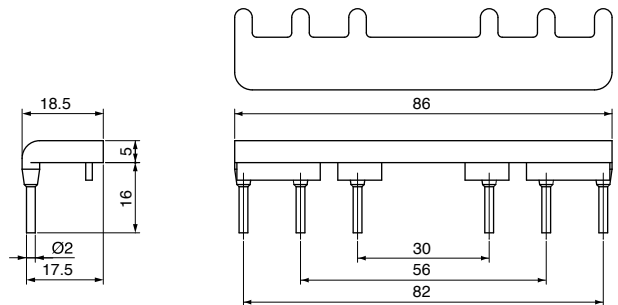


### SZ-ERW1/D

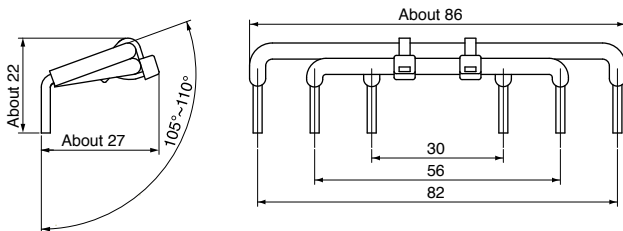

### SZ-ERW2/A

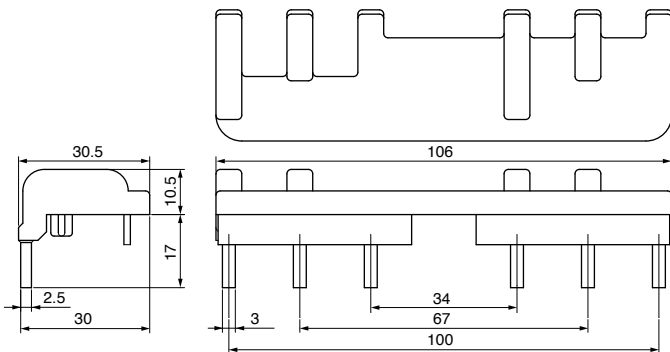

### SZ-ERW2/B

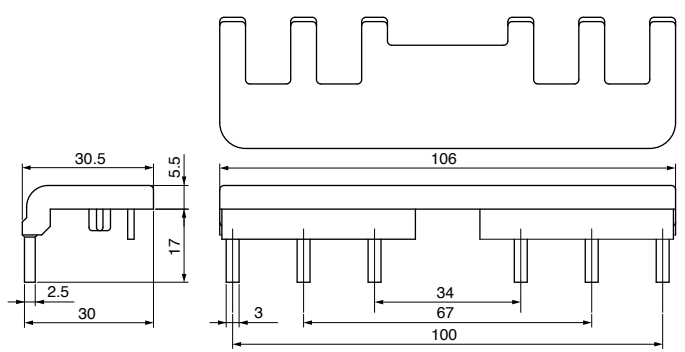

### SZ-ERW2/D

6/T3 - 2/T1	<p>Technical drawing of SZ-ERW2/D contactor for 6/T3 - 2/T1 configuration. The side view shows a height of about 31 mm and a width of about 18.5 mm. The front view shows a total width of 26 mm, with terminal spacing of 8 mm and 26 mm.</p>
4/T2 - 4/T2	<p>Technical drawing of SZ-ERW2/D contactor for 4/T2 - 4/T2 configuration. The side view shows a height of about 31 mm and a width of about 22 mm. The front view shows a total width of 59 mm, with terminal spacing of 8 mm and 59 mm.</p>
2/T1 - 6/T3	<p>Technical drawing of SZ-ERW2/D contactor for 2/T1 - 6/T3 configuration. The side view shows a height of about 42 mm and a width of about 22 mm. The front view shows a total width of 92 mm, with terminal spacing of 8 mm and 92 mm.</p>


# Contactors SC-M and SC-E series

## Dimensions


■ Dimensions, mm

Power connection kit for reversing for SC-E

SZ-ERW3/A

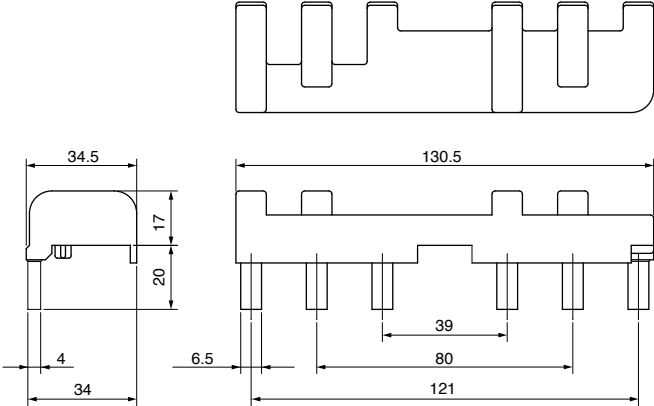

SZ-ERW3/B

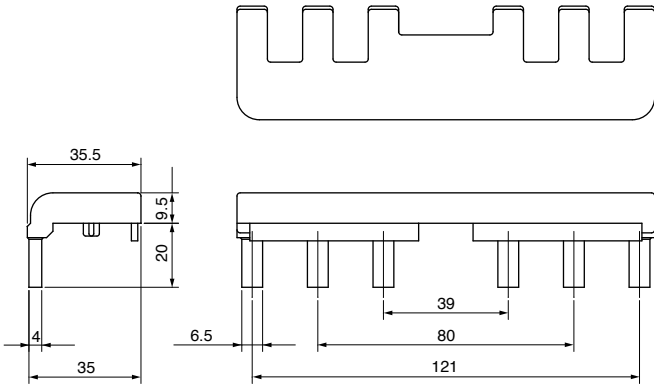

SZ-ERW3/D

6/T3 - 2/T1	<p>Dimensions: About 25.5 mm (width), 2.5 mm (width), About 22.5 mm (height), 10 mm (width), 29 mm (width)</p>
4/T2 - 4/T2	<p>Dimensions: About 25.5 mm (width), 2.5 mm (width), About 28 mm (height), 10 mm (width), 70 mm (width)</p>
2/T1 - 6/T3	<p>Dimensions: About 38.5 mm (width), 2.5 mm (width), About 28 mm (height), 10 mm (width), 111 mm (width)</p>



# Contactors SC-M and SC-E series

## Instructions

### Standard operating conditions

The magnetic contactors are manufactured for use in the standard operating conditions given in the table at the right. Consult FUJI before using the magnetic contactors in different conditions.

### Wirings

#### Connection wires and terminal processing

Be sure to perform wiring correctly with reference to the connections diagram. Main terminals for models SC-E02 to SC-E7 are wired using solid wires or stranded wires.


Stranded wires or flexible stranded wires can be connected by twisting them together, crimping a sleeve (ferrule) onto them before connecting.


#### Tightening torque

If wires are not tightened sufficiently, they may become hot or come loose and result in a fire, short-circuit, electric shock, or some other potentially dangerous situation. Be sure to tighten the wires to the torques specified in the tables below.


#### Connectable wire sizes, tightening tools, tightening torques





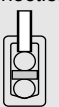
##### Main circuit

Contactor type		SC-E02	SC-E03	SC-E04	SC-E05
		SC-E02/G	SC-E03/G	SC-E04/G	SC-E05/G
Solid wire (mm <sup>2</sup> )	One	0.75 to 4		0.75 to 6	
	Two	1 to 4		1.5 to 6	
Stranded wire (mm <sup>2</sup> )	One	0.75 to 4		0.75 to 6	
	Two	1 to 4		1.5 to 6	
AWG	One	12 max.		10 max.	
	Two	12 max.		10 max.	
Sheath stripping length (mm)					
Terminal screw size		M4			
Tool		⊕ Phillips screwdriver, H-type, No. 2 (ISO 8764) ⊖ Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)			
Tightening torque (N·m)		1.2 to 1.5			

Ambient temperature	Operating: -5 to 55°C No sudden temperature changes resulting in condensation or icing (The average temperature over a 24-hour period must not exceed 35°C) Storage: -40 to 65°C
Humidity	45 to 85%RH
Altitude	2000m or lower
Atmosphere	No excessive dust, smoke, corrosive gases, flammable gases, steam, or salt
Vibration	10 to 55Hz 15m/s <sup>2</sup>
Shock	50m/s <sup>2</sup>
Mounting	Screw mounting, 35mm DIN rail mounting (SC-E02 to SC-E4)
Mounting angle	
Standard	IEC 60947-4-1, EN 60947-4-1, VDE 0660 JIS C 8201-4-1, JEM 1038 UL 508, CSA C22.2

##### Control circuit

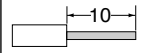Solid or stranded wire (mm <sup>2</sup> )	One	0.75 to 2.5 (ø1 to 1.6)
	Two	0.75 to 2.5
AWG	One	18 to 14
	Two	18 to 14
Sheath stripping length (mm)		
Fork terminal		Max. 7.7mm wide
Terminal screw size		M3.5
Tool		⊕ Phillips screwdriver, H-type, No. 2 (ISO 8764) ⊖ Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)
Tightening torque (N·m)		0.8 to 1

Contactor type		SC-E1, E2, E2S SC-E1/G, E2/G, E2S/G	SC-E3, E4 SC-E3/G, E4/G	SC-E5, E6	SC-E7	
Top-only connection 	Solid or stranded wire (mm <sup>2</sup> ) *1	0.75 to 35	1.5 to 70	4 to 70	4 to 120	
	Flexible stranded wire with sleeve (mm <sup>2</sup> ) *1	0.75 to 25	1.5 to 50	2.5 to 50	2.5 to 95	
	Flexible stranded wire without sleeve (mm <sup>2</sup> ) *1	0.75 to 25	1.5 to 50	4 to 50	4 to 95	
	AWG	18 to 2	16 to 2/0	12 to 2/0	12 to 250MCM	
	Solid or stripping length (mm)		15	19.5	26.5	28.5
Bottom-only connection 	Single stranded wire (mm <sup>2</sup> ) *1	0.75 to 25	1.5 to 50	4 to 70	4 to 120	
	Flexible stranded wire with sleeve (mm <sup>2</sup> ) *1	0.75 to 16	1.5 to 35	2.5 to 50	2.5 to 95	
	Flexible stranded wire without sleeve (mm <sup>2</sup> ) *1	0.75 to 16	1.5 to 35	4 to 50	4 to 95	
	AWG	18 to 3	16 to 1/0	12 to 2/0	12 to 250MCM	
	Sheath stripping length (mm)		12.5	16	26.5	28.5
Top/bottom connection 	Solid or stranded wire (mm <sup>2</sup> ) *1	Top/bottom	1.5 to 50	4 to 70	4 to 120	
	Flexible stranded wire with sleeve (mm <sup>2</sup> ) *1	Top/bottom	1.5 to 35	2.5 to 50	2.5 to 95	
	Flexible stranded wire without sleeve (mm <sup>2</sup> ) *1	Top/bottom	0.75 to 16	1.5 to 35	4 to 50	4 to 95
	AWG	Top/bottom	18 to 3	16 to 1/0	12 to 2/0	12 to 250MCM
	Tool		⊕ Phillips screwdriver, H-type, No. 2 (ISO 8764) ⊖ Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)	⊙ Hex. wrench 4 (ISO 2936)		
Tightening torque (N·m)		2.5	8	10		
Self-locking torque (N·m) *2		1	2			

Notes: \*1 Stranded wire (0 to 25mm<sup>2</sup>) consists of 7 wires or less.  
Stranded wire (35 to 120mm<sup>2</sup>) consists of 19 wires or less.  
Flexible stranded wire consists of more number wires than the above.

\*2 The tightening bolt must be loosened in order to insert the wire. However, stop loosening the bolt when the anti-drop attachment on the bottom of the bolt reaches the top edge of the terminal. If a torque exceeding that given in the table is applied in this state, the retaining bracket may come loose.


# Thermal overload relays TK-E series

## Quick reference guide and Ordering information

### TK-E series with open-phase protection device

#### ■ Features

- This relay protects motor windings from burning due to overloads, locked rotor current, or open-phases.
- Maintenance and inspection safety has been improved by employing a finger protection mechanism to cover exposed terminals (conforms to DIN 57106, VDE 0106 Teil 100).
- A high-precision scale for the current adjustment dial enables easy and exact current setting.
- The operating status can be visually checked with ease.
- The relays can be manually tripped. A trip-free mechanism is also provided.
- Base unit can be added to enable separate-mounting types of the TK-E02, E2, and E3 models.

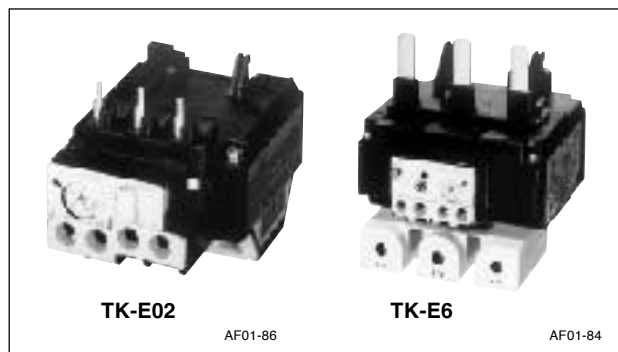

#### ■ Part number and specification

Applicable contactor	Part number	Aux. contact	Trip category (JIS)	No. of heater elements	Power consumption per pole	Provided functions
SC-E02 to E05, E02/G to E05/G	<b>TK-E02</b>	1NO+1NC	10A	3	2.2VA	Overload, phase-loss protection Ambient temperature compensation Manual or auto reset selectable Manual trip mechanism Trip indicator
SC-E1 to E2S, E1/G to E2S/G	<b>TK-E2</b>				3.8VA	
SC-E3, E4, E3/G, E4/G	<b>TK-E3</b>				6.6VA	
SC-E5	<b>TK-E5</b>				6.6VA	
SC-E6, E7	<b>TK-E6</b>				8.0VA	

Note: Separate mounting type is available for TK-E6. The part number is TK-E6H.

#### ■ Ampere ranges

Thermal overload relay type				
TK-E02	TK-E2	TK-E3	TK-E5	TK-E6, E6H *
0.1-0.15				
0.13-0.2				
0.15-0.24				
0.2-0.3				
0.24-0.36				
0.36-0.54				
0.48-0.72				
0.64-0.96				
0.8-1.2				
0.95-1.45				
1.4-2.2				
1.7-2.6				
2.2-3.4				
2.8-4.2				
4-6	4-6			
5-8	5-8			
6-9	6-9			
7-11	7-11	7-11		
9-13	9-13	9-13		
12-18	12-18	12-18		
16-22				
20-25	18-26	18-26	18-26	
	24-36	24-36	24-36	
		28-40	28-40	
	32-42			
		34-50	34-50	
	40-50			
	44-54			
		45-65	45-65	45-65
		48-68		
				53-80
		64-80		
			65-95	65-95
			85-105	
				85-125
				110-160

Note: \* Applicable only for separate-mounting type. Not applicable for use in combination with a magnetic contactor


#### ■ Standards

IEC 60947-4-1, EN60947-4-1  
VDE 0660, JIS C 8201-4-1  
UL 508, CSA C22.2

#### ■ Ordering information

Specify the following:

1. Part number
2. Ampere range

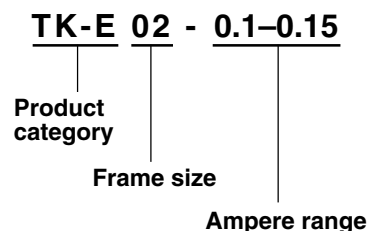

# Thermal overload relays TK-E series

## Characteristics


### ■ Auxiliary contact ratings

• Based on UL and CSA


Part number	Rated insulation voltage (V)	Rated thermal current (A)	Making and breaking current (A)					
			AC (rating code B600)			DC (rating code R300)		
			Voltage (V)	Making (A)	Breaking (A)	Voltage (V)	Making (A)	Breaking (A)
TK-E02	600	5	120	30	3	120	0.22	0.22
TK-E2, E3			240	15	1.5	250	0.11	0.11
TK-E5			480	7.5	0.75			
TK-E6			600	6	0.6			

### ■ Operating characteristics (mean value)

#### • TK-E02

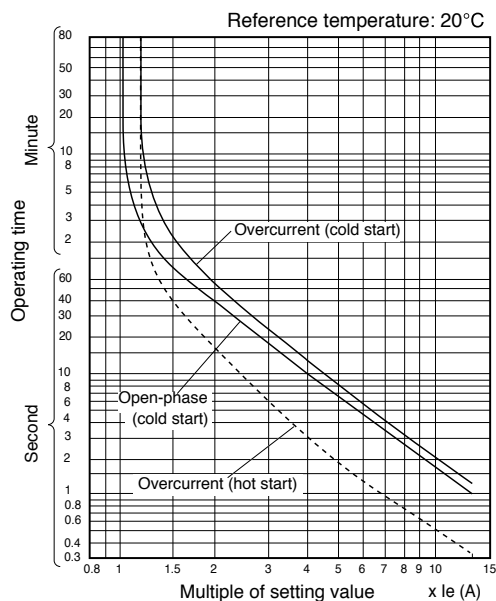

#### • TK-E2 to E6, E6H

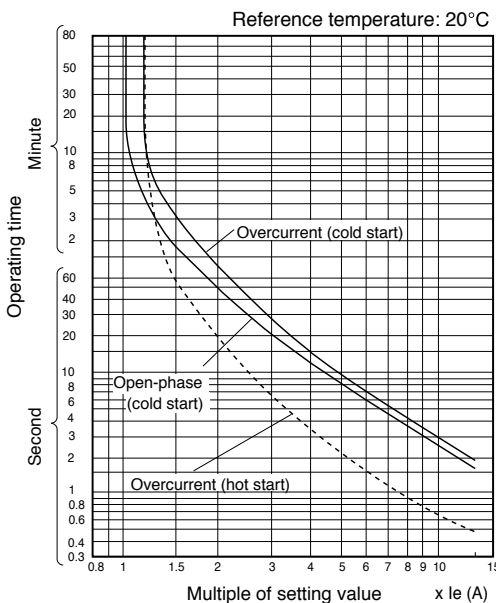

# Thermal overload relays TK-E series

## Optional accessories

### ■ Optional accessories for TK-E series

#### • Base units for separate mounting

The base unit modifies thermal overload relays to separate mounting that can be mounted to 35mm-wide IEC top hat rail or secured with screws.

Applicable thermal overload relay	Type
TK-E02	<b>SZ-HCE</b>
TK-E2	<b>SZ-HDE</b>
TK-E3	<b>SZ-HEE</b>

#### • Trip indicator

Reports any tripping action at a thermal overload relay through its LED display.

Applicable thermal overload relay	Rated voltage	Type
TK-E02	100–110V AC, 50/60Hz	<b>SZ-L100</b>
	200–220V AC, 50/60Hz	<b>SZ-L200</b>
TK-E2 to TK-E6	100–110V AC, 50/60Hz	<b>SZ-L100N2</b>
	200–220V AC, 50/60Hz	<b>SZ-L200N2</b>

#### • Reset release button

Reset a thermal overload relay from the rear side of the board or a distant location.

Applicable thermal overload relay	Load length (mm)	Type
TK-E02	300	<b>SZ-R1</b>
	500	<b>SZ-R2</b>
	700	<b>SZ-R3</b>
TK-E2 to TK-E6	300	<b>SZ-R4</b>
	500	<b>SZ-R5</b>
	700	<b>SZ-R6</b>

#### • Dial cover

Protects the setting current value of a thermal overload relay from being changed unintentionally.

Applicable thermal overload relay	Type
TK-E02 to TK-E6	<b>SZ-DA</b>




# Thermal overload relays TK-E series

## Dimensions


### ■ Dimensions, mm

#### TK-E02

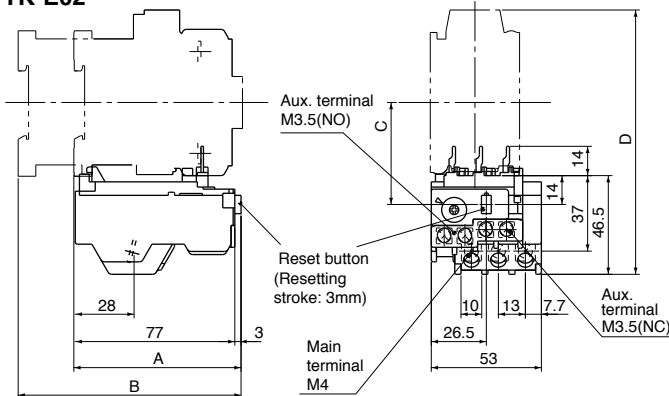


Contactor	A	B	C	D	Mass
SC-E02 to 05	80.5	-	49	127.5	0.13kg
SC-E02/G to 05/G	-	107.5	49	127.5	

#### TK-E5 On-contactor mounting only

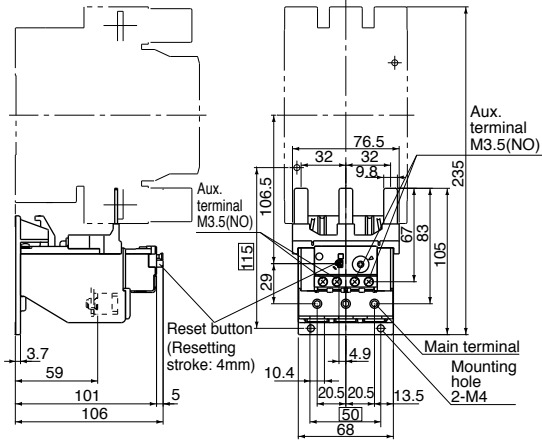


Mass: 0.37kg

#### TK-E2

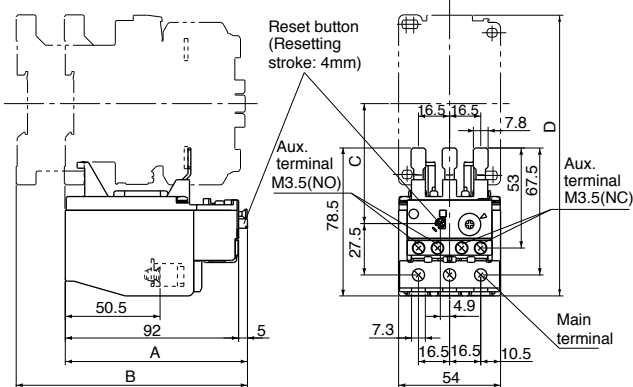


Contactor	A	B	C	D	Mass
SC-E1 to E2S	97	-	63.5	149	0.25kg
SC-E1/G to E2S/G	-	123	63.5	149	

#### TK-E6 On-contactor mounting only

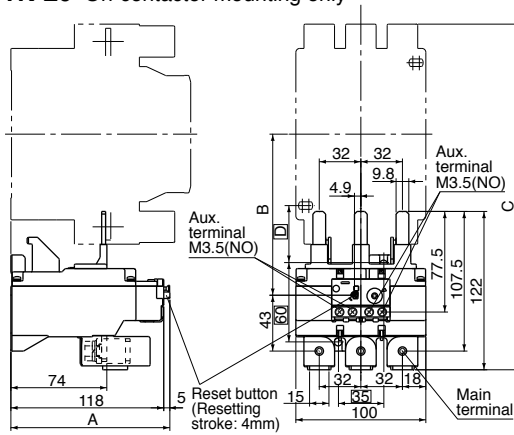


Contactor	A	B	C	D	Mass
SC-E6	123	124	266.5	45	0.71kg
SC-E7	123	129	274	50	

#### TK-E3

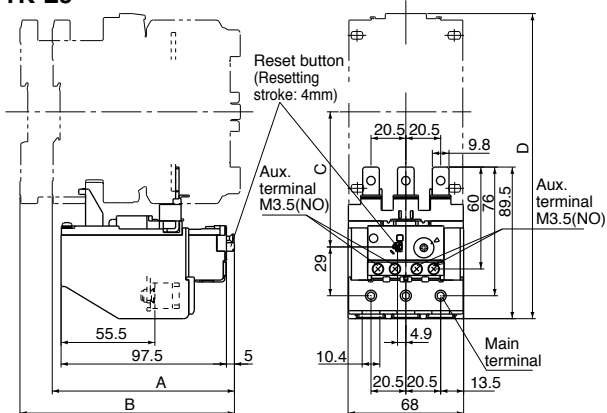

Contactor	A	B	C	D	Mass
SC-E3, E4	107.5	-	79.5	180	0.34kg
SC-E3/, E4/G	-	126.5	79.5	180	


#### TK-E6H For separate mounting only

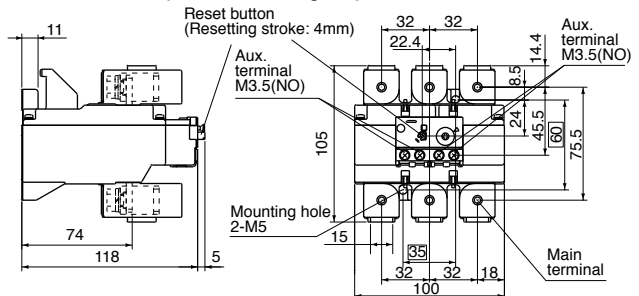

Mass: 0.82kg

### ■ Wiring diagrams

3-heater element

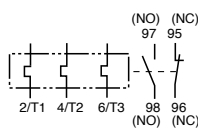


# Thermal overload relays TK-E series

## Dimensions

### ■ Dimensions, mm


#### • Base units for separate mounting

##### SZ-HCE

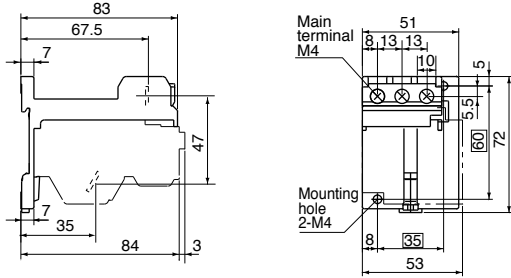


Mass: 55g

##### SZ-HDE

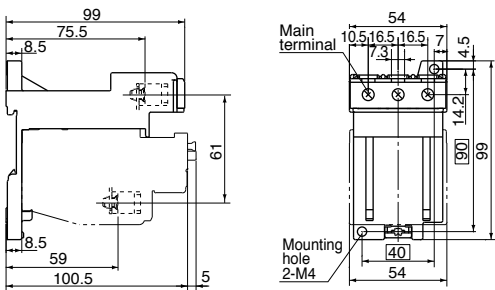

Mass: 0.1kg


##### SZ-HEE

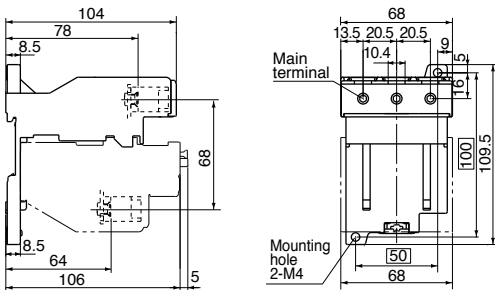


Mass: 0.15kg

#### • Trip indicators

##### SZ-L100, L200

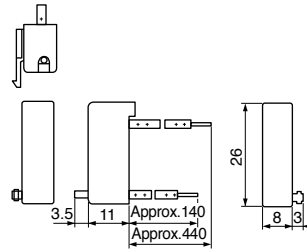


##### SZ-L100N2, L200N2

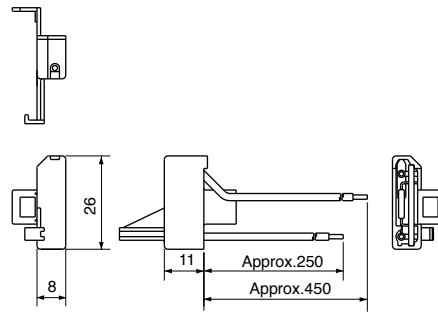


#### • Reset release button

##### SZ-R1, R2, R3

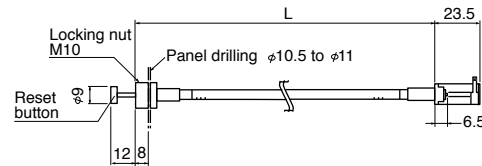

Type	L
SZ-R1	300
SZ-R2	500
SZ-R3	700


##### SZ-R4, R5, R6

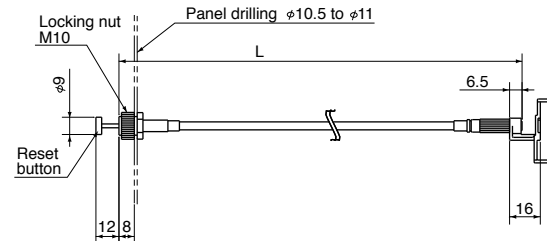

Type	L
SZ-R4	300
SZ-R5	500
SZ-R6	700

#### • Dial cover

##### SZ-DA

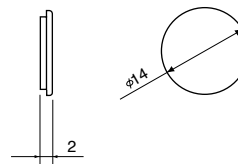

# Thermal overload relays TK-E series

## Instructions

### ■ Standard operating conditions

The thermal overload relays are manufactured for use in the standard operating conditions given in the table at the right. Consult FUJI before using the thermal overload in different conditions.

### ■ Wiring

#### • Connection wires and terminal processing


Be sure to perform wiring correctly referring to the connection diagram. Main terminals for models TK-E02 to TK-E6 are wired using solid wires or stranded wires. Stranded wires or flexible stranded wires can be connected by twisting them together crimping a sleeve (ferrule) onto them before connecting.

#### • Tightening torque

If wires are not tightened sufficiently, they may become hot or come loose and result in a fire, short-circuit, electric shock, or some other potentially dangerous situation. Be sure to tighten the wires to the torques specified in the tables below.


#### • Wire sizes, tightening tools, tightening torques


##### Main circuit

Thermal overload relay type	<b>TK-E02</b>	
Base unit type	SZ-HCE	
Solid wire (mm <sup>2</sup> )	One	0.75 to 4
	Two	1 to 4
Stranded wire (mm <sup>2</sup> )	One	0.75 to 4
	Two	1 to 4
AWG	One	12 max.
	Two	12 max.
Sheath stripping length (mm)		
Terminal screw size	M4	
Tool	⊕ Phillips screwdriver, H-type, No. 2 (ISO 8764) ⊖ Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)	
Tightening torque [N·m(lb·in)]	1.2 to 1.5 (11 to 13)	

Ambient temperature	Operating: -5 to 55°C No sudden temperature changes resulting in condensation or icing (The average temperature over a 24-hour period must not exceed 35°C) Storage: -40 to 65°C
Humidity	45 to 85%RH
Atmosphere	No excessive dust, smoke, corrosive gases, flammable gases, steam, or salt
Vibration	10 to 55Hz 15m/s <sup>2</sup>
Shock	50m/s <sup>2</sup>

##### Control circuit

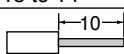Single stranded wire (mm <sup>2</sup> )	One	0.75 to 2.5 (ø1 to ø1.6)
	Two	0.75 to 2.5
AWG	One	18 to 14
	Two	18 to 14
Sheath stripping length (mm)		
Fork terminal	Max. 7.7mm wide (R2-3.5)	
Terminal screw size	M3.5	
Tool	⊕ Phillips screwdriver, H-type, No. 2 (ISO 8764) ⊖ Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)	
Tightening torque [N·m(lb·in)]	0.8 to 1 (7 to 9)	

Thermal overload relay type	TK-E2	TK-E3	TK-E5	TK-E6, E6H
Base unit type	SZ-HDE	SZ-HEE	-	-
	Single stranded wire (mm <sup>2</sup> ) *1	0.75 to 16	1.5 to 35	16 to 70
	Flexible stranded wire with sleeve (mm <sup>2</sup> ) *1	0.75 to 16	1.5 to 35	16 to 70
	Flexible stranded wire without sleeve (mm <sup>2</sup> )	0.75 to 16	1.5 to 35	16 to 70
	AWG	6 max.	2 max.	00 max.
	Sheath stripping length (mm)	18	21	23
	Tool	⊕ Phillips screwdriver, H-type, No. 2 (ISO 8764) ⊖ Flat-blade screwdriver, 1×5.5×L-type, B (ISO 2830)	⊙ Hex. wrench 4 (ISO 2936)	
	Tightening torque (N·m)	2.5	6	10


Notes: \*1 Stranded wire (0 to 25mm<sup>2</sup>) consists of 7 wires or less.  
Stranded wire (35 to 120mm<sup>2</sup>) consists of 19 wires or less.  
Flexible stranded wire consists of more number wires than the above.

# Combination Starters

## Quick reference guide

### ■ Features

- The user can assemble a combination starter by combining a BM3 series manual motor starter and an SC series magnetic contactor according to the load motor capacity.
- The manual motor starter provides overload, phase-loss, and short-circuit protections for the motor circuit, and incorporates a dial for flexible adjustment to match the total load current of the motor.
- The magnetic contactor allows remote ON/OFF operation of the motor circuit with high frequency, and features a electrical durability of one million operations.
- The manual motor starter and magnetic contactor are connected via link module and mounted to a base plate.

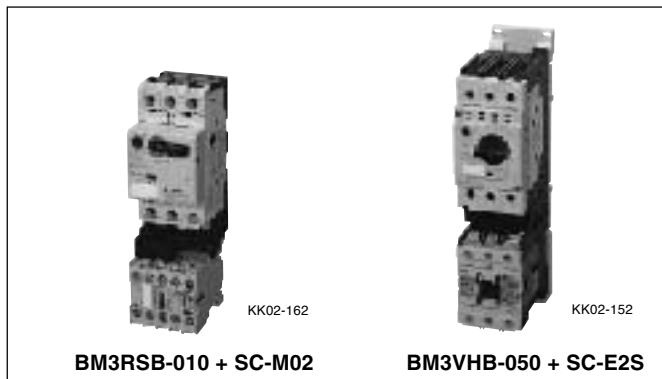

### ■ Combinations meeting for North American market

#### • BM3RSB, BM3RHB (General)

220-240V AC		440-480V AC		MMS part number		Contactor part number	Link module	Base plate
HP rating (HP)	Rated current (A)	HP rating (HP)	Rated current (A)	Part number	Current range (A)			
-	-	-	-	<b>BM3RSB-P16</b>	<b>BM3RHB-P16</b>	0.1-0.16	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA - BZ0BPRES22A BZ0BPRES22A
-	-	-	-	<b>BM3RSB-P25</b>	<b>BM3RHB-P25</b>	0.16-0.25	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA - BZ0BPRES22A BZ0BPRES22A
-	-	-	-	<b>BM3RSB-P40</b>	<b>BM3RHB-P40</b>	0.25-0.4	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA - BZ0BPRES22A BZ0BPRES22A
-	-	-	-	<b>BM3RSB-P63</b>	<b>BM3RHB-P63</b>	0.4-0.63	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA - BZ0BPRES22A BZ0BPRES22A
-	-	-	-	<b>BM3RSB-001</b>	<b>BM3RHB-001</b>	0.63-1	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA - BZ0BPRES22A BZ0BPRES22A
-	-	3/4	1.6	<b>BM3RSB-1P6</b>	<b>BM3RHB-1P6</b>	1-1.6	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA - BZ0BPRES22A BZ0BPRES22A
1/2	2.2	1	2.1	<b>BM3RSB-2P5</b>	<b>BM3RHB-2P5</b>	1.6-2.5	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA - BZ0BPRES22A BZ0BPRES22A
3/4	3.2	2	3.4	<b>BM3RSB-004</b>	<b>BM3RHB-004</b>	2.5-4	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA - BZ0BPRES22A BZ0BPRES22A
1-1/2	6	3	4.8	<b>BM3RSB-6P3</b>	<b>BM3RHB-6P3</b>	4-6.3	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA - BZ0BPRES22A BZ0BPRES22A
-	-	5	7.6	<b>BM3RSB-010</b>	<b>BM3RHB-010</b>	6.3-10	<b>SC-M02, M02/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA - BZ0BPRES22A BZ0BPRES22A
3	9.6	7-1/2	11	<b>BM3RSB-013</b>	<b>BM3RHB-013</b>	10-13	<b>SC-E03</b> <b>SC-E03/G</b>	BZ0LRE22AA BZ0LRE22GA BZ0BPRES22A BZ0BPRES22A
5	15.2	10	14	<b>BM3RSB-016</b>	<b>BM3RHB-016</b>	11-16	<b>SC-E04</b> <b>SC-E04/G</b>	BZ0LRE22AA BZ0LRE22GA BZ0BPRES22A BZ0BPRES22A
5	15.2	10	14	<b>BM3RSB-020</b>	<b>BM3RHB-020</b>	14-20	<b>SC-E04</b> <b>SC-E04/G</b>	BZ0LRE22AA BZ0LRE22GA BZ0BPRES22A BZ0BPRES22A
7-1/2	22	15	21	<b>BM3RSB-025</b>	<b>BM3RHB-025</b>	18-25	<b>SC-E05</b> <b>SC-E05/G</b>	BZ0LRE22AA BZ0LRE22GA BZ0BPRES22A BZ0BPRES22A
10	28	20	27	<b>BM3RSB-032</b>	<b>BM3RHB-032</b>	24-32	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LRE32AA BZ0LRE32GA BZ0BPRES32A BZ0BPRES32A



# Combination Starter

## Quick reference guide

• **BM3RSB, BM3RHB (Type F coordination)**

220-240V AC		440-480V AC		MMS part number			Contactor part number	Link module	Base plate	Short-circuit ratings at 480Y/277 AC (kA)	
HP rating (HP)	Rated current (A)	HP rating (HP)	Rated current (A)	Part number		Current range (A)				for BM3RSB	for BM3RHB
-	-	-	-	<b>BM3RSB-P16</b>	<b>BM3RHB-P16</b>	0.1-0.16	<b>SC-M01, M01/G SC-E02 SC-E02/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	65	65
-	-	-	-	<b>BM3RSB-P25</b>	<b>BM3RHB-P25</b>	0.16-0.25	<b>SC-M01, M01/G SC-E02 SC-E02/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	65	65
-	-	-	-	<b>BM3RSB-P40</b>	<b>BM3RHB-P40</b>	0.25-0.4	<b>SC-M01, M01/G SC-E02 SC-E02/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	65	65
-	-	-	-	<b>BM3RSB-P63</b>	<b>BM3RHB-P63</b>	0.4-0.63	<b>SC-M01, M01/G SC-E02 SC-E02/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	65	65
-	-	-	-	<b>BM3RSB-001</b>	<b>BM3RHB-001</b>	0.63-1	<b>SC-M01, M01/G SC-E02 SC-E02/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	65	65
-	-	3/4	1.6	<b>BM3RSB-1P6</b>	<b>BM3RHB-1P6</b>	1-1.6	<b>SC-M01, M01/G SC-E02 SC-E02/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	65	65
1/2	2.2	1	2.1	<b>BM3RSB-2P5</b>	<b>BM3RHB-2P5</b>	1.6-2.5	<b>SC-M01, M01/G SC-E02 SC-E02/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	50	65
3/4	3.2	2	3.4	<b>BM3RSB-004</b>	<b>BM3RHB-004</b>	2.5-4	<b>SC-M01, M01/G SC-E02 SC-E02/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	50	65
1-1/2	6	3	4.8	<b>BM3RSB-6P3</b>	<b>BM3RHB-6P3</b>	4-6.3	<b>SC-M01, M01/G SC-E02 SC-E02/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	50	65
-	-	5	7.6	<b>BM3RSB-010</b>	<b>BM3RHB-010</b>	6.3-10	<b>SC-M02, M02/G SC-E02 SC-E02/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	25	65
3	9.6	-	-	<b>BM3RSB-010</b>	<b>BM3RHB-010</b>	6.3-10	<b>SC-M02, M02/G SC-E03 SC-E03/G</b>	BZOLRC09AA BZOLRE22AA BZOLRE22GA	- BZ0BPRES22A BZ0BPRES22A	25	65
-	-	7-1/2	11	<b>BM3RSB-013</b>	<b>BM3RHB-013</b>	10-13	<b>SC-E03 SC-E03/G</b>	BZOLRE22AA BZOLRE22GA	BZ0BPRES22A BZ0BPRES22A	25	65
5	15.2	10	14	<b>BM3RSB-016</b>	<b>BM3RHB-016</b>	11-16	<b>SC-E04 SC-E04/G</b>	BZOLRE22AA BZOLRE22GA	BZ0BPRES22A BZ0BPRES22A	25	65
5	15.2	10	14	<b>BM3RSB-020</b>	<b>BM3RHB-020</b>	14-20	<b>SC-E04 SC-E04/G</b>	BZOLRE22AA BZOLRE22GA	BZ0BPRES22A BZ0BPRES22A	25	65
7-1/2	22	15	21	<b>BM3RSB-025</b>	<b>BM3RHB-025</b>	18-25	<b>SC-E05 SC-E05/G</b>	BZOLRE22AA BZOLRE22GA	BZ0BPRES22A BZ0BPRES22A	25	50
10	28	20	27	<b>BM3RSB-032</b>	<b>BM3RHB-032</b>	24-32	<b>SC-E1 SC-E1/G</b>	BZOLRE32AA BZOLRE32GA	BZ0BPRES32A BZ0BPRES32A	25	50

To make an application for Type F condition, You need to prepare BZ0TCRE and BZ0TKUAB accessories separately.

# Combination Starter

## Quick reference guide

### • BM3VSB, BM3VHB (General)

220-240V AC		440-480V AC		MMS part number			Contactor part number	Link module	Base plate
HP rating (HP)	Rated current (A)	HP rating (HP)	Rated current (A)	Part number		Current range (A)			
3	9.6	5	7.6	<b>BM3VSB-010</b>	<b>BM3VHB-010</b>	6.3-10	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A
3	9.6	7-1/2	11	<b>BM3VSB-013</b>	<b>BM3VHB-013</b>	10-13	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A
5	15.2	10	14	<b>BM3VSB-016</b>	<b>BM3VHB-016</b>	11-16	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A
5	15.2	10	14	<b>BM3VSB-020</b>	<b>BM3VHB-020</b>	14-20	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A
7-1/2	22	15	21	<b>BM3VSB-025</b>	<b>BM3VHB-025</b>	18-25	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A
10	28	20	27	<b>BM3VSB-032</b>	<b>BM3VHB-032</b>	24-32	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A
10	28	30	40	<b>BM3VSB-040</b>	<b>BM3VHB-040</b>	28-40	<b>SC-E2</b> <b>SC-E2/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A
15	42	30	40	<b>BM3VSB-050</b>	<b>BM3VHB-050</b>	35-50	<b>SC-E2S</b> <b>SC-E2S/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A
20	54	40	52	<b>BM3VSB-063</b>	<b>BM3VHB-063</b>	45-63	<b>SC-E3</b> <b>SC-E3/G</b>	BZ0LVE65AA BZ0LVE65GA	BZ0BPVE65A BZ0BPVE65A


### • BM3VSB, BM3VHB (Type F coordination)

220-240V AC		440-480V AC		MMS part number			Contactor part number	Link module	Base plate	Short-circuit ratings at 480Y/277 AC (kA)	
HP rating (HP)	Rated current (A)	HP rating (HP)	Rated current (A)	Part number		Current range (A)				for BM3VSB	for BM3VHB
3	9.6	5	7.6	<b>BM3VSB-010</b>	<b>BM3VHB-010</b>	6.3-10	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	65
3	9.6	7-1/2	11	<b>BM3VSB-013</b>	<b>BM3VHB-013</b>	10-13	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	65
5	15.2	10	14	<b>BM3VSB-016</b>	<b>BM3VHB-016</b>	11-16	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	65
5	15.2	10	14	<b>BM3VSB-020</b>	<b>BM3VHB-020</b>	14-20	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	65
7-1/2	22	15	21	<b>BM3VSB-025</b>	<b>BM3VHB-025</b>	18-25	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	65
10	28	20	27	<b>BM3VSB-032</b>	<b>BM3VHB-032</b>	24-32	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	65
10	28	30	40	<b>BM3VSB-040</b>	<b>BM3VHB-040</b>	28-40	<b>SC-E2</b> <b>SC-E2/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	65
15	42	30	40	<b>BM3VSB-050</b>	<b>BM3VHB-050</b>	35-50	<b>SC-E2S</b> <b>SC-E2S/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	65
20	54	40	52	<b>BM3VSB-063</b>	<b>BM3VHB-063</b>	45-63	<b>SC-E3</b> <b>SC-E3/G</b>	BZ0LVE65AA BZ0LVE65GA	BZ0BPVE65A BZ0BPVE65A	25	65


To make an application for Type F condition, You need to prepare BZ0TKUAB accessories separately.

### Optional accessories

#### Link modules

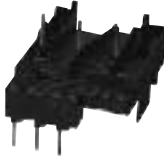
Description	Applicable MMS	Applicable magnetic contactor	Operating coil	Type	Mass (g)
 <p>The link module connects the manual motor starter and magnetic contactor electrically and mechanically.</p> <p>(No.KK01-153)</p>	BM3R	SC-M01, M02	AC	<b>BZ0LRC09AA</b>	25
		SC-M01/G, M02/G	DC	<b>BZ0LRC09AA</b>	25
		SC-E02, E03, E04, E05	AC	<b>BZ0LRE22AA</b>	25
		SC-E02/G, E03/G, E04/G, E05/G	DC	<b>BZ0LRE22GA</b>	35
		SC-E1	AC	<b>BZ0LRE32AA</b>	45
	SC-E1/G	DC	<b>BZ0LRE32GA</b>	60	
	BM3V	SC-E1, E2, E2S	AC	<b>BZ0LVE51AA</b>	45
		SC-E1/G, E2/G, E2S/G	DC	<b>BZ0LVE51GA</b>	60
		SC-E3	AC	<b>BZ0LVE65AA</b>	65
		SC-E3/G	DC	<b>BZ0LVE65GA</b>	80

#### Base plates


Description	Applicable MMS	Applicable magnetic contactor	Operating coil	Type	Mass (g)
 <p>The base plate is a plastic plate to which the combination starter is mounted. The base plate can then be mounted to a panel with screws or to a DIN rail.</p> <p>(No.KK01-155)</p>	BM3R	SC-E02, E03, E04, E05	AC	<b>BZ0BPVE22A</b>	100
		SC-E02/G, E03/G, E04/G, E05/G	DC	<b>BZ0BPVE22A</b>	100
		SC-E1	AC	<b>BZ0BPVE32A</b>	160
		SC-E1/G	DC	<b>BZ0BPVE32A</b>	160
	BM3V	SC-E1, E2, E2S	AC	<b>BZ0BPVE51A</b>	160
		SC-E1/G, E2/G, E2S/G	DC	<b>BZ0BPVE51A</b>	160
		SC-E3	AC	<b>BZ0BPVE65A</b>	195
		SC-E3/G	DC	<b>BZ0BPVE65A</b>	195

### Combination starter configurations


#### BM3RSB+SC-M01, M02

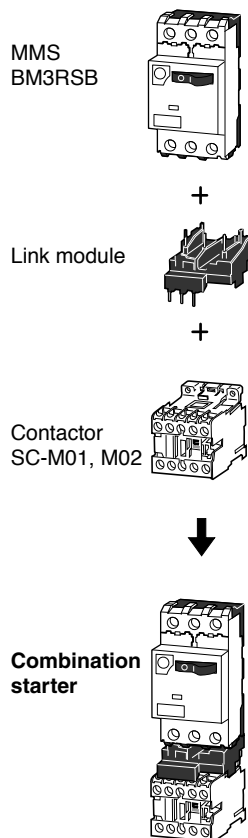

#### BM3RSB+SC-E02 to E05

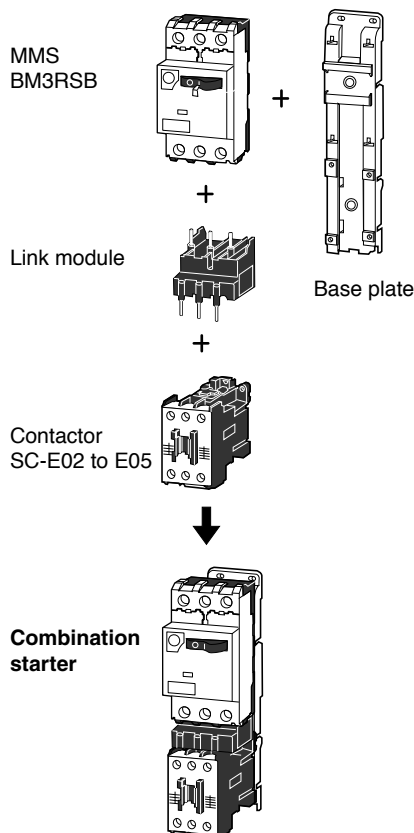


#### BM3RHB+SC-E04, E05

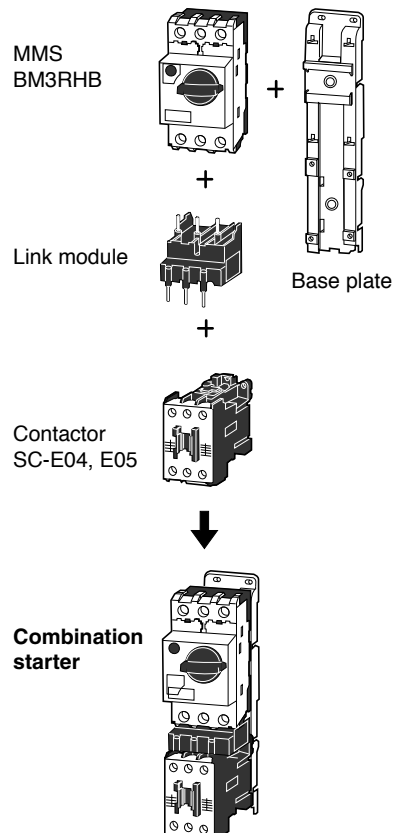


# Combination Starters

## Optional accessories


### • BM3RHB+SC-E1

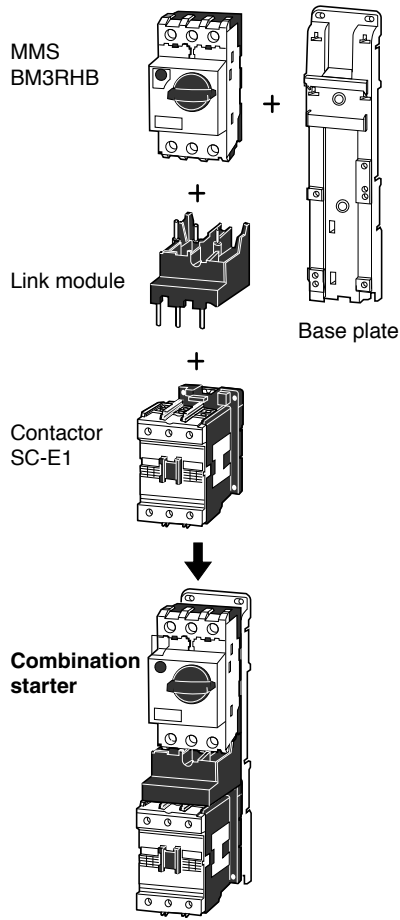

### • BM3VHB+SC-E1 to E2S

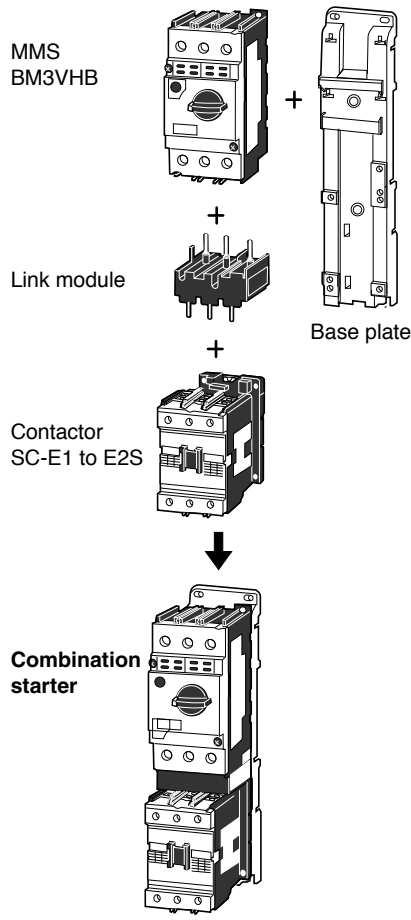

### • BM3VHB+SC-E3

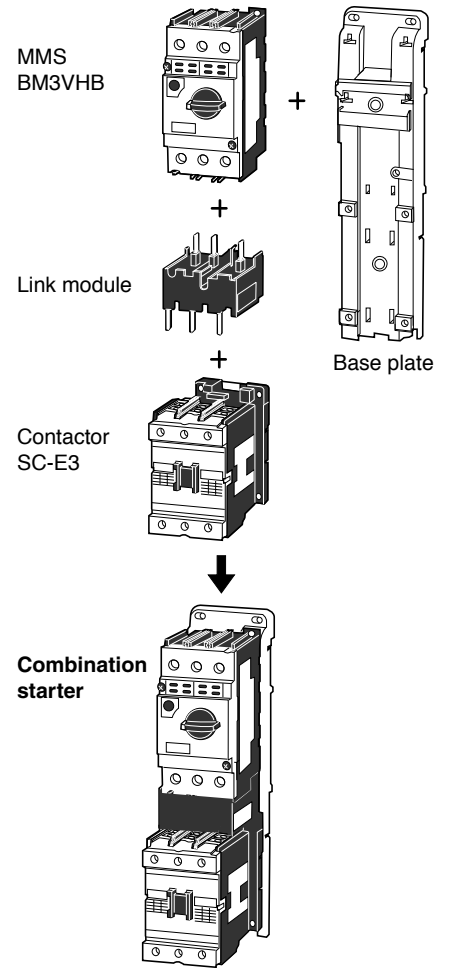


### ■ Notes for mounting an MMS and contactor

When the manual motor driver and magnetic contactor are configured as a combination starter, the nameplate ends up facing the wrong direction because the coil terminal of the magnetic contactor faces downward. Use the following procedure to turn the nameplate upside down.


#### For SC-E02 to SC-E05 magnetic contactors

- Insert a flat-blade screwdriver between the arc-chamber of the S phase or V phase and the terminal screw, and lift the arc-chamber to remove it.
- After removing the cover, turn the cover 180 degrees (top to bottom), then re-mount it onto the magnetic contactor.
- Align the cover with the top and bottom terminals and press it on firmly by hand.

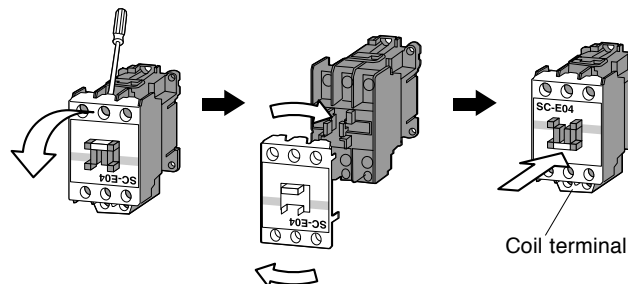

#### For SC-E1 to SC-E3 magnetic contactors


- Use a Phillips screwdriver to remove the two screws securing the front and back bodies.
- Remove the front body and turn it 180 degrees (top to bottom), then re-mount it with the screws.
- Make sure that no foreign matter enters the interior of the magnetic contactor during this removal and re-mounting procedure.

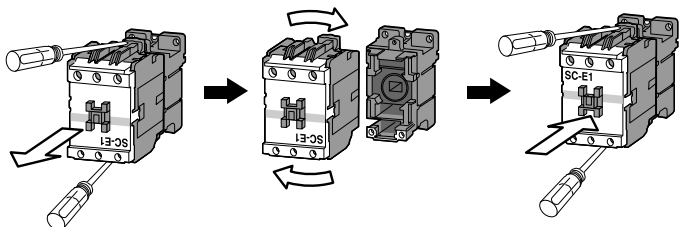

# Combination Starters Dimensions

## ■ Dimensions, mm


### • Base plates BZ0BPRE22A

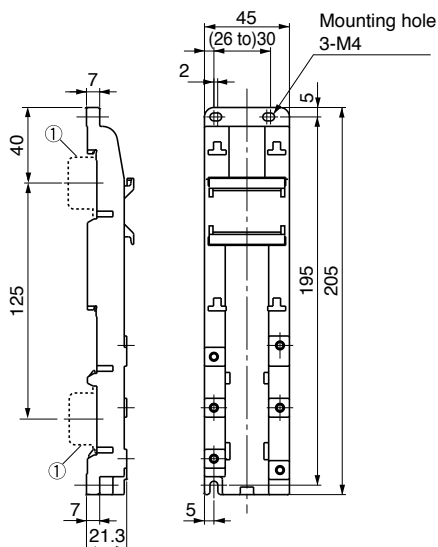

① 35mm wide rail (height 15mm) x 2

Base plate type	Applicable type	
	MMS	Contactor
BZ0BPRE22A	BM3RSB	SC-E02, E03, E04, E05
	BM3RHB	E02/G, E03/G, E04/G, E05/G


### BZ0BPRE32A

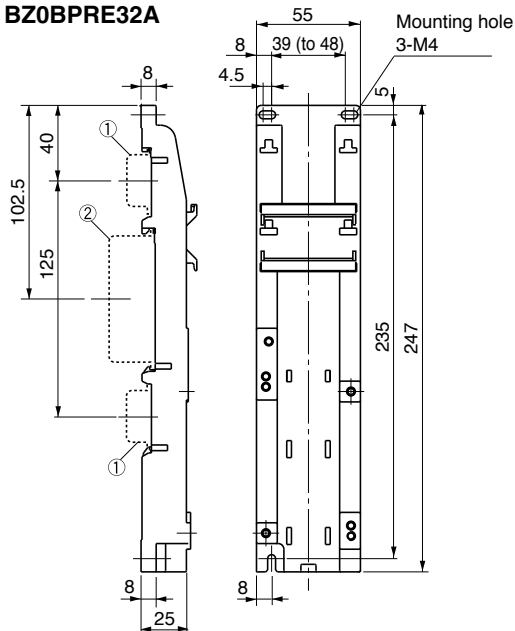

① 35mm wide rail (height 15mm) x 2  
② 75mm wide rail (height 25mm) x 1

Base plate type	Applicable type	
	MMS	Contactor
BZ0BPRE32A	BM3RSB	SC-E1, E1/G
	BM3RHB	


### BZ0BPVE51A

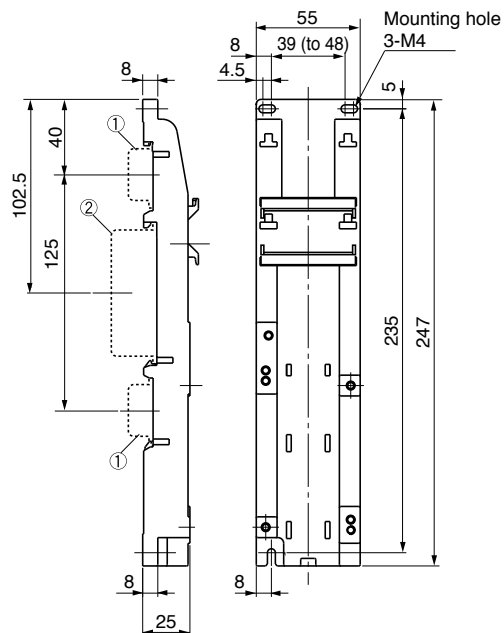

① 35mm wide rail (height 15mm) x 2  
② 75mm wide rail (height 25mm) x 1

Base plate type	Applicable type	
	MMS	Contactor
BZ0BPVE51A	BM3VSB	SC-E1, E2, E2S,
	BM3VHB	E1/G, E2/G, E2S/G

### BZ0BPVE65A

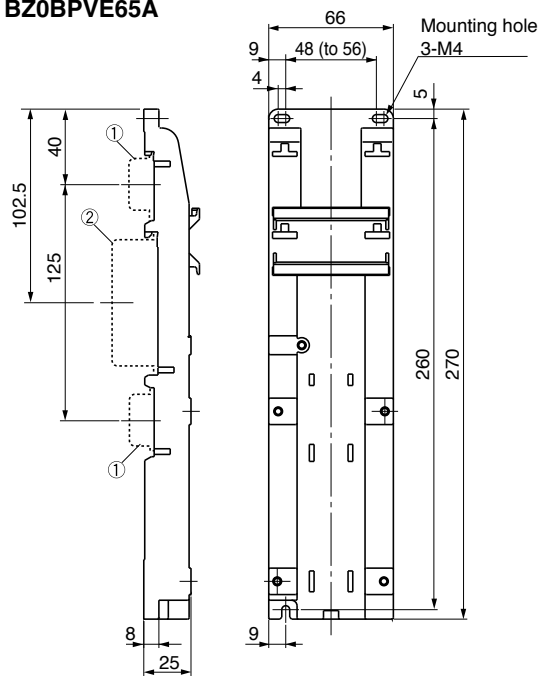

① 35mm wide rail (height 15mm) x 2  
② 75mm wide rail (height 25mm) x 1

Base plate type	Applicable type	
	MMS	Contactor
BZ0BPVE65A	BM3VSB	SC-E3, E3/G
	BM3VHB	

# Combination Starters


## Dimensions

### ■ Dimensions, mm

#### • Combination


BM3RSB + SC-M01, M02

+ SC-M01/G, SC-M02/G

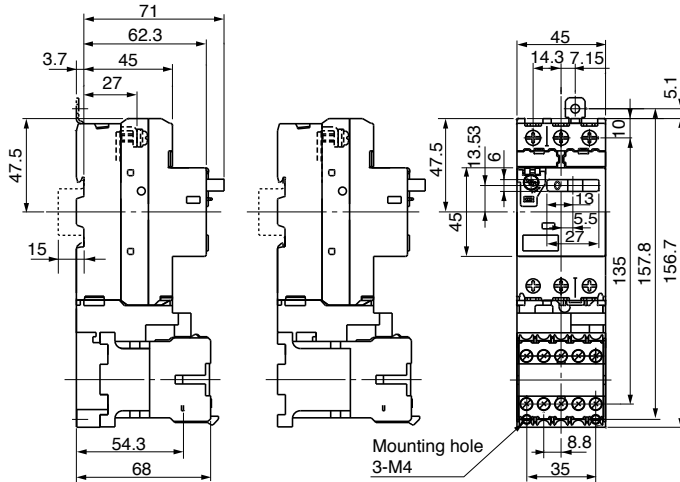


MMS	Contactors	Link module	Mass(g)
BM3RSB	SC-M01, M02	BZ0LRC09AA	540
	SC-M01/G, SC-M02/G	BZ0LRC09AA	600

### BM3RSB + SC-E02 to E05

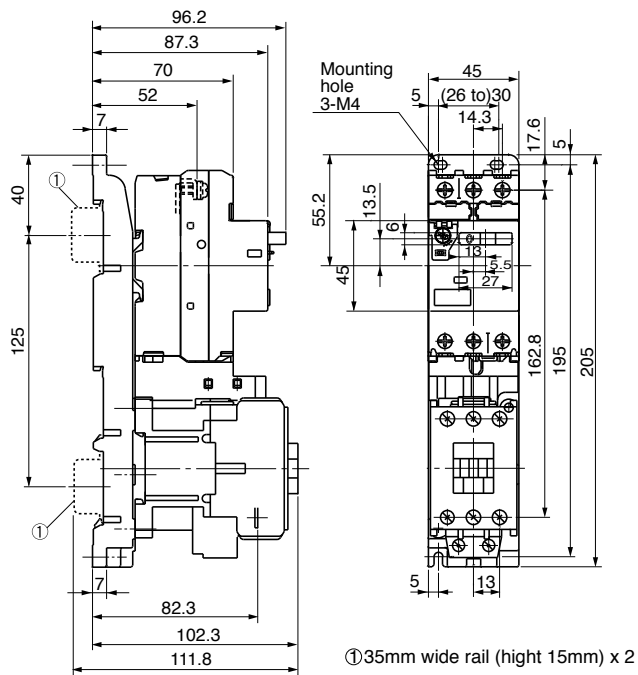

MMS	Contactors	Link module	Base plate	Mass (g)
BM3RSB	SC-E02, E03, E04, E05	BZ0LRE22AA	BZ0BPPE22A	820

### BM3RSB + SC-E02/G to E05/G

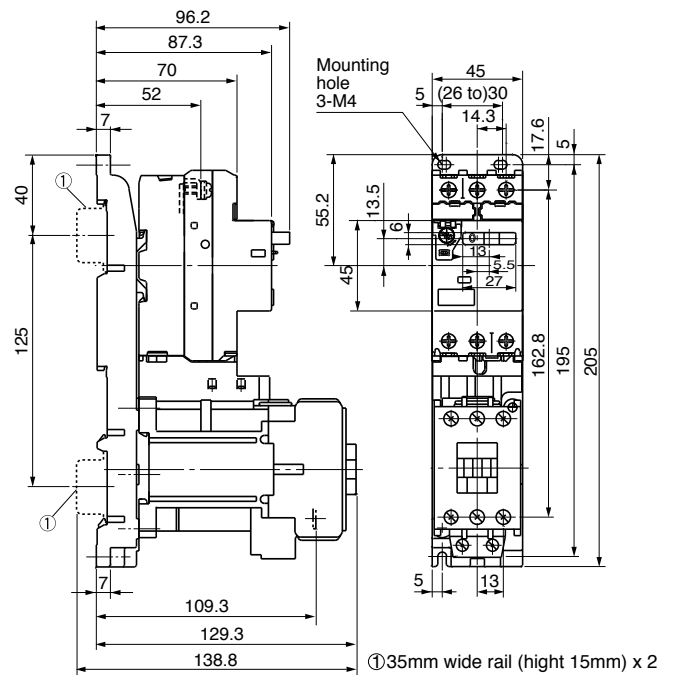


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RSB	SC-E02/G, E03/G, E04/G, E05/G	BZ0LRE22GA	BZ0BPPE22A	1,065

# Combination Starters Dimensions


## ■ Dimensions, mm

### • Combination BM3RSB + SC-E1

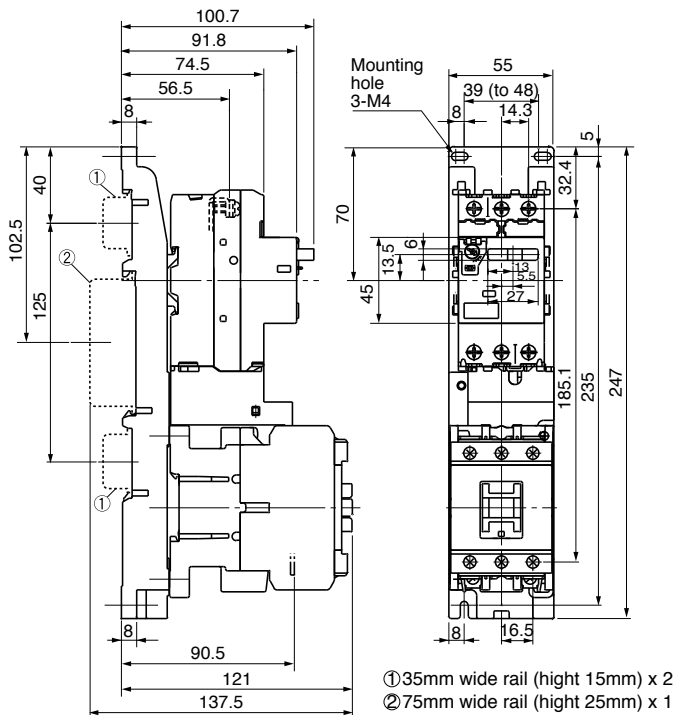


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RSB	SC-E1	BZ0LRE32AA	BZ0BPRE32A	1,135

### BM3RSB + SC-E1/G

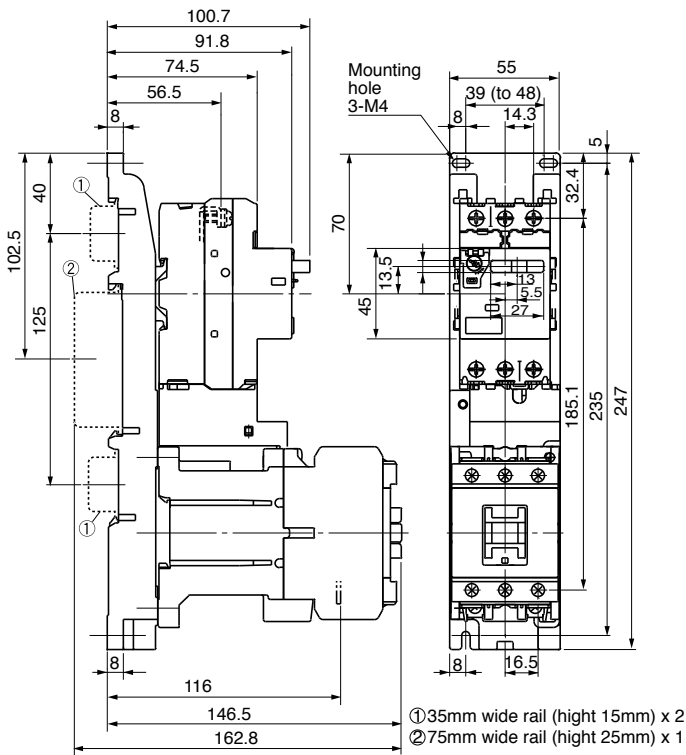


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RSB	SC-E1/G	BZ0LRE32GA	BZ0BPRE32A	1,360

### BM3RHB + SC-E02 to E05

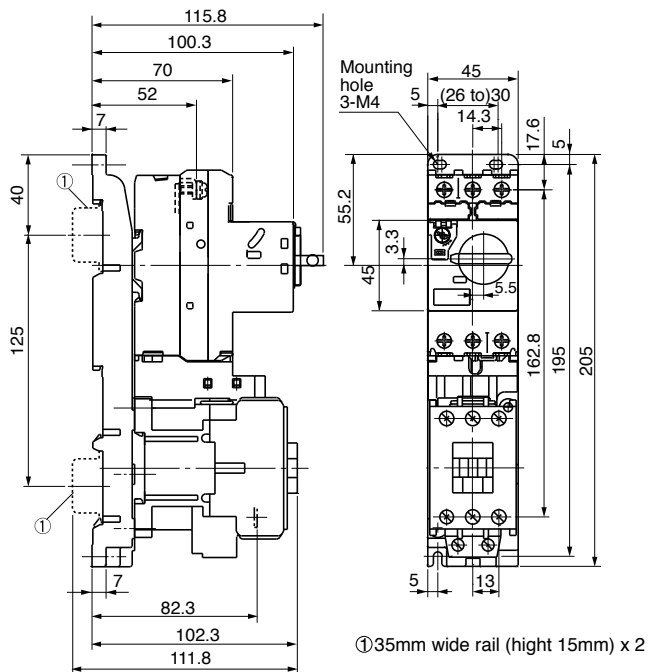

MMS	Contactors	Link module	Base plate	Mass (g)
BM3RHB	SC-E02, E03, E04, E05	BZ0LRE22AA	BZ0BPRE22A	840

### BM3RHB + SC-E02/G to E05/G

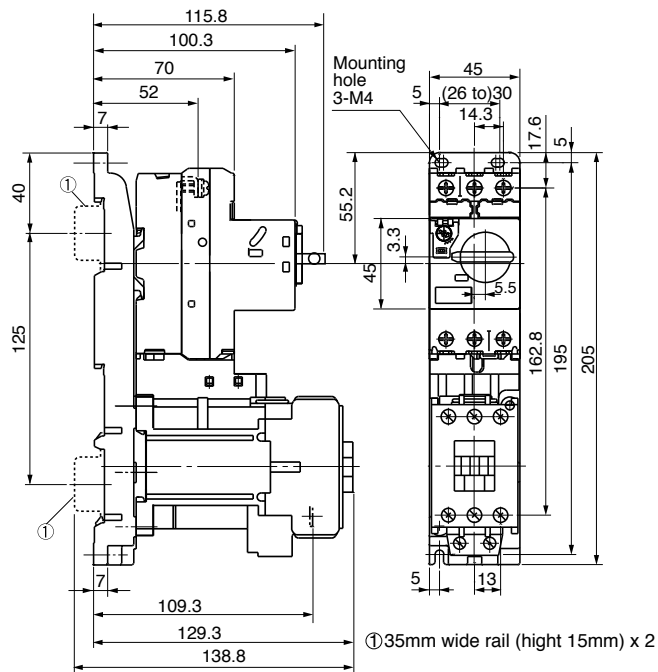

MMS	Contactors	Link module	Base plate	Mass (g)
BM3RHB	SC-E02/G, E03/G, E04/G, E05/G	BZ0LRE22GA	BZ0BPRE22A	1,085


# Combination Starters

## Dimensions

### ■ Dimensions, mm


#### • Combination

#### BM3RHB + SC-E1

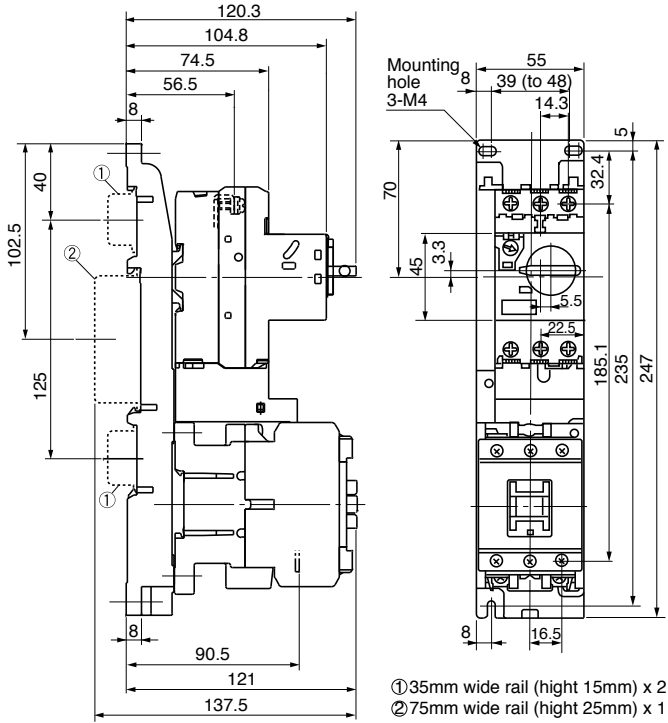


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RHB	SC-E1	BZ0LRE32AA	BZ0BPPE32A	1,155

#### BM3RHB + SC-E1/G

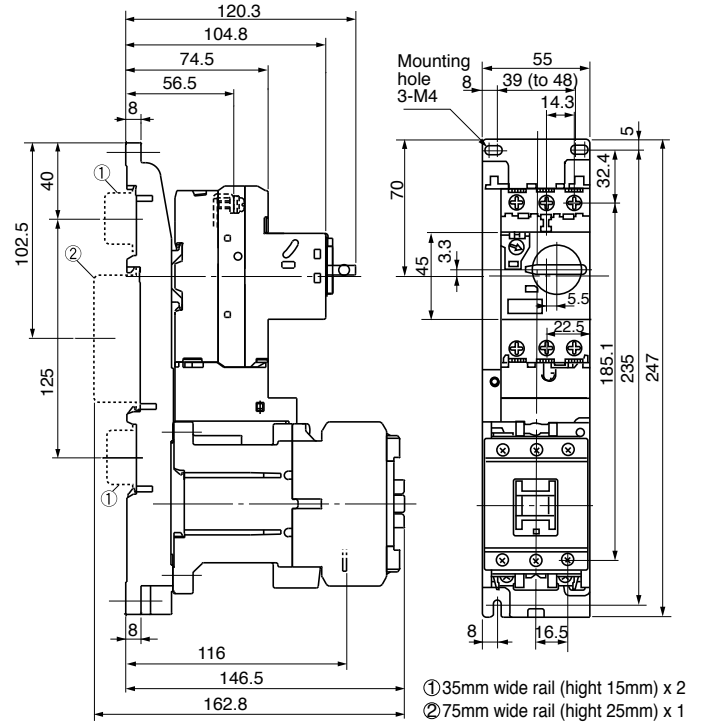


MMS	Contactors	Link module	Base plate	Mass (g)
BM3RHB	SC-E1/G	BZ0LRE32GA	BZ0BPPE32A	1,380

#### BM3V□B + SC-E1, E2, E2S

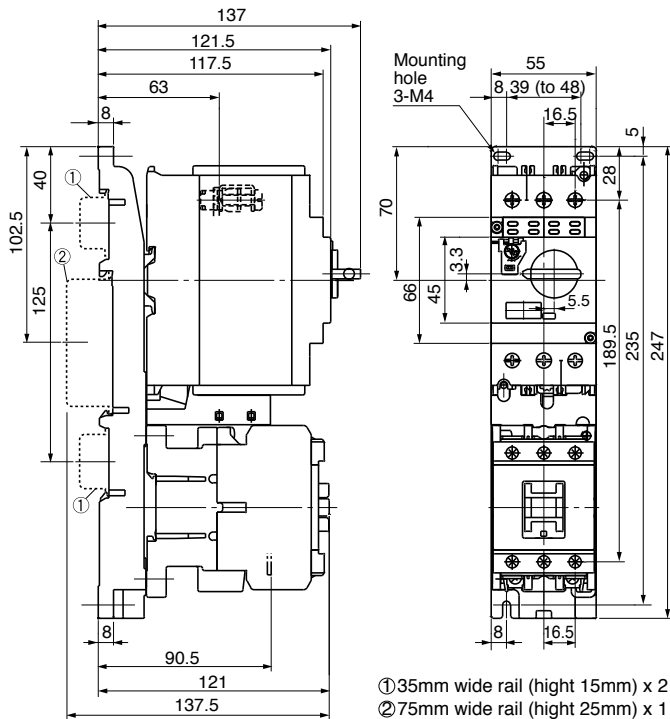

MMS	Contactors	Link module	Base plate	Mass (g)
BM3VSB	SC-E1, E2, E2S	BZ0LVE51AA	BZ0BPVE51A	1,580
BM3VHB				

#### BM3V□B + SC-E1/G, E2/G, E2S/G

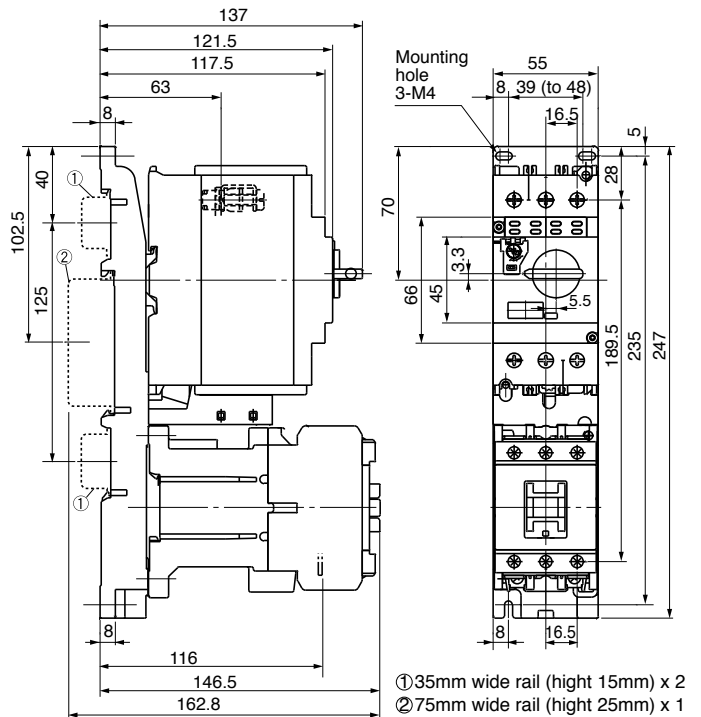


MMS	Contactors	Link module	Base plate	Mass (g)
BM3VSB	SC-E1/G, E2/G, E2S/G	BZ0LVE51GA	BZ0BPVE51A	1,810
BM3VHB				




# Combination Starters Dimensions

## ■ Dimensions, mm

### • Combination BM3V□B + SC-E3

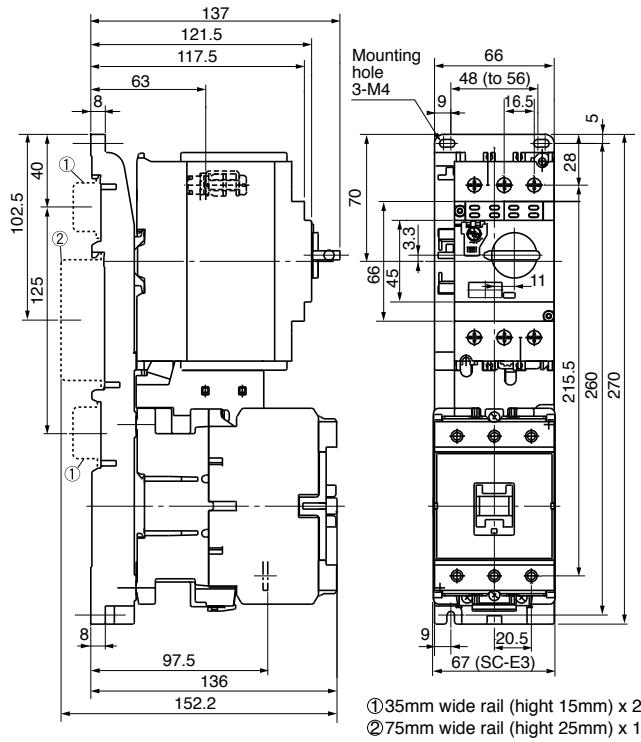

### BM3V□B + SC-E3/G

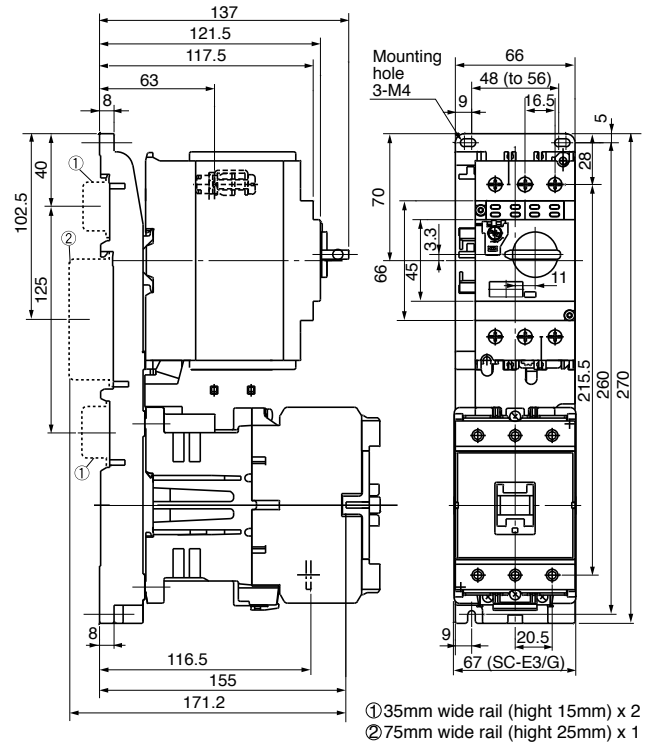

MMS	Contactors	Link module	Base plate	Mass (g)
BM3VSB	SC-E3	BZ0LVE65AA	BZ0BPVE65A	2,080
BM3VHB				

MMS	Contactors	Link module	Base plate	Mass (g)
BM3VSB	SC-E3/G	BZ0LVE65GA	BZ0BPVE65A	2,400
BM3VHB				


# Combination Starters

## Dimensions

### ■ Dimensions, mm


#### • Type F combination

#### BM3RSB + SC-M01, M02, M01/G, M02/G

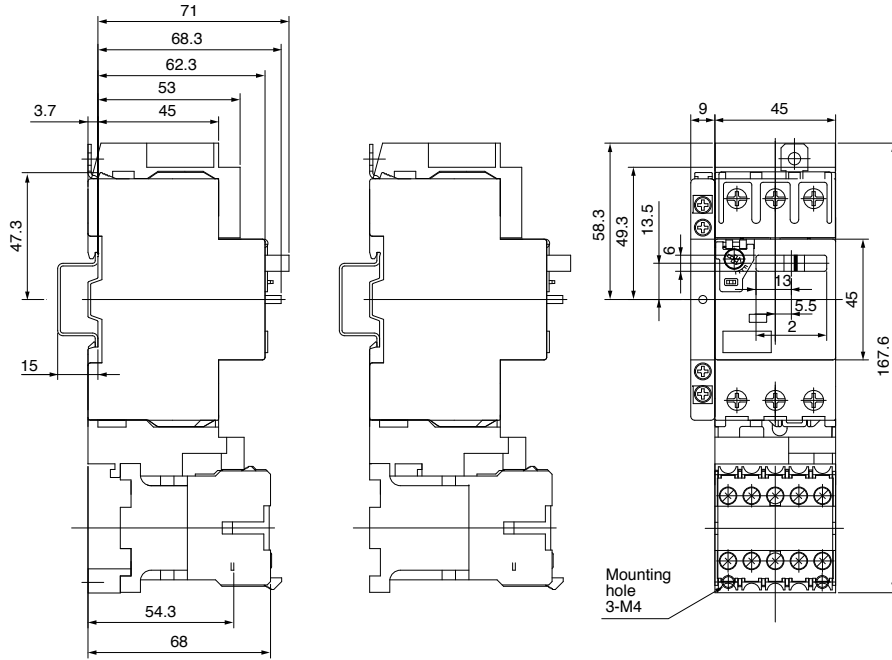

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RSB	SC-M01, M02	BZ0TCRE	BZ0TKUAB	BZ0LRC09AA	-	615
BM3RSB	SC-M01/G, M02/G	BZ0TCRE	BZ0TKUAB	BZ0LRC09AA	-	675

#### BM3RSB + SC-E02 to E05

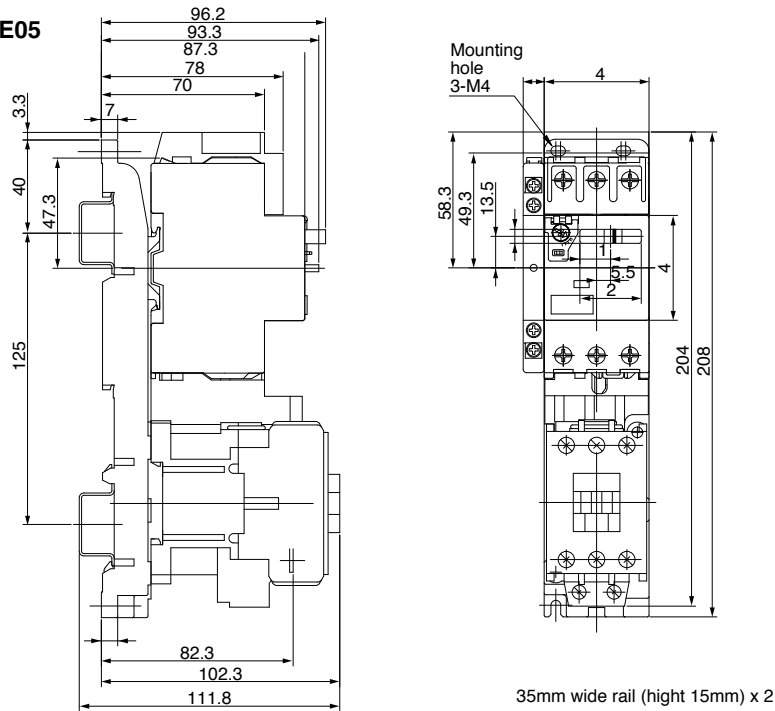


MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RSB	SC-E02, E03, E04, E05	BZ0TCRE	BZ0TKUAB	BZ0LRE22AA	BZ0BPPE22A	895

# Combination Starters Dimensions

## ■ Dimensions, mm


### • Type F combination

#### BM3RSB + SC-E02/G to E05/G

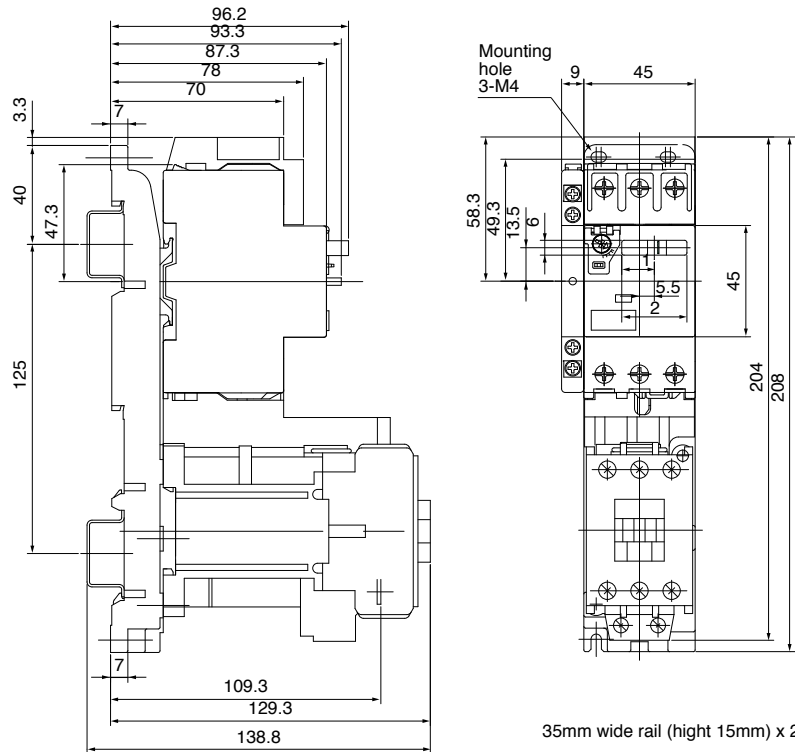

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RSB	SC-E02/G, E03/G, E04/G, E05/G	BZ0TCRE	BZ0TKUAB	BZ0LRE22GA	BZ0BPRES22A	1,160

#### BM3RSB + SC-E1


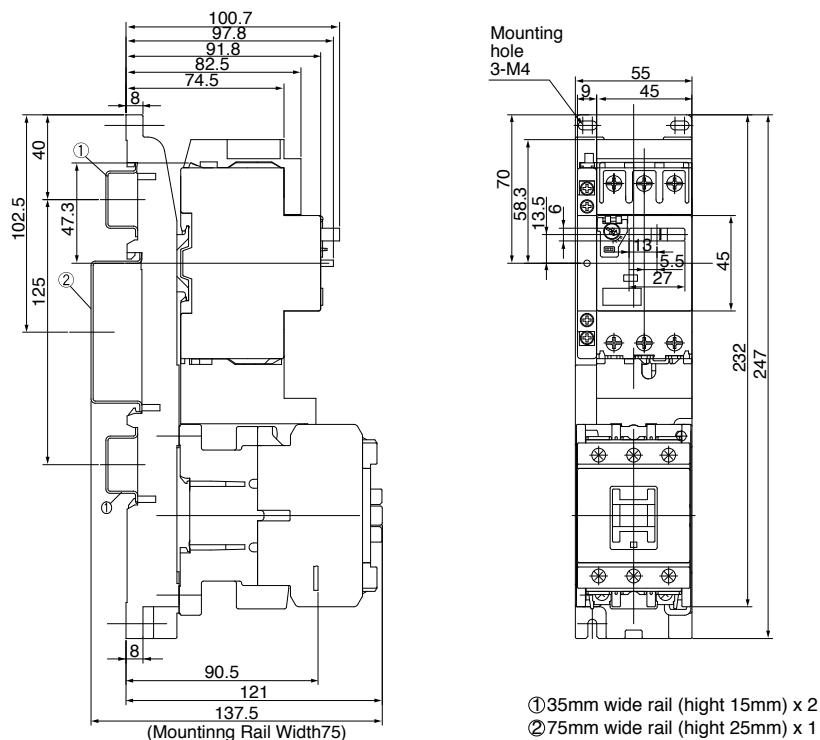


MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RSB	SC-E1	BZ0TCRE	BZ0TKUAB	BZ0LRE32AA	BZ0BPRES32A	1,230

# Combination Starters

## Dimensions


■ Dimensions, mm  
 • Type F combination  
**BM3RSB + SC-E1/G**

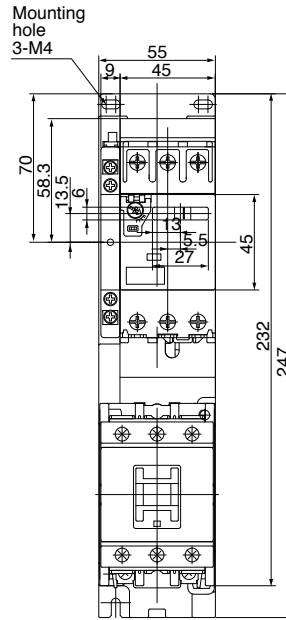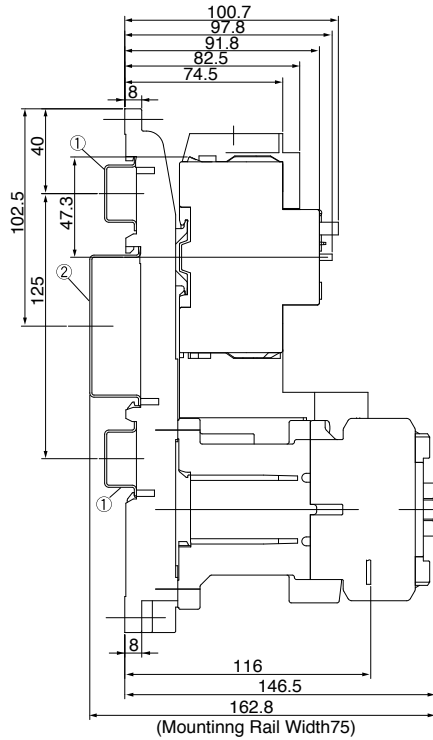

- ① 35mm wide rail (height 15mm) x 2
- ② 75mm wide rail (height 25mm) x 1

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RSB	SC-E1/G	BZ0TCRE	BZ0TKUAB	BZ0LRE32GA	BZ0BPRE32A	1,455

**BM3RHB + SC-M01, M02, M01/G, M02/G**

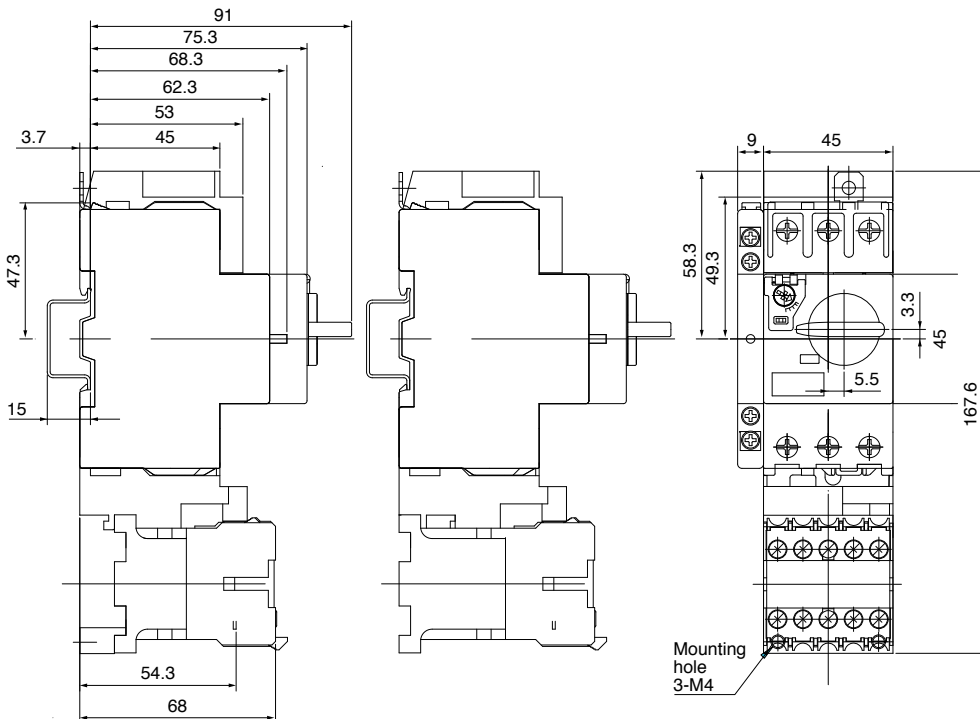


MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RHB	SC-M01, M02	BZ0TCRE	BZ0TKUAB	BZ0LRC09AA	-	635
BM3RHB	SC-M01/G, M02/G	BZ0TCRE	BZ0TKUAB	BZ0LRC09AA	-	695

# Combination Starters Dimensions

## ■ Dimensions, mm


### • Type F combination

#### BM3RHB + SC-E02 to E05

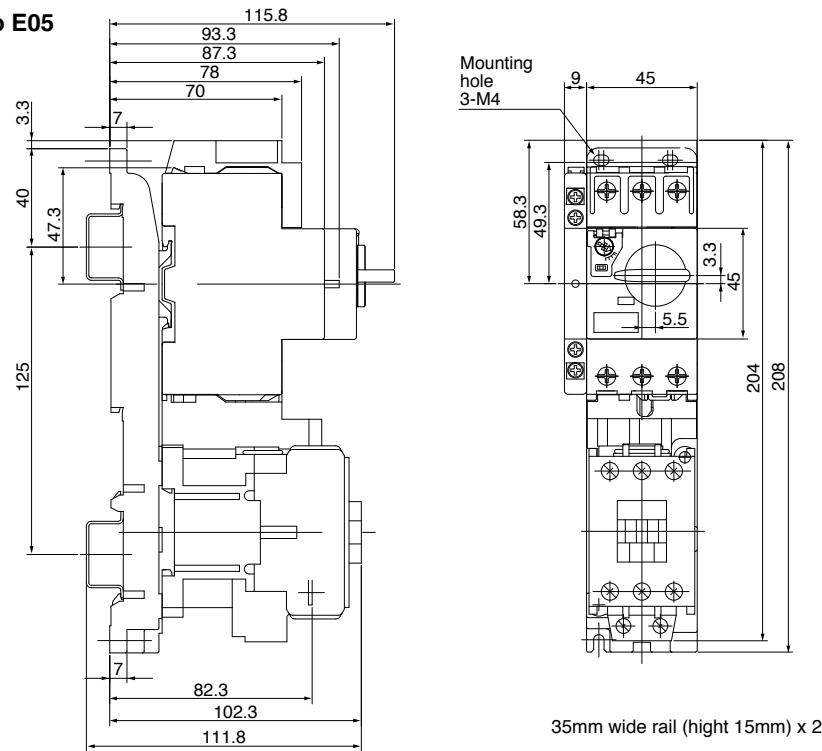

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RHB	SC-E02, E03, E04, E05	BZ0TCRE	BZ0TKUAB	BZ0LRE22AA	BZ0BPRES22A	915

#### BM3RHB + SC-E02/G to E05/G


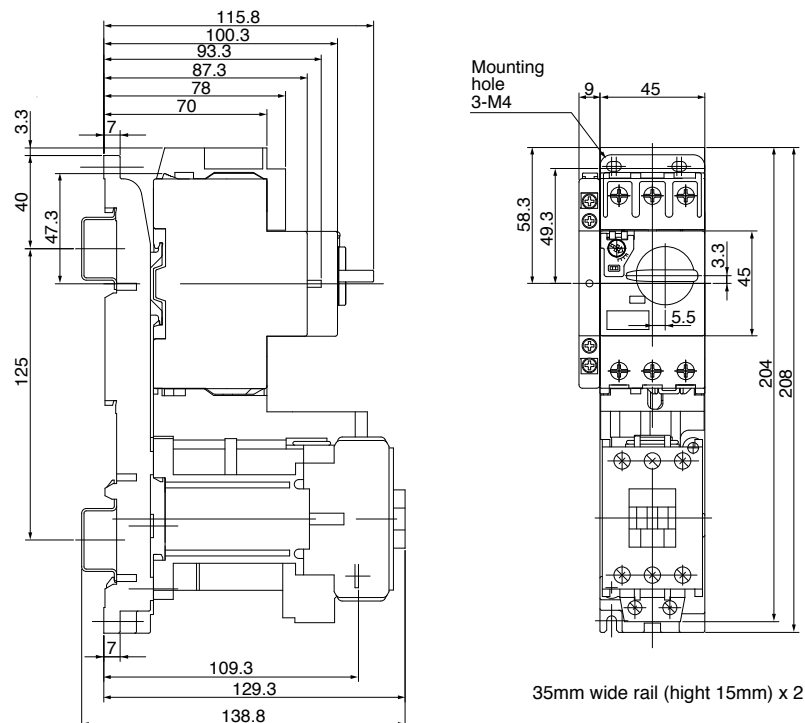


MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RHB	SC-E02/G, E03/G, E04/G, E05/G	BZ0TCRE	BZ0TKUAB	BZ0LRE22GA	BZ0BPRES22A	1,160

# Combination Starters

## Dimensions



■ Dimensions, mm  
 • Type F combination  
**BM3RHB + SC-E1**

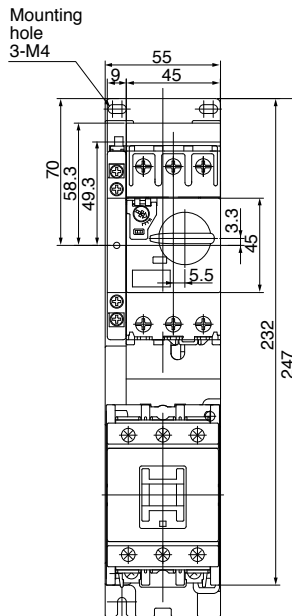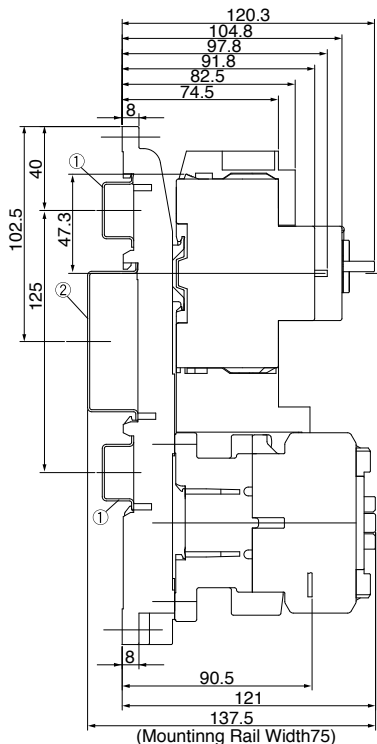

① 35mm wide rail (height 15mm) x 2  
 ② 75mm wide rail (height 25mm) x 1

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RHB	SC-E1	BZ0TCRE	BZ0TKUAB	BZ0LRE32AA	BZ0BPRES2A	1,230

**BM3RHB + SC-E1/G**

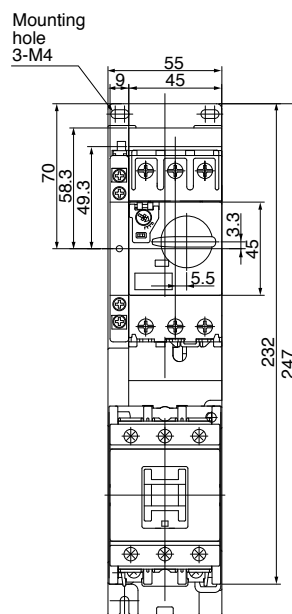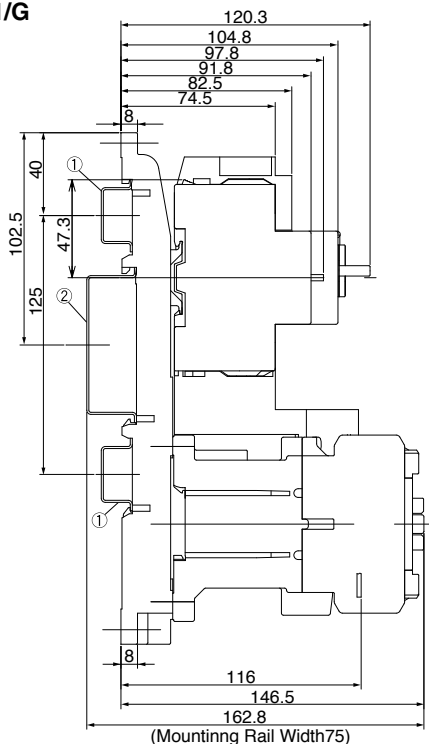

① 35mm wide rail (height 15mm) x 2  
 ② 75mm wide rail (height 25mm) x 1



MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3RHB	SC-E1/G	BZ0TCRE	BZ0TKUAB	BZ0LRE32GA	BZ0BPRES2A	1,455

# Combination Starters Dimensions

## ■ Dimensions, mm

### • Type F combination



#### BM3V□B + SC-E1, E2, E2S

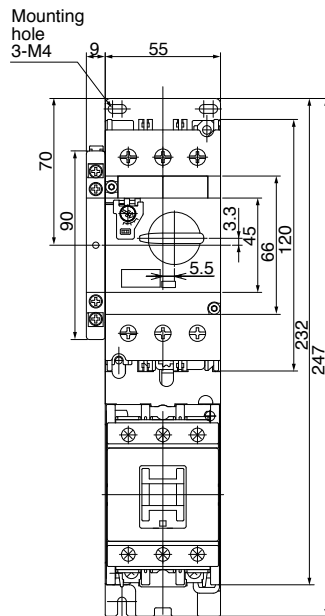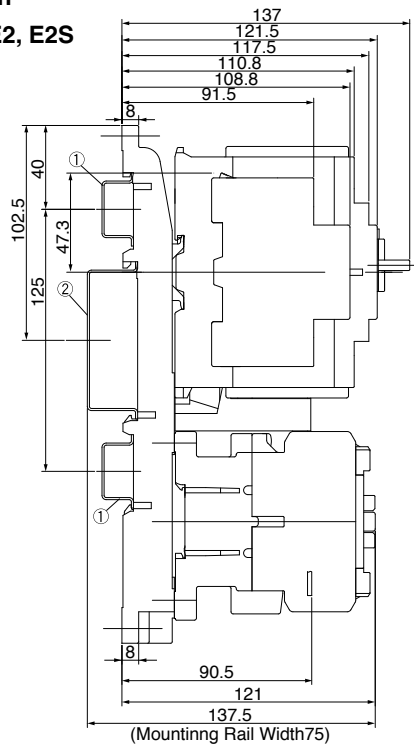

- ① 35mm wide rail (high 15mm) x 2
- ② 75mm wide rail (high 25mm) x 1

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3VSB,VHB	SC-E1,E2,E2S	-	BZ0TKUAB	BZ0LVE51AA	BZ0BPVE51A	1,625

#### BM3V□B + SC-E1/G, E2/G, E2S/G

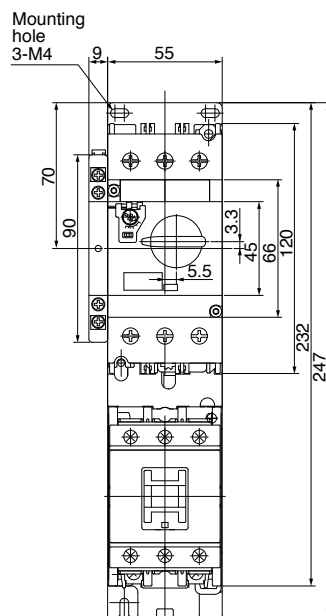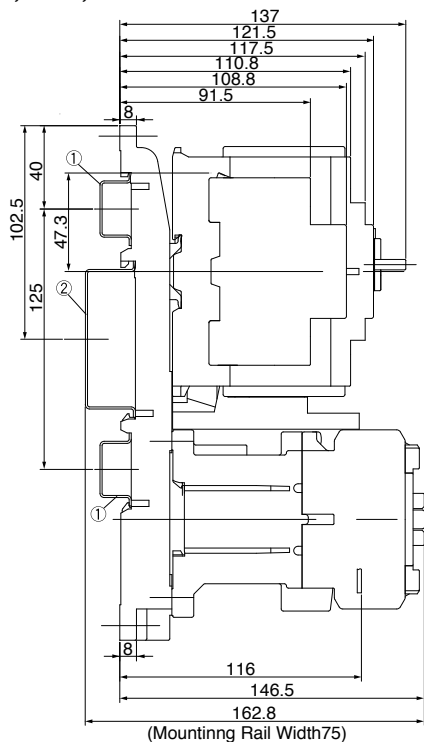



- ① 35mm wide rail (high 15mm) x 2
- ② 75mm wide rail (high 25mm) x 1

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3VSB,VHB	SC-E1/G,E2/G,E2S/G	-	BZ0TKUAB	BZ0LVE51GA	BZ0BPVE51A	1,855

# Combination Starters

## Dimensions



■ Dimensions, mm  
 • Type F combination  
**BM3V□B + SC-E3**

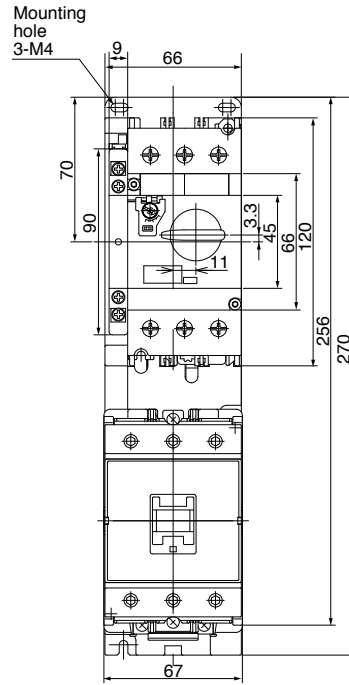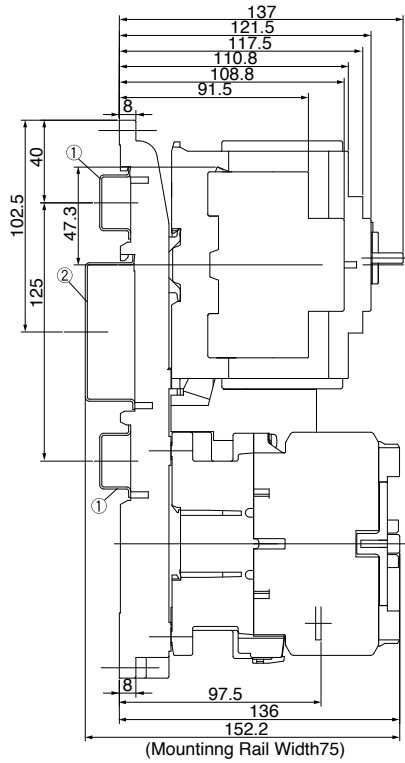

① 35mm wide rail (height 15mm) x 2  
 ② 75mm wide rail (height 25mm) x 1

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3VSB,VHB	SC-E3	-	BZ0TKUAB	BZ0LVE65AA	BZ0BPVE65A	2,125

**BM3V□B + SC-E3/G**

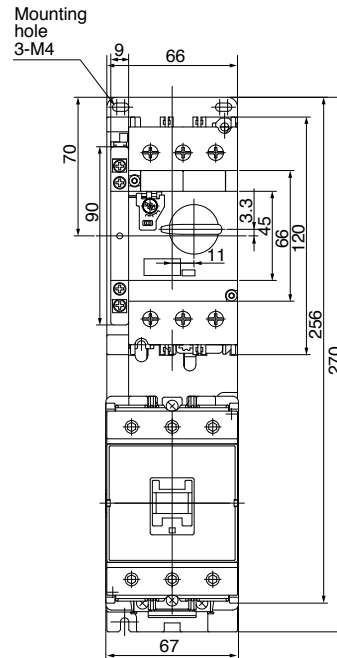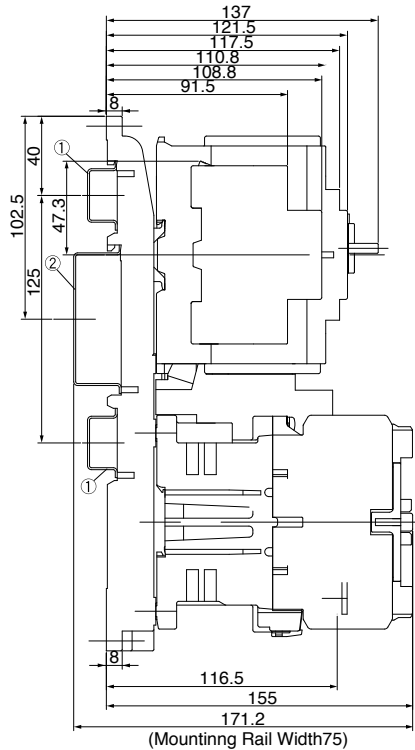

① 35mm wide rail (height 15mm) x 2  
 ② 75mm wide rail (height 25mm) x 1

MMS	Contactors	Line side terminal cover	Short-circuit alarm contact block	Link module	Base plate	Mass (g)
BM3VSB,VHB	SC-E3/G	-	BZ0TKUAB	BZ0LVE65GA	BZ0BPVE65A	2,445



# List Price for BM3 Series Manual Motor Starters

## 32A Frame types

Standard breaking capacity			High breaking capacity		
Part number	Discount code	List Price	Part number	Discount code	List Price
BM3RSB-P16	D14	80.00	BM3RHB-P16	D14	100.00
BM3RSB-P25	D14	80.00	BM3RHB-P25	D14	100.00
BM3RSB-P40	D14	80.00	BM3RHB-P40	D14	100.00
BM3RSB-P63	D14	80.00	BM3RHB-P63	D14	100.00
BM3RSB-001	D14	80.00	BM3RHB-001	D14	100.00
BM3RSB-1P6	D14	80.00	BM3RHB-1P6	D14	100.00
BM3RSB-2P5	D14	80.00	BM3RHB-2P5	D14	100.00
BM3RSB-004	D14	80.00	BM3RHB-004	D14	100.00
BM3RSB-6P3	D14	80.00	BM3RHB-6P3	D14	100.00
BM3RSB-010	D14	90.00	BM3RHB-010	D14	110.00
BM3RSB-013	D14	90.00	BM3RHB-013	D14	110.00
BM3RSB-016	D14	90.00	BM3RHB-016	D14	110.00
BM3RSB-020	D14	90.00	BM3RHB-020	D14	110.00
BM3RSB-025	D14	100.00	BM3RHB-025	D14	120.00
BM3RSB-032	D14	150.00	BM3RHB-032	D14	170.00

## 63A Frame types

Standard breaking capacity			High breaking capacity		
Part number	Discount code	List Price	Part number	Discount code	List Price
BM3VSB-010	D14	170.00	BM3VHB-010	D14	260.00
BM3VSB-013	D14	170.00	BM3VHB-013	D14	260.00
BM3VSB-016	D14	170.00	BM3VHB-016	D14	260.00
BM3VSB-020	D14	170.00	BM3VHB-020	D14	260.00
BM3VSB-025	D14	190.00	BM3VHB-025	D14	290.00
BM3VSB-032	D14	210.00	BM3VHB-032	D14	310.00
BM3VSB-040	D14	210.00	BM3VHB-040	D14	310.00
BM3VSB-050	D14	230.00	BM3VHB-050	D14	330.00
BM3VSB-063	D14	230.00	BM3VHB-063	D14	330.00

# List Price for BM3 Series Manual Motor Starters accessories

Part number	Description	Discount code	List Price
<b>Auxiliary contact block (W)</b>			
BZ0WIA	Front mounting Auxiliary contact - Internal type 1NO	D14	8.50
BZ0WIB	Front mounting Auxiliary contact - Internal type 1NC	D14	8.50
BZ0WUAAAL	Left side mounting Auxiliary contact - Lateral type 2NO	D14	12.00
BZ0WUABL	Left side mounting Auxiliary contact - Lateral type 1NO+1NC	D14	12.00
BZ0WUBBL	Left side mounting Auxiliary contact - Lateral type 2NC	D14	12.00
BZ0WUAAR	Right side mounting Auxiliary contact - Lateral type 2NO	D14	12.00
BZ0WUABR	Right side mounting Auxiliary contact - Lateral type 1NO+1NC	D14	12.00
BZ0WUBBR	Right side mounting Auxiliary contact - Lateral type 2NC	D14	12.00
<b>Alarm contact block (K)</b>			
BZ0KIA	Front (right side only) mounting Alarm contact - Internal type 1NO	D14	9.00
BZ0KIB	Front (right side only) mounting Alarm contact - Internal type 1NC	D14	9.00
<b>Auxiliary and alarm contact blocks (WK)</b>			
BZ0WKUAA	Left side mounting Auxiliary and Alarm contact 1NO(Aux.)+1NO(Alarm)	D14	18.00
BZ0WKUBA	Left side mounting Auxiliary and Alarm contact 1NC(Aux.)+1NO(Alarm)	D14	18.00
BZ0WKUAB	Left side mounting Auxiliary and Alarm contact 1NO(Aux.)+1NC(Alarm)	D14	18.00
BZ0WKUBB	Left side mounting Auxiliary and Alarm contact 1NC(Aux.)+1NC(Alarm)	D14	18.00
<b>Short-circuit alarm contact block (KI)</b>			
BZ0TKUAB	Left side mounting Short Circuit Alarm contact 1NO+1NC	D14	20.00
<b>Shunt trip devices (F)</b>			
BZ0FAZU	Right side mounting Shunt trip / Coil voltage 24VAC 50/60Hz	D14	34.00
BZ0FBZU	Right side mounting Shunt trip / Coil voltage 48VAC 60Hz	D14	34.00
BZ0FCZU	Right side mounting Shunt trip / Coil voltage 48VAC 50Hz / 60VAC 60Hz	D14	34.00
BZ0F1ZU	Right side mounting Shunt trip / Coil voltage 100VAC 50Hz / 100-110VAC 60Hz	D14	34.00
BZ0FDZU	Right side mounting Shunt trip / Coil voltage 110-127VAC 50Hz / 120VAC 60Hz	D14	34.00
BZ0FEZU	Right side mounting Shunt trip / Coil voltage 200VAC 50Hz / 200-220VAC 60Hz	D14	34.00
BZ0FFZU	Right side mounting Shunt trip / Coil voltage 220-230VAC 50Hz / 240-260VAC 60Hz	D14	34.00
BZ0FGZU	Right side mounting Shunt trip / Coil voltage 240VAC 50Hz / 277VAC 60Hz	D14	34.00
BZ0FHZU	Right side mounting Shunt trip / Coil voltage 380-400VAC 50Hz / 400-440VAC 60Hz	D14	34.00
BZ0F4ZU	Right side mounting Shunt trip / Coil voltage 415-440VAC 50Hz / 460-480VAC 60Hz	D14	34.00
BZ0FJZU	Right side mounting Shunt trip / Coil voltage 500VAC 50Hz / 600VAC 60Hz	D14	34.00
BZ0FKZUD	Right side mounting Shunt trip / Coil voltage 24-60VDC	D14	34.00
BZ0FLZUD	Right side mounting Shunt trip / Coil voltage 110-240VDC	D14	34.00
<b>Undervoltage trip devices (R)</b>			
BZ0RAZ1U	Right side mounting Undervoltage trip / Coil voltage 24VAC 50Hz	D14	34.00
BZ0RAZ2U	Right side mounting Undervoltage trip / Coil voltage 24VAC 60Hz	D14	34.00
BZ0RBZ1U	Right side mounting Undervoltage trip / Coil voltage 48VAC 50Hz	D14	34.00
BZ0RBZU	Right side mounting Undervoltage trip / Coil voltage 48VAC 60Hz	D14	34.00
BZ0R1ZU	Right side mounting Undervoltage trip / Coil voltage 100VAC 50Hz / 100-110VAC 60Hz	D14	34.00
BZ0RDZU	Right side mounting Undervoltage trip / Coil voltage 110-127VAC 50Hz / 120VAC 60Hz	D14	34.00
BZ0RZEU	Right side mounting Undervoltage trip / Coil voltage 200VAC 50Hz / 200-220VAC 60Hz	D14	34.00
BZ0RFZU	Right side mounting Undervoltage trip / Coil voltage 220-230VAC 50Hz / 240-260VAC 60Hz	D14	34.00
BZ0RGZU	Right side mounting Undervoltage trip / Coil voltage 240VAC 50Hz / 277VAC 60Hz	D14	34.00
BZ0RHZU	Right side mounting Undervoltage trip / Coil voltage 380-400VAC 50Hz / 400-440VAC 60Hz	D14	34.00
BZ0R4ZU	Right side mounting Undervoltage trip / Coil voltage 415-440VAC 50Hz / 460-480VAC 60Hz	D14	34.00
BZ0RJZU	Right side mounting Undervoltage trip / Coil voltage 500VAC 50Hz / 600VAC 60Hz	D14	34.00
<b>External operating handles</b>			
BZ0VBBL	External operating handle Standard type (Black) for BM3RH	D14	40.00
BZ0VYRL	External operating handle Emergency type (Red / Yellow) for BM3RH	D14	45.00
BZ0VBBM	External operating handle Standard type (Black) for BM3V	D14	40.00
BZ0VYRM	External operating handle Emergency type (Red / Yellow) for BM3V	D14	45.00
<b>Line side terminal cover</b>			
BZ0TCRE	Line side terminal cover for BM3R	D14	18.00
<b>Others</b>			
BZ0SET	Push-in lug for BM3R (10pcs/pack)	D14	8.00
BZ0TCV	IP 20 Terminal cover for BM3V (6pcs/pack)	D14	12.00
BZ0CFG	Dummy cover (10pcs/pack)	D14	40.00

## List Price for BM3 Series Manual Motor Starters accessories

Part number	Description	Discount code	List Price
<b>Busbar system</b>			
<b>BZ0BR02A</b>	Busbar / 2-BM3R, modular space : 45mm	D14	19.00
<b>BZ0BR03A</b>	Busbar / 3-BM3R, modular space : 45mm	D14	23.00
<b>BZ0BR04A</b>	Busbar / 4-BM3R, modular space : 45mm	D14	27.00
<b>BZ0BR05A</b>	Busbar / 5-BM3R, modular space : 45mm	D14	28.00
<b>BZ0BR12A</b>	Busbar / 2-BM3R+1(9mm) external accessory, modular space : 54mm	D14	20.00
<b>BZ0BR13A</b>	Busbar / 3-BM3R+1(9mm) external accessory, modular space : 54mm	D14	24.00
<b>BZ0BR14A</b>	Busbar / 4-BM3R+1(9mm) external accessory, modular space : 54mm	D14	28.00
<b>BZ0BR15A</b>	Busbar / 5-BM3R+1(9mm) external accessory, modular space : 54mm	D14	30.00
<b>BZ0BR22A</b>	Busbar / 2-BM3R+1(18mm) or 2(9mm) external accessories, modular space : 63mm	D14	44.00
<b>BZ0BR24A</b>	Busbar / 4-BM3R+1(18mm) or 2(9mm) external accessories, modular space : 63mm	D14	54.00
<b>BZ0BV02A</b>	Busbar / 2-BM3V, modular space : 55mm	D14	42.00
<b>BZ0BV03A</b>	Busbar / 3-BM3V, modular space : 55mm	D14	53.00
<b>BZ0BV04A</b>	Busbar / 4-BM3V, modular space : 55mm	D14	65.00
<b>BZ0BV12A</b>	Busbar / 2-BM3V+1(9mm) external accessory, modular space : 64mm	D14	46.00
<b>BZ0BV13A</b>	Busbar / 3-BM3V+1(9mm) external accessory, modular space : 64mm	D14	59.00
<b>BZ0BV14A</b>	Busbar / 4-BM3V+1(9mm) external accessory, modular space : 64mm	D14	70.00
<b>BZ0BV22A</b>	Busbar / 2-BM3V+1(18mm) or 2(9mm) external accessories, modular space : 73mm	D14	50.00
<b>BZ0BV24A</b>	Busbar / 4-BM3V+1(18mm) or 2(9mm) external accessories, modular space : 73mm	D14	78.00
<b>BZ0BFRA</b>	3-phase feed-in terminal for BM3R	D14	23.00
<b>BZ0BFVA</b>	3-phase feed-in terminal for BM3V	D14	48.00
<b>BZ0BCRA</b>	Busbar cover for BZ0BR (pin connection)	D14	6.00
<b>BZ0BCRB</b>	Busbar cover for BZ0BR (fork connection)	D14	6.00
<b>BZ0BCVA</b>	Busbar cover for BZ0BV (pin connection)	D14	8.00
<b>Enclosure</b>			
<b>BZ0CSLA</b>	Enclosure Surface mounting type IP41	D14	40.00
<b>BZ0CSLB</b>	Enclosure Surface mounting type IP55 with conversion kits	D14	57.00
<b>BZ0CFLA</b>	Enclosure Flush mounting type IP41	D14	40.00
<b>BZ0CFLB</b>	Enclosure Flush mounting type IP55 with conversion kits	D14	51.00
<b>BZ0CKA</b>	Padlocking device	D14	30.00
<b>BZ0CPM</b>	Emergency pushbutton / Momentary	D14	39.00
<b>BZ0CPL</b>	Emergency pushbutton / Puch-lock turn reset	D14	40.00
<b>BZ0CPK</b>	Emergency pushbutton / Key operated	D14	82.00
<b>BZ0CCA</b>	Conversion kit from IP41 to IP55	D14	12.00
<b>BZ0CUA</b>	Adapter set	D14	11.00
<b>BZ0CNA</b>	Neutral connector	D14	4.00
<b>BZ0CLGA</b>	Indication Lamp / Green, 100-120VAC	D14	33.00
<b>BZ0CLGB</b>	Indication Lamp / Green, 200-240VAC	D14	33.00
<b>BZ0CLGC</b>	Indication Lamp / Green, 380-440VAC	D14	33.00
<b>BZ0CLGD</b>	Indication Lamp / Green, 480-500VAC	D14	33.00
<b>BZ0CLGE</b>	Indication Lamp / Green, 500-600VAC	D14	33.00
<b>BZ0CLRA</b>	Indication Lamp / Red, 100-120VAC	D14	33.00
<b>BZ0CLRB</b>	Indication Lamp / Red, 200-240VAC	D14	33.00
<b>BZ0CLRC</b>	Indication Lamp / Red, 380-440VAC	D14	33.00
<b>BZ0CLRD</b>	Indication Lamp / Red, 480-500VAC	D14	33.00
<b>BZ0CLRE</b>	Indication Lamp / Red, 500-600VAC	D14	33.00
<b>BZ0CLCA</b>	Indication Lamp / Transparent, 100-120VAC	D14	33.00
<b>BZ0CLCB</b>	Indication Lamp / Transparent, 200-240VAC	D14	33.00
<b>BZ0CLCC</b>	Indication Lamp / Transparent, 380-440VAC	D14	33.00
<b>BZ0CLCD</b>	Indication Lamp / Transparent, 480-500VAC	D14	33.00
<b>BZ0CLCE</b>	Indication Lamp / Transparent, 500-600VAC	D14	33.00

# List Price for SC-E Series Contactors and TK-E Series Overload Relays and accessories

## List Price for SC-E Series Contactors and TK-E Series Overload Relays

Contactors			Overload Relays					
AC operating coil			DC operating coil			Overload Relays		
Part number	Discount code	List Price	Part number	Discount code	List Price	Part number	Discount code	List Price
SC-M01	D14	40.00	SC-M01/G	D14	57.00	-	-	-
SC-M02	D14	40.00	SC-M02/G	D14	57.00	-	-	-
SC-E02	D14	33.00	SC-E02/G	D14	38.00	TK-E02	D14	42.00
SC-E03	D14	40.00	SC-E03/G	D14	60.00	TK-E02	D14	42.00
SC-E04	D14	54.00	SC-E04/G	D14	80.00	TK-E02	D14	42.00
SC-E05	D14	65.00	SC-E05/G	D14	94.00	TK-E02	D14	42.00
SC-E1	D14	78.00	SC-E1/G	D14	99.00	TK-E2	D14	80.00
SC-E2	D14	108.00	SC-E2/G	D14	130.00	TK-E2	D14	80.00
SC-E2S	D14	130.00	SC-E2S/G	D14	158.00	TK-E2	D14	80.00
SC-E3	D14	140.00	SC-E3/G	D14	175.00	TK-E3	D14	90.00
SC-E4	D14	160.00	SC-E4/G	D14	200.00	TK-E3	D14	90.00
<b>Super magnet operating coil</b>								
SC-E5	D14	360.00				TK-E5	D14	100.00
SC-E6	D14	460.00				TK-E6	D14	148.00
SC-E7	D14	535.00				TK-E6	D14	148.00
						TK-E6H	D14	148.00

## List Price for SC-E Series Contactors and TK-E Series Overload Relays accessories

Part number	Description	Discount code	List Price
<b>Auxiliary contact block</b>			
SZ-MA40	Front mounting Auxiliary contact block (4NO) for SC-M01(/G), SC-M02(/G)	D14	30.00
SZ-MA31	Front mounting Auxiliary contact block (3NO+1NC) for SC-M01(/G), SC-M02(/G)	D14	30.00
SZ-MA22	Front mounting Auxiliary contact block (2NO+2NC) for SC-M01(/G), SC-M02(/G)	D14	30.00
SZ-MA13	Front mounting Auxiliary contact block (1NO+3NC) for SC-M01(/G), SC-M02(/G)	D14	30.00
SZ-MA04	Front mounting Auxiliary contact block (4NC) for SC-M01(/G), SC-M02(/G)	D14	30.00
SZ-MA20	Front mounting Auxiliary contact block (2NO) for SC-M01(/G), SC-M02(/G)	D14	25.00
SZ-MA11	Front mounting Auxiliary contact block (1NO+1NC) for SC-M01(/G), SC-M02(/G)	D14	25.00
SZ-MA02	Front mounting Auxiliary contact block (2NC) for SC-M01(/G), SC-M02(/G)	D14	25.00
SZ-MAS10	Side mounting Auxiliary contact block (1NO) for SC-M01(/G), SC-M02(/G)	D14	15.00
SZ-MAS01	Side mounting Auxiliary contact block (1NC) for SC-M01(/G), SC-M02(/G)	D14	15.00
SZ-A40/T	Front mounting Auxiliary contact block (4NO) for SC-E02(/G) to SC-E4(/G)	D14	20.00
SZ-A31/T	Front mounting Auxiliary contact block (3NO+1NC) for SC-E02(/G) to SC-E4(/G)	D14	20.00
SZ-A22/T	Front mounting Auxiliary contact block (2NO+2NC) for SC-E02(/G) to SC-E4(/G)	D14	20.00
SZ-A20/T	Front mounting Auxiliary contact block (2NO) for SC-E02(/G) to SC-E4(/G)	D14	14.00
SZ-A11/T	Front mounting Auxiliary contact block (1NO+1NC) for SC-E02(/G) to SC-E4(/G)	D14	14.00
SZ-A02/T	Front mounting Auxiliary contact block (2NC) for SC-E02(/G) to SC-E4(/G)	D14	14.00
SZ-AS1/T	Side mounting Auxiliary contact block (1NO+1NC) for SC-E02(/G) to SC-E4(/G)	D14	22.00
SZ-AS2/T	Side mounting Auxiliary contact block (1NO+1NC) for SC-E5 to SC-E7	D14	22.00
<b>Main circuit surge suppression unit</b>			
SZ-ZM1E	Front mounting Main circuit surge suppression unit for SC-E02(/G) to SC-E05(/G)	D14	38.00
SZ-ZM2E	Side mounting Main circuit surge suppression unit for SC-E02(/G) to SC-E05(/G)	D14	38.00
SZ-ZM3E	Front mounting Main circuit surge suppression unit for SC-E1(/G) to SC-E4(/G)	D14	40.00
SZ-ZM4E	Side mounting Main circuit surge suppression unit for SC-E1(/G) to SC-E4(/G)	D14	40.00

# List Price for SC-E Series Contactors and TK-E Series Overload Relays accessories

## List Price for SC-E Series Contactors and TK-E Series Overload Relays accessories

Part number	Description	Discount code	List Price
<b>Coil surge suppression unit</b>			
SZ-MZ1	Coil surge suppression unit CR type 12-60VAC for SC-M01, SC-M02	D14	5.00
SZ-MZ2	Coil surge suppression unit CR type 72-250VAC for SC-M01, SC-M02	D14	5.00
SZ-MZ3	Coil surge suppression unit Diode type 6-250VDC for SC-M01/G, SC-M02/G	D14	5.00
SZ-Z1	Coil surge suppression unit Varistor type 24-48VAC/DC for SC-E02(/G) to SC-E05(/G)	D1	13.00
SZ-Z2	Coil surge suppression unit Varistor type 100-250VAC/DC for SC-E02(/G) to SC-E05(/G)	D1	13.00
SZ-Z3	Coil surge suppression unit Varistor type 380-440VAC/DC for SC-E02 to SC-E05	D1	13.00
SZ-Z6	Coil surge suppression unit Varistor type 24-48VAC/DC with LED for SC-E02(/G) to SC-E05(/G)	D1	17.00
SZ-Z7	Coil surge suppression unit Varistor type 100-250VAC/DC with LED for SC-E02(/G) to SC-E05(/G)	D1	17.00
SZ-Z31	Coil surge suppression unit Varistor type 24-48VAC/DC for SC-E1(/G) to SC-E4(/G)	D1	22.00
SZ-Z32	Coil surge suppression unit Varistor type 100-250VAC/DC for SC-E1(/G) to SC-E4(/G)	D1	22.00
SZ-Z33	Coil surge suppression unit Varistor type 380-440VAC/DC for SC-E1 to SC-E4	D1	22.00
SZ-Z4	Coil surge suppression unit CR type 24-48VAC/DC for SC-E02(/G) to SC-E05(/G)	D1	13.00
SZ-Z5	Coil surge suppression unit CR type 100-250VAC/DC for SC-E02(/G) to SC-E05(/G)	D1	13.00
SZ-Z8	Coil surge suppression unit CR type 24-48VAC/DC with LED for SC-E02(/G) to SC-E05(/G)	D1	17.00
SZ-Z9	Coil surge suppression unit CR type 100-250VAC/DC with LED for SC-E02(/G) to SC-E05(/G)	D1	17.00
SZ-Z34	Coil surge suppression unit CR type 24-48VAC/DC for SC-E1 to SC-E4	D1	23.00
SZ-Z35	Coil surge suppression unit CR type 100-250VAC/DC for SC-E1 to SC-E4	D1	23.00
SZ-Z36	Coil surge suppression unit CR type 24-48VAC/DC for SC-E1/G to SC-E4/G	D1	23.00
SZ-Z37	Coil surge suppression unit CR type 100-250VAC/DC for SC-E1/G to SC-E4/G	D1	23.00
<b>Power connection kit for reversing</b>			
SZ-MRWC	Power connection kit for reversing line side and load side for SC-M01(/G), SC-M02(/G)	D14	18.00
SZ-ERW1/A	Power connection kit for reversing line side for SC-E02(/G) to SC-E05(/G)	D14	10.00
SZ-ERW1/B	Power connection kit for reversing load side for Reversing Contactor SC-E02(/G) to SC-E05(/G)	D14	10.00
SZ-ERW1/D	Power connection kit for reversing load side for Reversing Motor Starter SC-E02(/G) to SC-E05(/G)	D14	10.00
SZ-ERW2/A	Power connection kit for reversing line side for SC-E1(/G) to SC-E2S(/G)	D14	20.00
SZ-ERW2/B	Power connection kit for reversing load side for Reversing Contactor SC-E1(/G) to SC-E2S(/G)	D14	20.00
SZ-ERW2/D	Power connection kit for reversing load side for Reversing Motor Starter SC-E1(/G) to SC-E2S(/G)	D14	20.00
SZ-ERW3/A	Power connection kit for reversing line side for SC-E3(/G) to SC-E4(/G)	D14	40.00
SZ-ERW3/B	Power connection kit for reversing load side for Reversing Contactor SC-E3(/G) to SC-E4(/G)	D14	40.00
SZ-ERW3/D	Power connection kit for reversing load side for Reversing Motor Starter SC-E3(/G) to SC-E4(/G)	D14	40.00
<b>Mechanical interlock unit</b>			
SZ-MRM	Mechanical interlock unit for SC-M01(/G), SC-M02(/G)	D14	4.00
SZ-RM	Mechanical interlock unit for SC-E02(/G) to SC-E4(/G)	D1	20.00
<b>Replacement coil</b>			
4NC0H-#MC	Replacement coil for SC-E02 to SC-E05 (# : operating coil voltage code)	D1	30.00
SZ-GM/N1-#	Replacement coil for SC-E1 to SC-E2S (# : operating coil voltage code)	D1	30.00
SZ-GM/N2S-#	Replacement coil for SC-E3 to SC-E4 (# : operating coil voltage code)	D1	31.00
SZ-GS/N5-#	Replacement coil for SC-E5 (# : operating coil voltage code)	D1	250.00
SZ-GS/N6-#	Replacement coil for SC-E6 to SC-E7 (# : operating coil voltage code)	D1	276.00
<b>Base unit for separate mounting</b>			
SZ-HCE	Separate mounting base unit for TK-E02	D14	10.00
SZ-HDE	Separate mounting base unit for TK-E2	D14	20.00
SZ-HEE	Separate mounting base unit for TK-E3	D14	25.00
<b>Trip indicator</b>			
SZ-L100	Trip indicator 100-110VAC for TK-E02	D1	15.00
SZ-L200	Trip indicator 200-220VAC for TK-E02	D1	15.00
SZ-L100N2	Trip indicator 100-110VAC for TK-E2 to TK-E6	D1	15.00
SZ-L200N2	Trip indicator 100-110VAC for TK-E2 to TK-E6	D1	15.00
<b>Reset release button</b>			
SZ-R1	Reset release button 300mm for TK-E02	D1	96.00
SZ-R2	Reset release button 500mm for TK-E02	D1	112.00
SZ-R3	Reset release button 700mm for TK-E02	D1	127.00
SZ-R4	Reset release button 300mm for TK-E2 to TK-E6	D1	100.00
SZ-R5	Reset release button 500mm for TK-E2 to TK-E6	D1	120.00
SZ-R6	Reset release button 700mm for TK-E2 to TK-E6	D1	135.00
<b>Dial cover</b>			
SZ-DA	Dial cover for TK-E02 to TK-E6	D1	2.00

## List Price for Combination Starters accessories

Part number	Description	Discount code	List Price
<b>BZ0LRC09AA</b>	Link module for BM3R and SC-M01(/G), SC-M02(/G)	D14	15.00
<b>BZ0LRE22AA</b>	Link module for BM3R and SC-E02 to SC-E05	D14	15.00
<b>BZ0LRE22GA</b>	Link module for BM3R and SC-E02/G to SC-E05/G	D14	20.00
<b>BZ0LRE32AA</b>	Link module for BM3R and SC-E1	D14	18.00
<b>BZ0LRE32GA</b>	Link module for BM3R and SC-E1/G	D14	20.00
<b>BZ0LVE51AA</b>	Link module for BM3V and SC-E1 to E2S	D14	18.00
<b>BZ0LVE51GA</b>	Link module for BM3V and SC-E1/G to E2S/G	D14	22.00
<b>BZ0LVE65AA</b>	Link module for BM3V and SC-E3	D14	24.00
<b>BZ0LVE65GA</b>	Link module for BM3V and SC-E3/G	D14	28.00
<b>Base plates</b>			
<b>BZ0BPRE22A</b>	Base plate for BM3R and SC-E02(/G) to SC-E05(/G)	D14	22.00
<b>BZ0BPRE32A</b>	Base plate for BM3R and SC-E1(/G)	D14	24.00
<b>BZ0BPVE51A</b>	Base plate for BM3V and SC-E1(/G) to SC-E2S(/G)	D14	26.00
<b>BZ0BPVE65A</b>	Base plate for BM3V and SC-E3(/G)	D14	30.00

## Appendix 1 : Construction of combination motor controllers

The UL508 standard defines 6 categories depending on the construction type for the combination motor controllers. The type and component function is shown below.

Type	Component	Component standard	Component function per NEC			
			Disconnect	Branch circuit protection	Motor control	Motor overload
A	Manual disconnect	UL98,UL1087	X			
	Fuse	UL248		X		
	Magnetic	UL508			X	
	Overload relay	UL508				X
B	Manual disconnect	UL98,UL1087	X			
	Motor short-circuit Protector	UL508		X		
	Magnetic	UL508			X	
C	Inverse time Circuit Breaker	UL489	X	X		
	Magnetic	UL508			X	
	Overload relay	UL508				X
D	Instantaneous Circuit Breaker	UL489	X	X		
	Magnetic	UL508			X	
	Overload relay	UL508				X
E	Self-Protected control device	UL508	X	X	X	X
F	Manual Self-protected combination motor controller	UL508	X	X		X
	Magnetic	UL508			X	

Fuji MMS is indicated on the label with "Manual Self-Protected Combination Motor Controller" (TYPE E) and "Combination Motor Controller" (TYPE F).

## Appendix 2 : Short circuit coordination comparison

UL508 (Part IV, Combination Motor Controllers) and IEC60947-4-1 are the two major standards concerning the combination of the MMS and the Contactor. In IEC60947-4-1, it only regulates the short-circuit protective coordination between the Contactor and the Circuit Breaker. However, in UL508, it takes the combination of the MMS and Contactor as a united component and requires additional performances besides the short-circuit test.

UL standard is available for another standard related short circuit coordination, that is **UL subject 508E**.

(IEC type "2" Coordination Short Circuit Tests of Electromagnetic Motor Controllers in accordance with IEC Publication 947-4-1)

UL subject 508E is to certify that the coordination between the MMS and Contactor comply with IEC60947-4-1 type 2 requirements.

Fuji combination Starters are also cUL listed UL subject 508E, which means that it conforms to both UL and IEC regulation for short-circuit coordination.

Test	UL508 Type F	IEC60947-4-1		UL subject 508E
		Type 1	Type 2	
Short-Circuit Coordination	X  - The contactor may be damaged - It may not be suitable for further service without repair or replacement.	X  - The contactor may be damaged - It may not be suitable for further service without repair or replacement.	X  - No damage except light welding of the contacts of the contactor. - It shall be suitable for further use.	X  - No damage except light welding of the contacts of the contactor. - It shall be suitable for further use.
Current withstand	X	-	-	-
Dielectric voltage withstand	X	X	X	X
Calibration	X	-	X	X
Temperature	X	-	-	-
Effective region	North America	Europe	Europe	North America

Coordination details between MMS and Contactor as UL508 Type F, please see page 56, 57, as UL subject 508E, please see page 79, 80.

# Appendix

## • BM3RSB, BM3RHB (UL subject E coordination)

220-240V AC		440-480V AC		MMS part number		Contactor part number	Link module	Base plate	Short-circuit ratings at 480V AC (kA)		
HP rating (HP)	Rated current (A)	HP rating (HP)	Rated current (A)	Part number	Current range (A)				for BM3RSB	for BM3RHB	
-	-	-	-	<b>BM3RSB-P16</b>	<b>BM3RHB-P16</b>	0.1-0.16	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA	- BZ0BPRES22A BZ0BPRES22A	50	50
-	-	-	-	<b>BM3RSB-P25</b>	<b>BM3RHB-P25</b>	0.16-0.25	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA	- BZ0BPRES22A BZ0BPRES22A	50	50
-	-	-	-	<b>BM3RSB-P40</b>	<b>BM3RHB-P40</b>	0.25-0.4	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA	- BZ0BPRES22A BZ0BPRES22A	50	50
-	-	-	-	<b>BM3RSB-P63</b>	<b>BM3RHB-P63</b>	0.4-0.63	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA	- BZ0BPRES22A BZ0BPRES22A	50	50
-	-	-	-	<b>BM3RSB-001</b>	<b>BM3RHB-001</b>	0.63-1	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA	- BZ0BPRES22A BZ0BPRES22A	50	50
-	-	3/4	1.6	<b>BM3RSB-1P6</b>	<b>BM3RHB-1P6</b>	1-1.6	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA	- BZ0BPRES22A BZ0BPRES22A	50	50
1/2	2.2	1	2.1	<b>BM3RSB-2P5</b>	<b>BM3RHB-2P5</b>	1.6-2.5	<b>SC-M01, M01/G</b> <b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRC09AA BZ0LRE22AA BZ0LRE22GA	- BZ0BPRES22A BZ0BPRES22A	50	50
3/4	3.2	2	3.4	<b>BM3RSB-004</b>	<b>BM3RHB-004</b>	2.5-4	<b>SC-E02</b> <b>SC-E02/G</b>	BZ0LRE22AA BZ0LRE22GA	BZ0BPRES22A BZ0BPRES22A	50	50
1-1/2	6	3	4.8	<b>BM3RSB-6P3</b>	<b>BM3RHB-6P3</b>	4-6.3	<b>SC-E04</b> <b>SC-E04/G</b>	BZ0LRE22AA BZ0LRE22GA	BZ0BPRES22A BZ0BPRES22A	50	50
3	9.6	5	7.6	-	<b>BM3RHB-010</b>	6.3-10	<b>SC-E04</b> <b>SC-E04/G</b>	BZ0LRE22AA BZ0LRE22GA	BZ0BPRES22A BZ0BPRES22A	-	50
3	9.6	7-1/2	11	-	<b>BM3RHB-013</b>	10-13	<b>SC-E05</b> <b>SC-E05/G</b>	BZ0LRE22AA BZ0LRE22GA	BZ0BPRES22A BZ0BPRES22A	-	50
5	15.2	10	14	-	<b>BM3RHB-016</b>	11-16	<b>SC-E05</b> <b>SC-E05/G</b>	BZ0LRE22AA BZ0LRE22GA	BZ0BPRES22A BZ0BPRES22A	-	50
5	15.2	10	14	-	<b>BM3RHB-020</b>	14-20	<b>SC-E05</b> <b>SC-E05/G</b>	BZ0LRE22AA BZ0LRE22GA	BZ0BPRES22A BZ0BPRES22A	-	50
7-1/2	22	15	21	-	<b>BM3RHB-025</b>	18-25	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LRE32AA BZ0LRE32GA	BZ0BPRES32A BZ0BPRES22A	-	50
10	28	20	27	-	<b>BM3RHB-032</b>	24-32	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LRE32AA BZ0LRE32GA	BZ0BPRES32A BZ0BPRES22A	-	50



• **BM3VSB, BM3VHB (UL subject E coordination)**

220-240V AC		440-480V AC		MMS part number			Contactor part number	Link module	Base plate	Short-circuit ratings at 480V AC (kA)	
HP rating (HP)	Rated current (A)	HP rating (HP)	Rated current (A)	Part number		Current range (A)				for BM3VSB	for BM3VHB
3	9.6	5	7.6	<b>BM3VSB-010</b>	<b>BM3VHB-010</b>	6.3-10	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	50
3	9.6	7-1/2	11	<b>BM3VSB-013</b>	<b>BM3VHB-013</b>	10-13	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	50
5	15.2	10	14	<b>BM3VSB-016</b>	<b>BM3VHB-016</b>	11-16	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	50
5	15.2	10	14	<b>BM3VSB-020</b>	<b>BM3VHB-020</b>	14-20	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	50
7-1/2	22	15	21	<b>BM3VSB-025</b>	<b>BM3VHB-025</b>	18-25	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	50
10	28	20	27	<b>BM3VSB-032</b>	<b>BM3VHB-032</b>	24-32	<b>SC-E1</b> <b>SC-E1/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	50
10	28	30	40	<b>BM3VSB-040</b>	<b>BM3VHB-040</b>	28-40	<b>SC-E2</b> <b>SC-E2/G</b>	BZ0LVE51AA BZ0LVE51GA	BZ0BPVE51A BZ0BPVE51A	25	50

## ■ TERMS AND CONDITIONS OF SALE

### **Prices**

All prices are subject to change without notice. In the event of a price change, the effective date of the change will be the date on the new price or discount schedule sheet.

All quotations made or orders accepted after the effective date will be based on the new prices.

### **Quotations**

Written quotations are valid for 30 days from its date unless otherwise stated in the quotation. Verbal quotations expire the same day they are made.

### **Taxes**

The price does not include any taxes. Buyer shall be responsible for the payment of all applicable taxes.

### **Terms of payment**

Terms of payment will be listed on the quotations.

### **Minimum orders**

Orders amounting to less than \$150.00 net per order will be charged a \$50.00 handling fee.

### **Delivery**

Delivery of products shall be FOB point of origin in the U.S. Seller shall determine the point of origin of shipment. All shipping and other charges shall be paid by Buyer.

### **Packing**

Prices include standard domestic packing. Additional special packing costs required for export or by Buyer's request will be charged to Buyer.

### **Weight and Dimensions**

The weight and dimensions of products described in this catalog are the best information available at the time of going to press. As Seller follows a policy of continuous product improvement, design changes may make this information obsolete. Information in this catalog is subject to change without notice.

### **Inspection and acceptance of products**

Buyer is responsible for evaluating received products for final acceptance. All claims for shortage must be made within thirty (30) days of receipt of products.

### **Return / Cancellation**

No product shall be returned or canceled unless return/order cancel authorization has been secured from Seller. All returns/cancellations must comply with Seller's then current Return / Cancellation policy.

### **Risk of Loss**

Risk of loss or damage to the product shall pass to Buyer at the FOB point.

### **Catalog Disclaimer**

The information contained in this catalog does not constitute an express or implied warranty of quality, any warranty of merchantability of fitness for a particular purpose is hereby disclaimed. Since the Buyer's product information, specific use application, and conditions of use are all outside of Seller's control, it shall be the responsibility of the Buyer to determine the suitability of any of the products mentioned for the Buyer's application.

## ONE YEAR LIMITED WARRANTY

The products identified in this catalog shall be sold pursuant to the terms and conditions identified in the Conditions of Sale issued by Fuji Electric with each order confirmation. Except to the extent otherwise provided for in the Conditions of Sale issued by Fuji Electric, Fuji Electric warrants that the Fuji Electric products identified in this catalog shall be free from significant defects in materials and workmanship provided the products have not been: (1) repaired or altered by others than Fuji Electric; (2) subjected to negligence, accident, misuse, or damage by circumstances beyond Fuji Electric's control; (3) improperly operated, maintained or stored; or (4) used in other than normal use or service. This warranty shall apply only to defects appearing within one (1) year from the date of shipment by Fuji Electric, and in such case, only if such defects are reported to Fuji Electric within thirty (30) days of discovery by purchaser.

Such notice should be submitted in writing to Fuji Electric at Park 80 West, Plaza II, Saddle Brook, NJ 07663. The sole and exclusive remedy with respect to the above warranty whether such claim is based on warranty, contract, negligence, strict liability or any other theory, is limited to

the repair or replacement of such product or, at Fuji Electric's option, reimbursement by Fuji Electric of the purchase price paid to Fuji Electric for the particular product.

***FUJI ELECTRIC DOES NOT MAKE ANY OTHER REPRESENTATIONS OR WARRANTIES, WHETHER ORAL OR IN WRITING, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY REGARDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.***

Except as provided in the Conditions of Sale, no agent or representative of Fuji Electric is authorized to modify the terms of this Warranty in writing or orally.

In no event shall Fuji Electric be liable for special, indirect or consequential damages, including but not limited to, loss of use of the product, other equipment, plant, power system, loss of profits or revenues, cost of capital, or claims against the purchaser or user by its customers resulting from the use of information, recommendations and descriptions contained herein. Purchaser agrees to pass on to its customers and users, in writing at the time inquiries and orders are received by buyer, Fuji Electric's warranty as set forth above.

Your local authorized stocking distributor is:

**Fuji Electric FA Components  
& Systems Co., Ltd.**

Mitsui Sumitomo Bank Ningyo-cho Bldg., 5-7  
Nihonbashi Odemma-cho, Chuo-ku, Tokyo 103-0011, Japan  
Phone: +81-3-5847-8044  
Fax: +81-3-5847-8172  
Website: [www.fujielectric.co.jp/fcs](http://www.fujielectric.co.jp/fcs)

**Fuji Electric Corp.  
of America**

Park 80 West Plaza II  
Saddle Brook, NJ 07663  
Phone: 201-712-0555  
Fax: 201-368-8258  
Website: [www.fujielectric.com](http://www.fujielectric.com)

**INFORMATION IN THIS CATALOG IS SUBJECT TO CHANGE WITHOUT NOTICE.**